
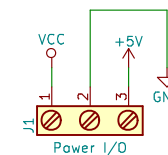
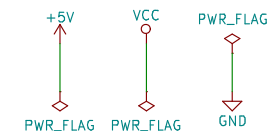


A different R1 might be needed,
depending on the particular
Zener diode used.
I had to use 2.2k, for instance.

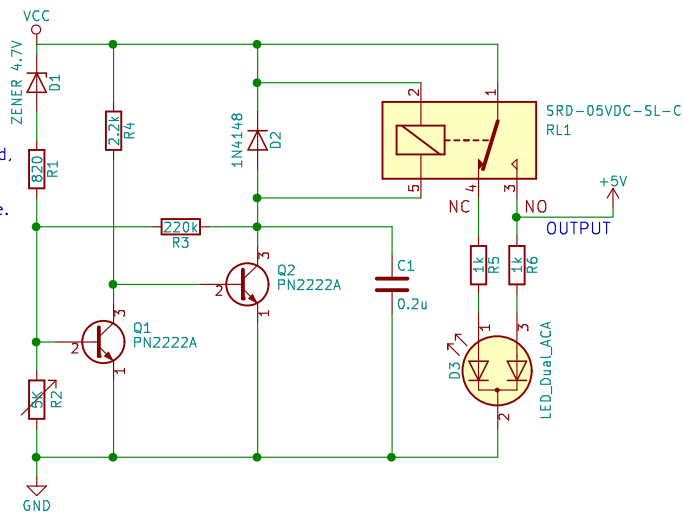

<http://personalpages.tds.net/~rcarlsen/cbm/c64/SAVER/saver%20schematic.jpg>
Original circuit by Ray Carlsen CET – Carlsen Electronics

SukkoPera

Sheet: /

File: OpenC64Saver.sch

Title: Open C64 Saver

Size: A4 Date: 2018-01-04

KiCad E.D.A. kicad 4.0.7

Rev: 3

Id: 1/1