



Simple Small Bedroom Clock v1

This is the Bottom Layer of the PCB, 1:1 ready for toner transfer or photo etching. This layer is NOT mirrored! :)

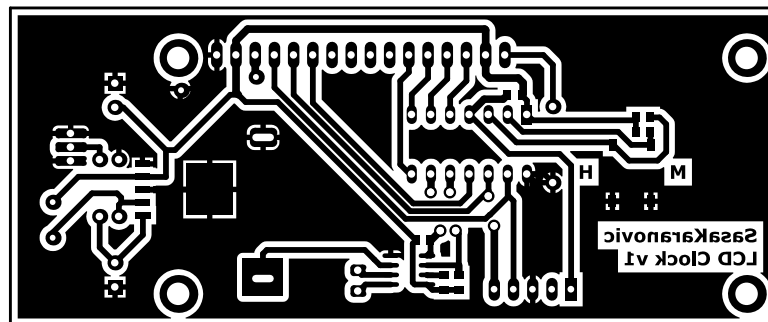


Simple Small Bedroom Clock v1

This is the Bottom Layer of the PCB in color without silkscreen

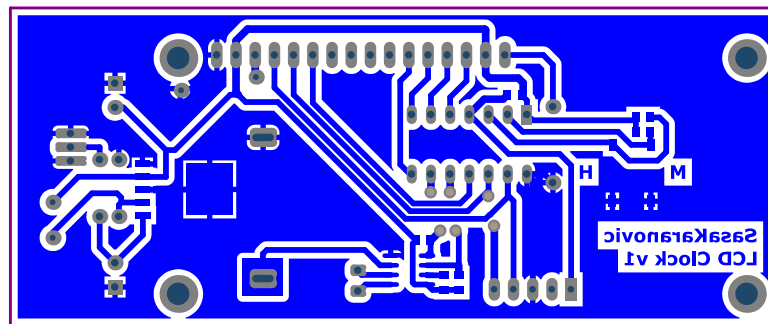


Simple Small Bedroom Clock v1

This is the Bottom Layer of the PCB 1:1 with silkscreen on.
Both Top and Bottom layer silkscreen are turned on so
you can see where components should be placed.

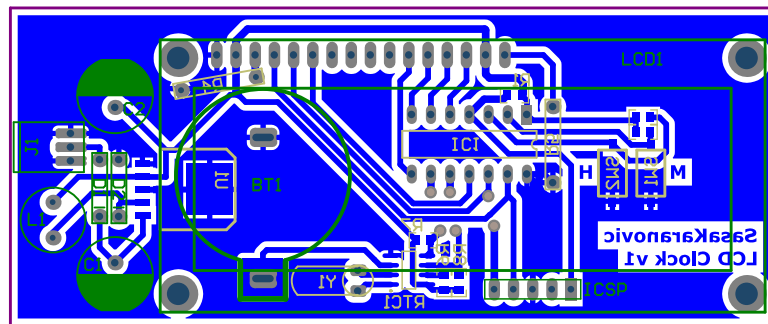

Simple Small Bedroom Clock v1

This is the just the silkscreen from bottom and top layer with TOP layer used as jumpers (red lines). Here you can clearly see which components go where on the PCB.

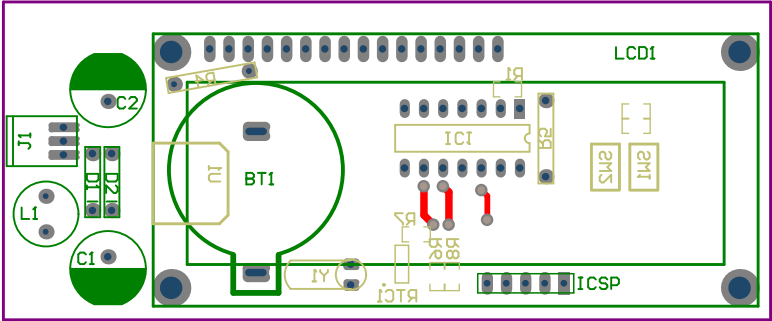

Simple Small Bedroom Clock v1

This is the Bottom Layer of the PCB 1:1 with silkscreen on.
Both Top and Bottom layer silkscreen are turned on so
you can see where components should be placed.

