


!!! Beware of capacitor on I/O board. Make sure you don't short it by ADCIn board !!!

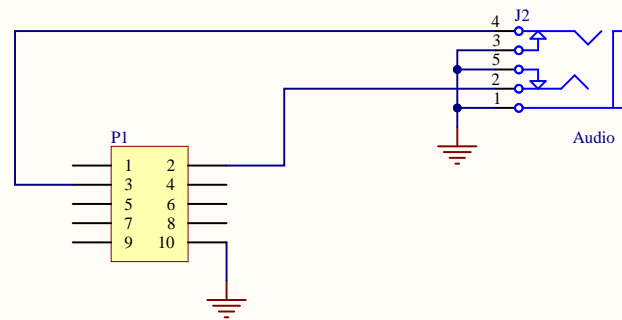

Trim P1 and J2 pins as short as possible to avoid puncture of I/O board.
Remove pin1 from P1 socket before soldering.

Spacer board is not required but highly recommended.

Board thickness (both ADCin and Spacer) is 1.2mm

| | | | | |
|-------|--------------------------|--|----------------------------|--|
| Title | | | ADC input board for MiSTer | |
| Size | Number | | Revision | |
| A4 | | | 1.3 | |
| Date: | 3-10-2024 | | Sheet of | |
| File: | C:\Work\...\ADCin.SchDoc | | Drawn By Sorgelig | |

