



Pow-OR

Basic Hookup and Usage Guide


Step 1: Turn the potentiometer fully counterclockwise.

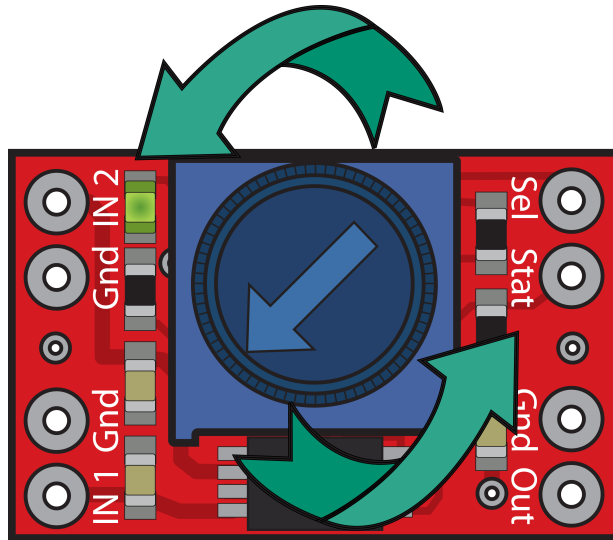


Step 2: Attach power sources and micro-controller to Pow-OR board

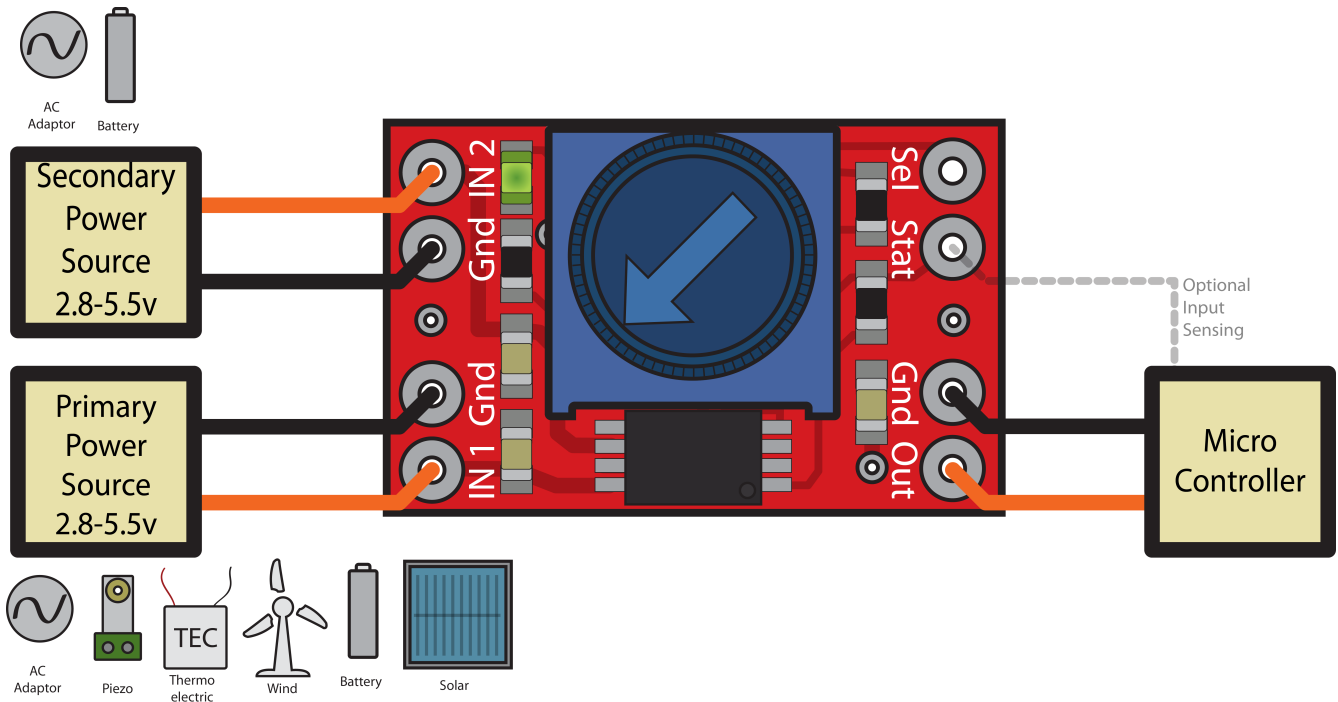

Step 3: Turn Potentiometer clockwise until the Green LED by Input 2 turns on. This indicates that the Pow-OR board is now using input 2.

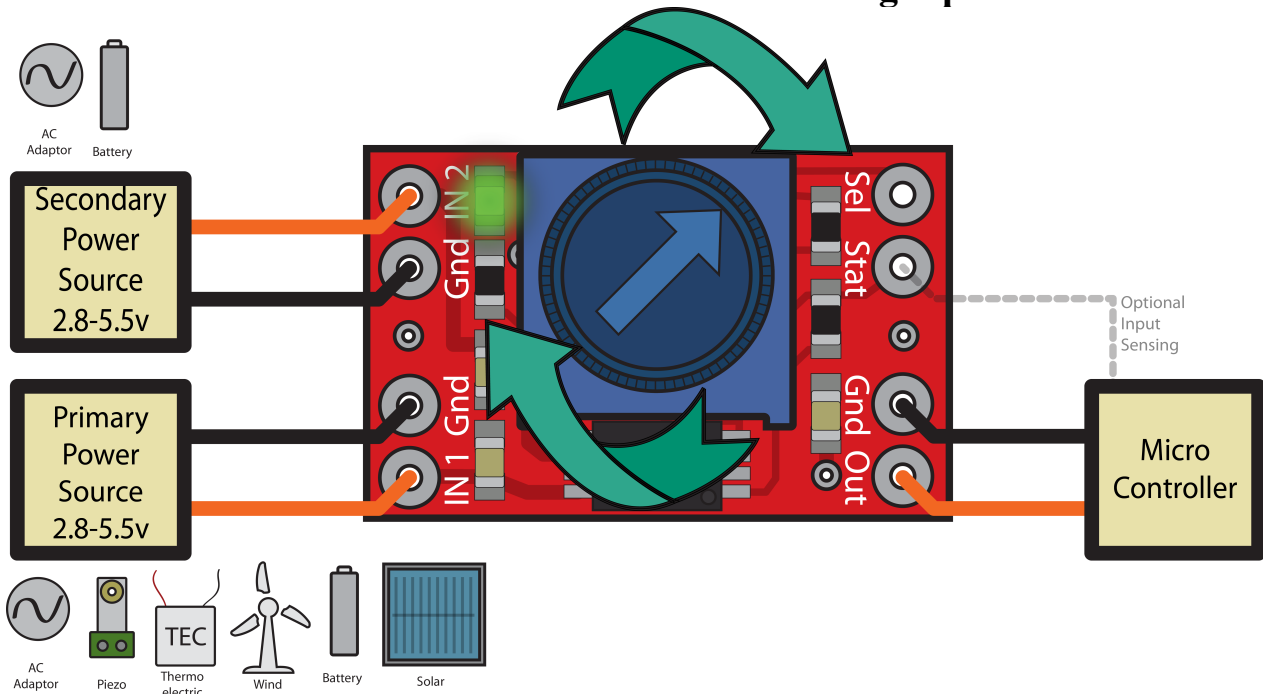

Step 4: Turn the potentiometer counter clockwise until the Input 2 status LED turns off. Then turn it back -a little- more, but not too much as this sets the switching sensitivity.

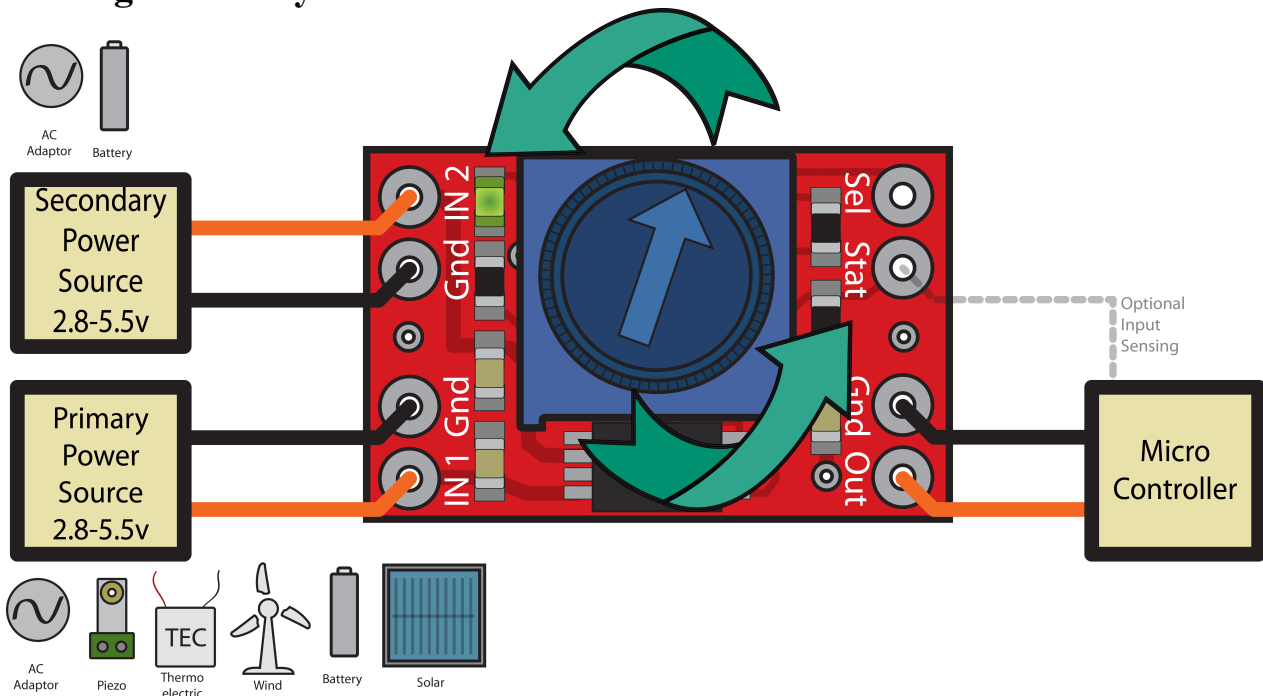

And you are done.

Now just let the board handle power switching for you.