


CHIMERA MK6 PRIMING BAR TEMPLATE (KATANA/TALON)

Cut out the templates to the right, joining them together on the lines indicated by the shaded area. Glue them to your aluminum stock and drill the holes.


Drill out at 5/32" and countersink with a 1/2" countersink bit until your M3 pan heads sit flush against the bar.

Drill out at 5/32" and carefully tap with a M5 x 0.80MM Tap.

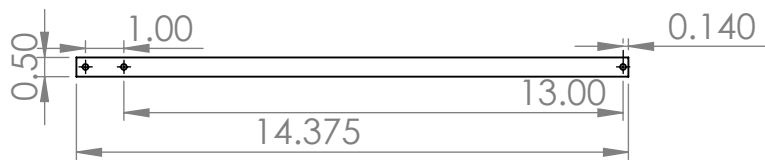

IMPORTANT: REMEMBER TO MEASURE THIS
TEMPLATE TO ENSURE IT HAS SCALED CORRECTLY

CUT HERE

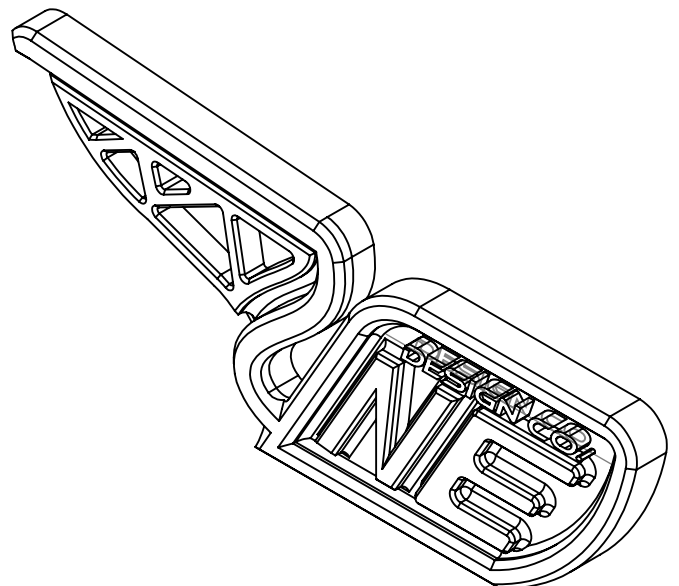

NORTHEAST DESIGN CO.