
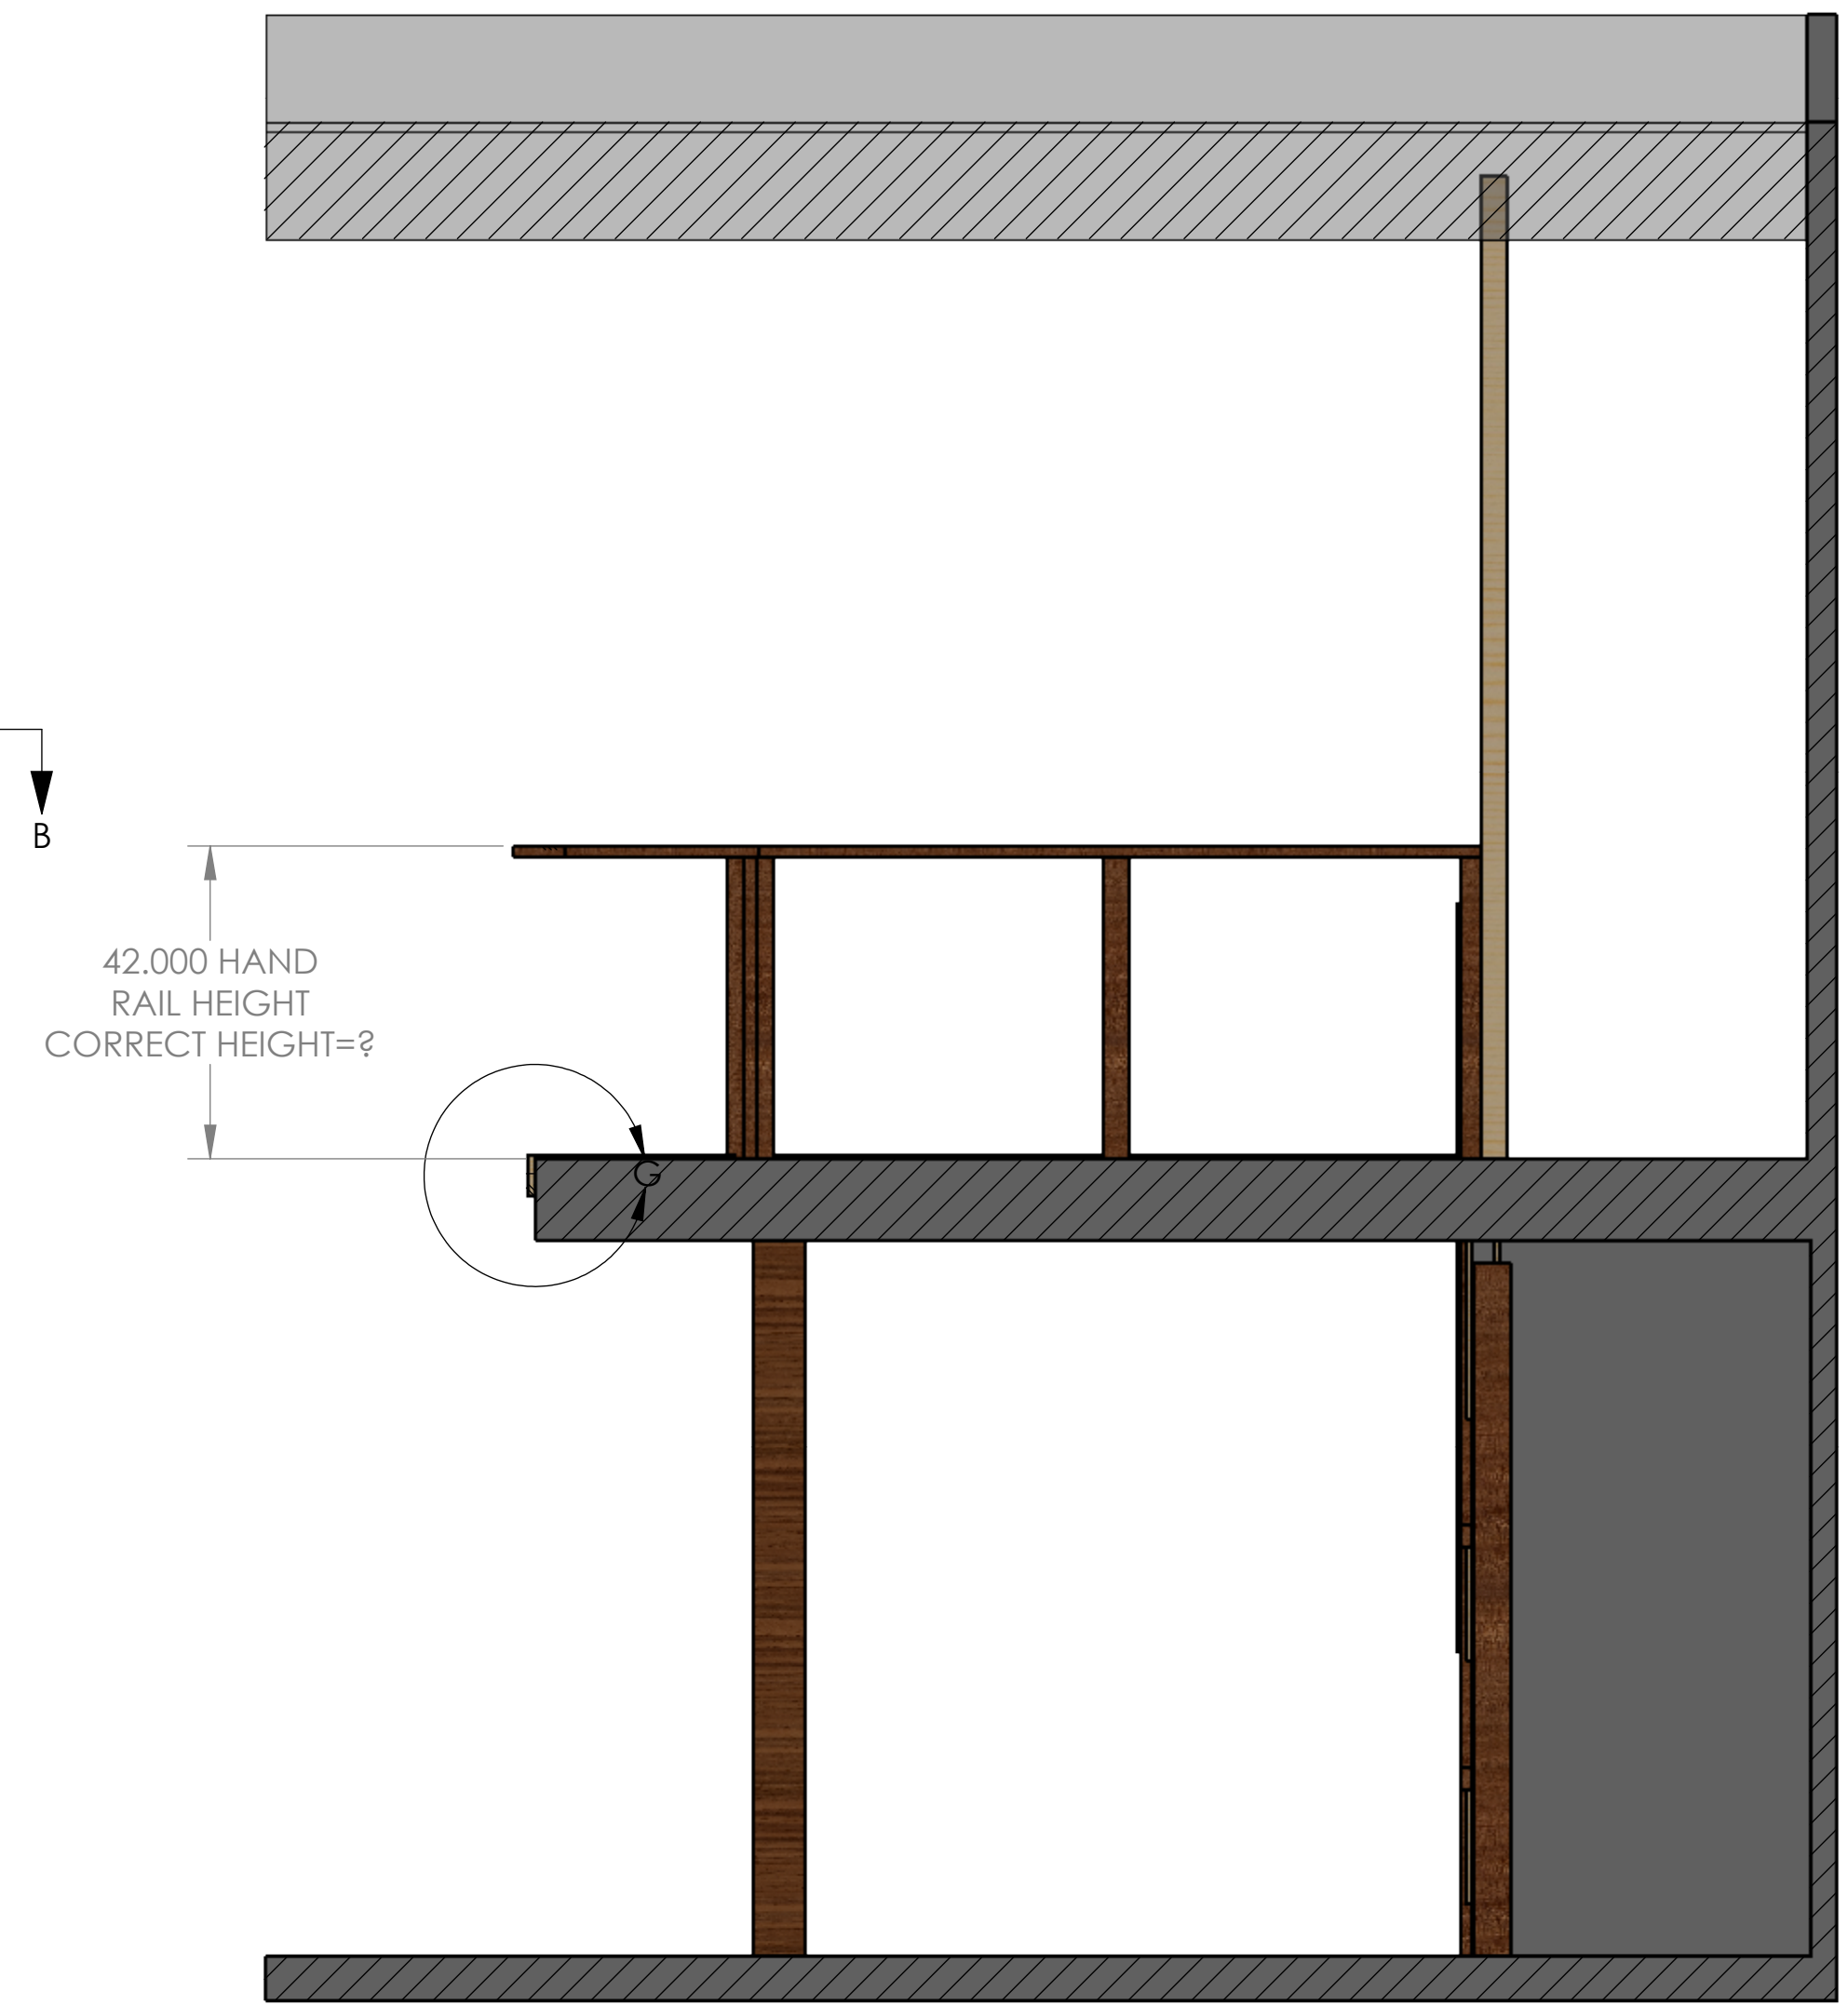
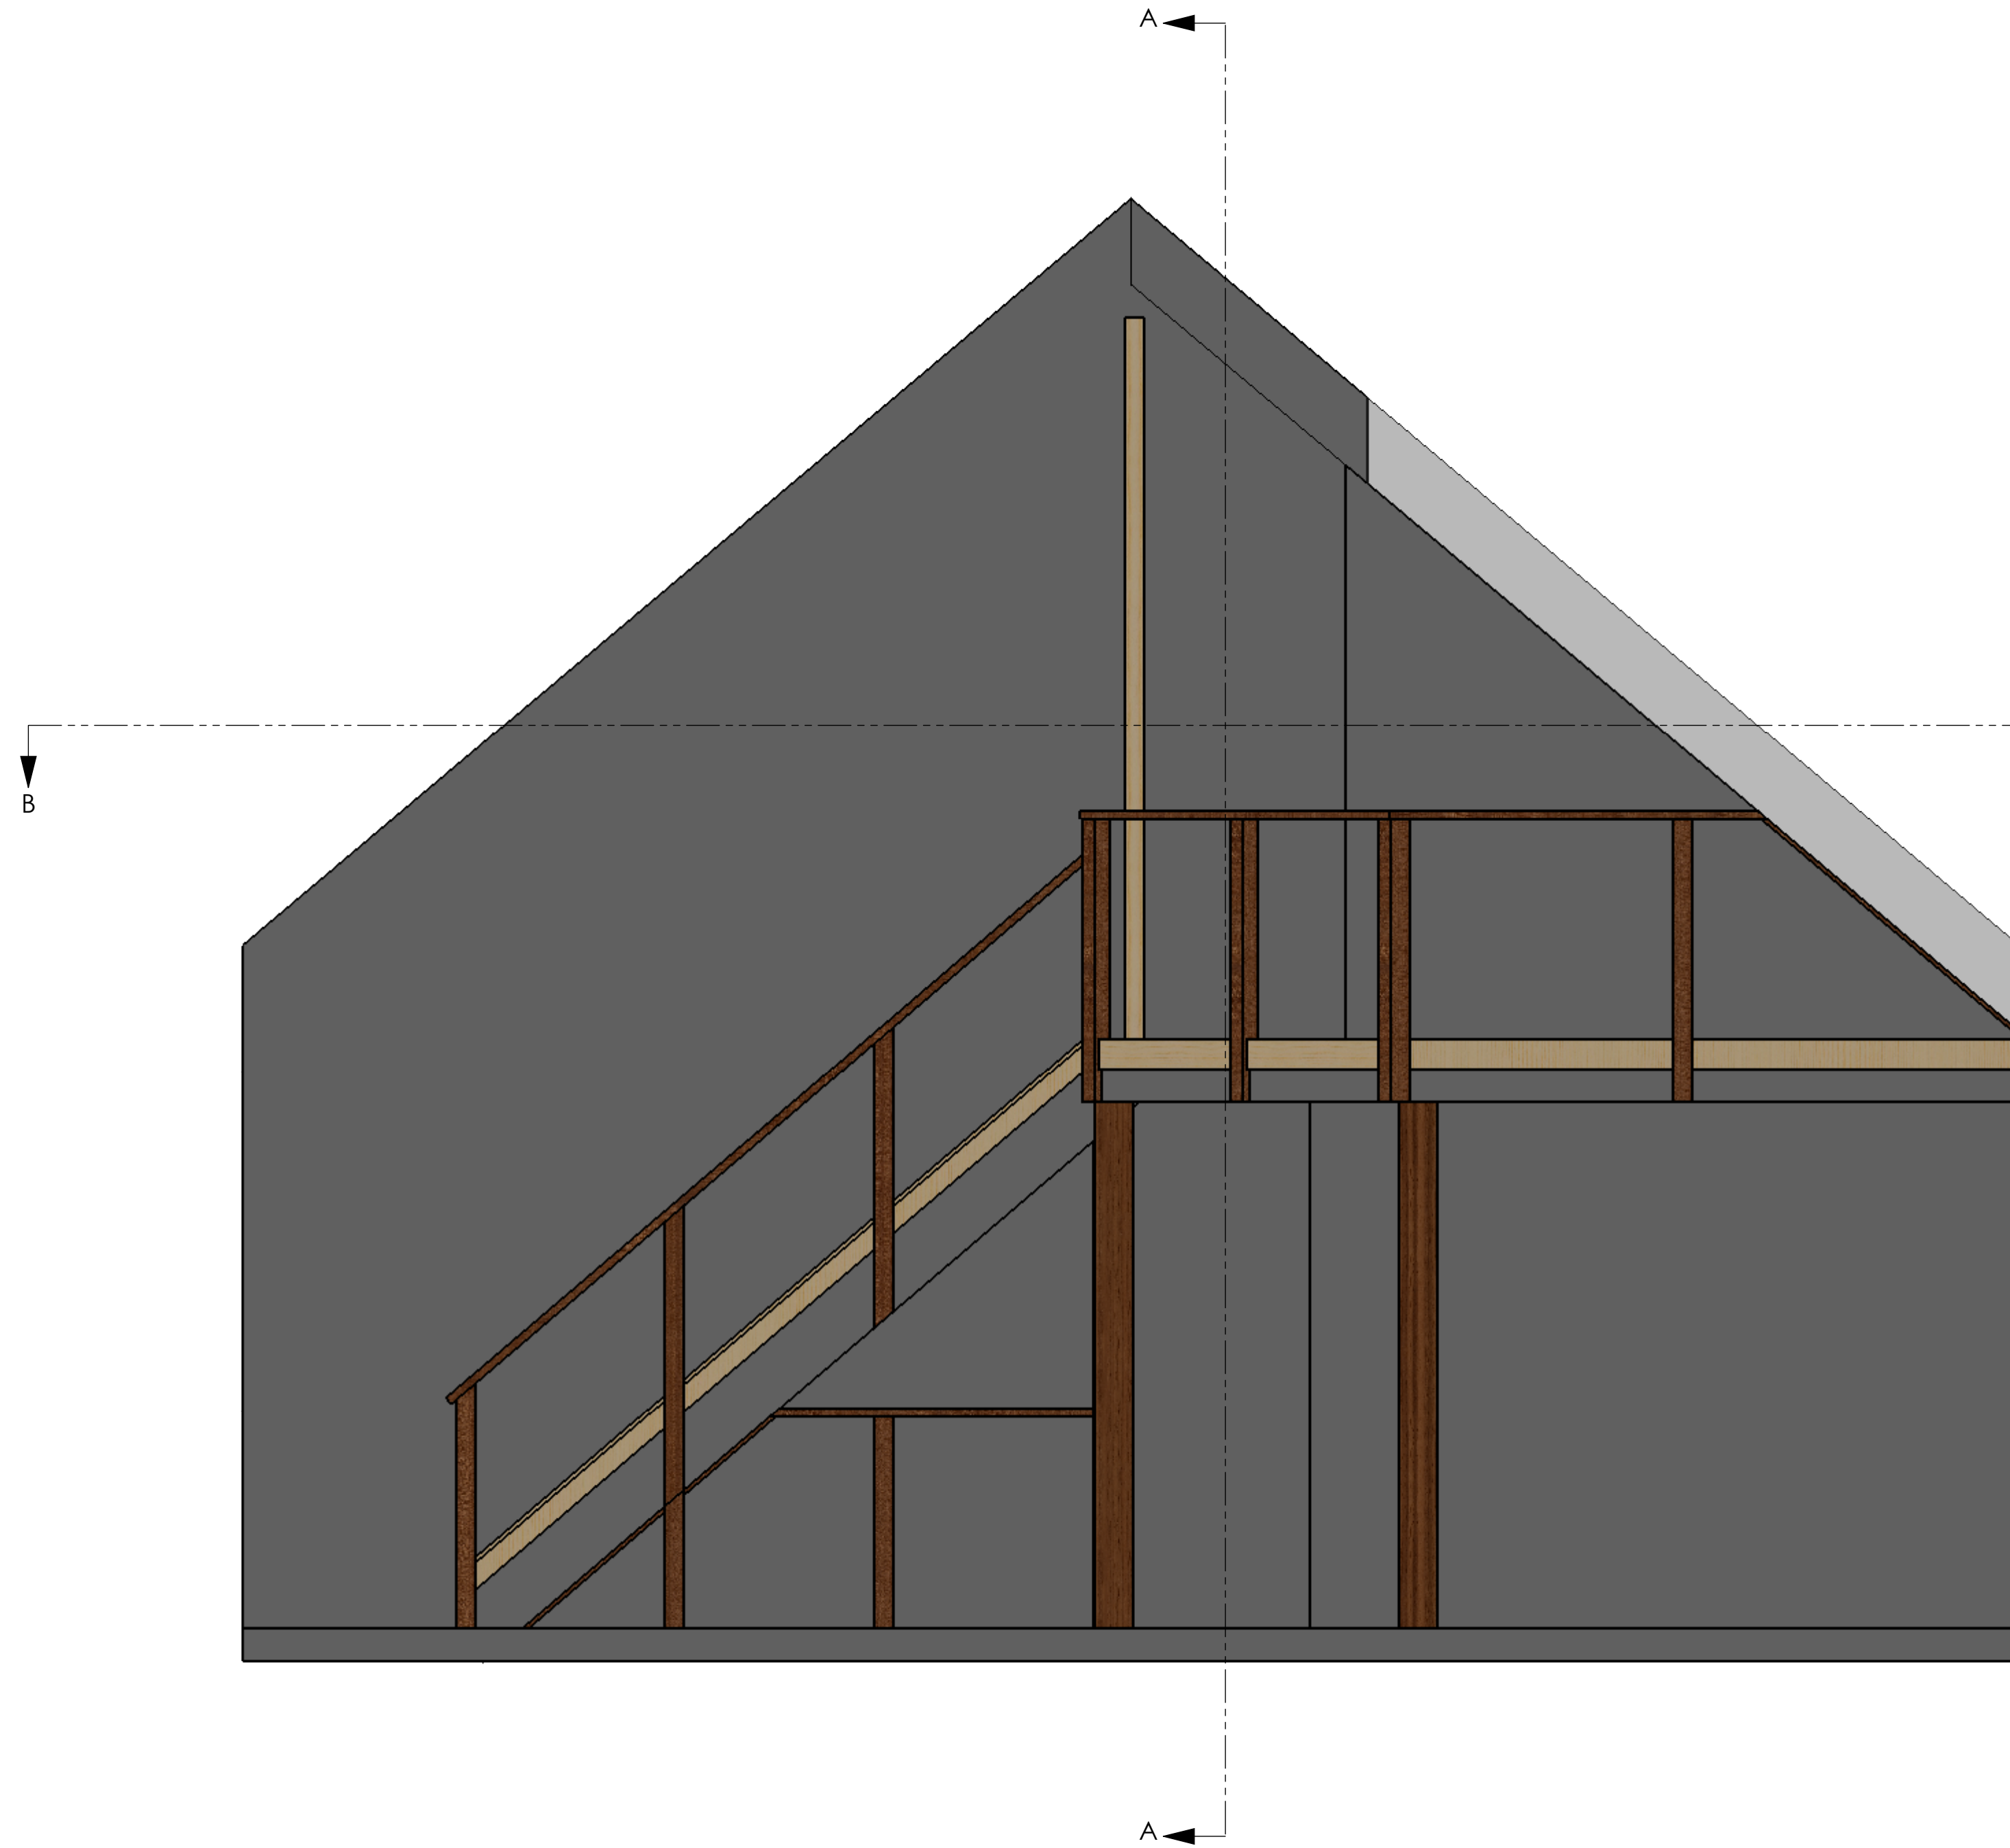
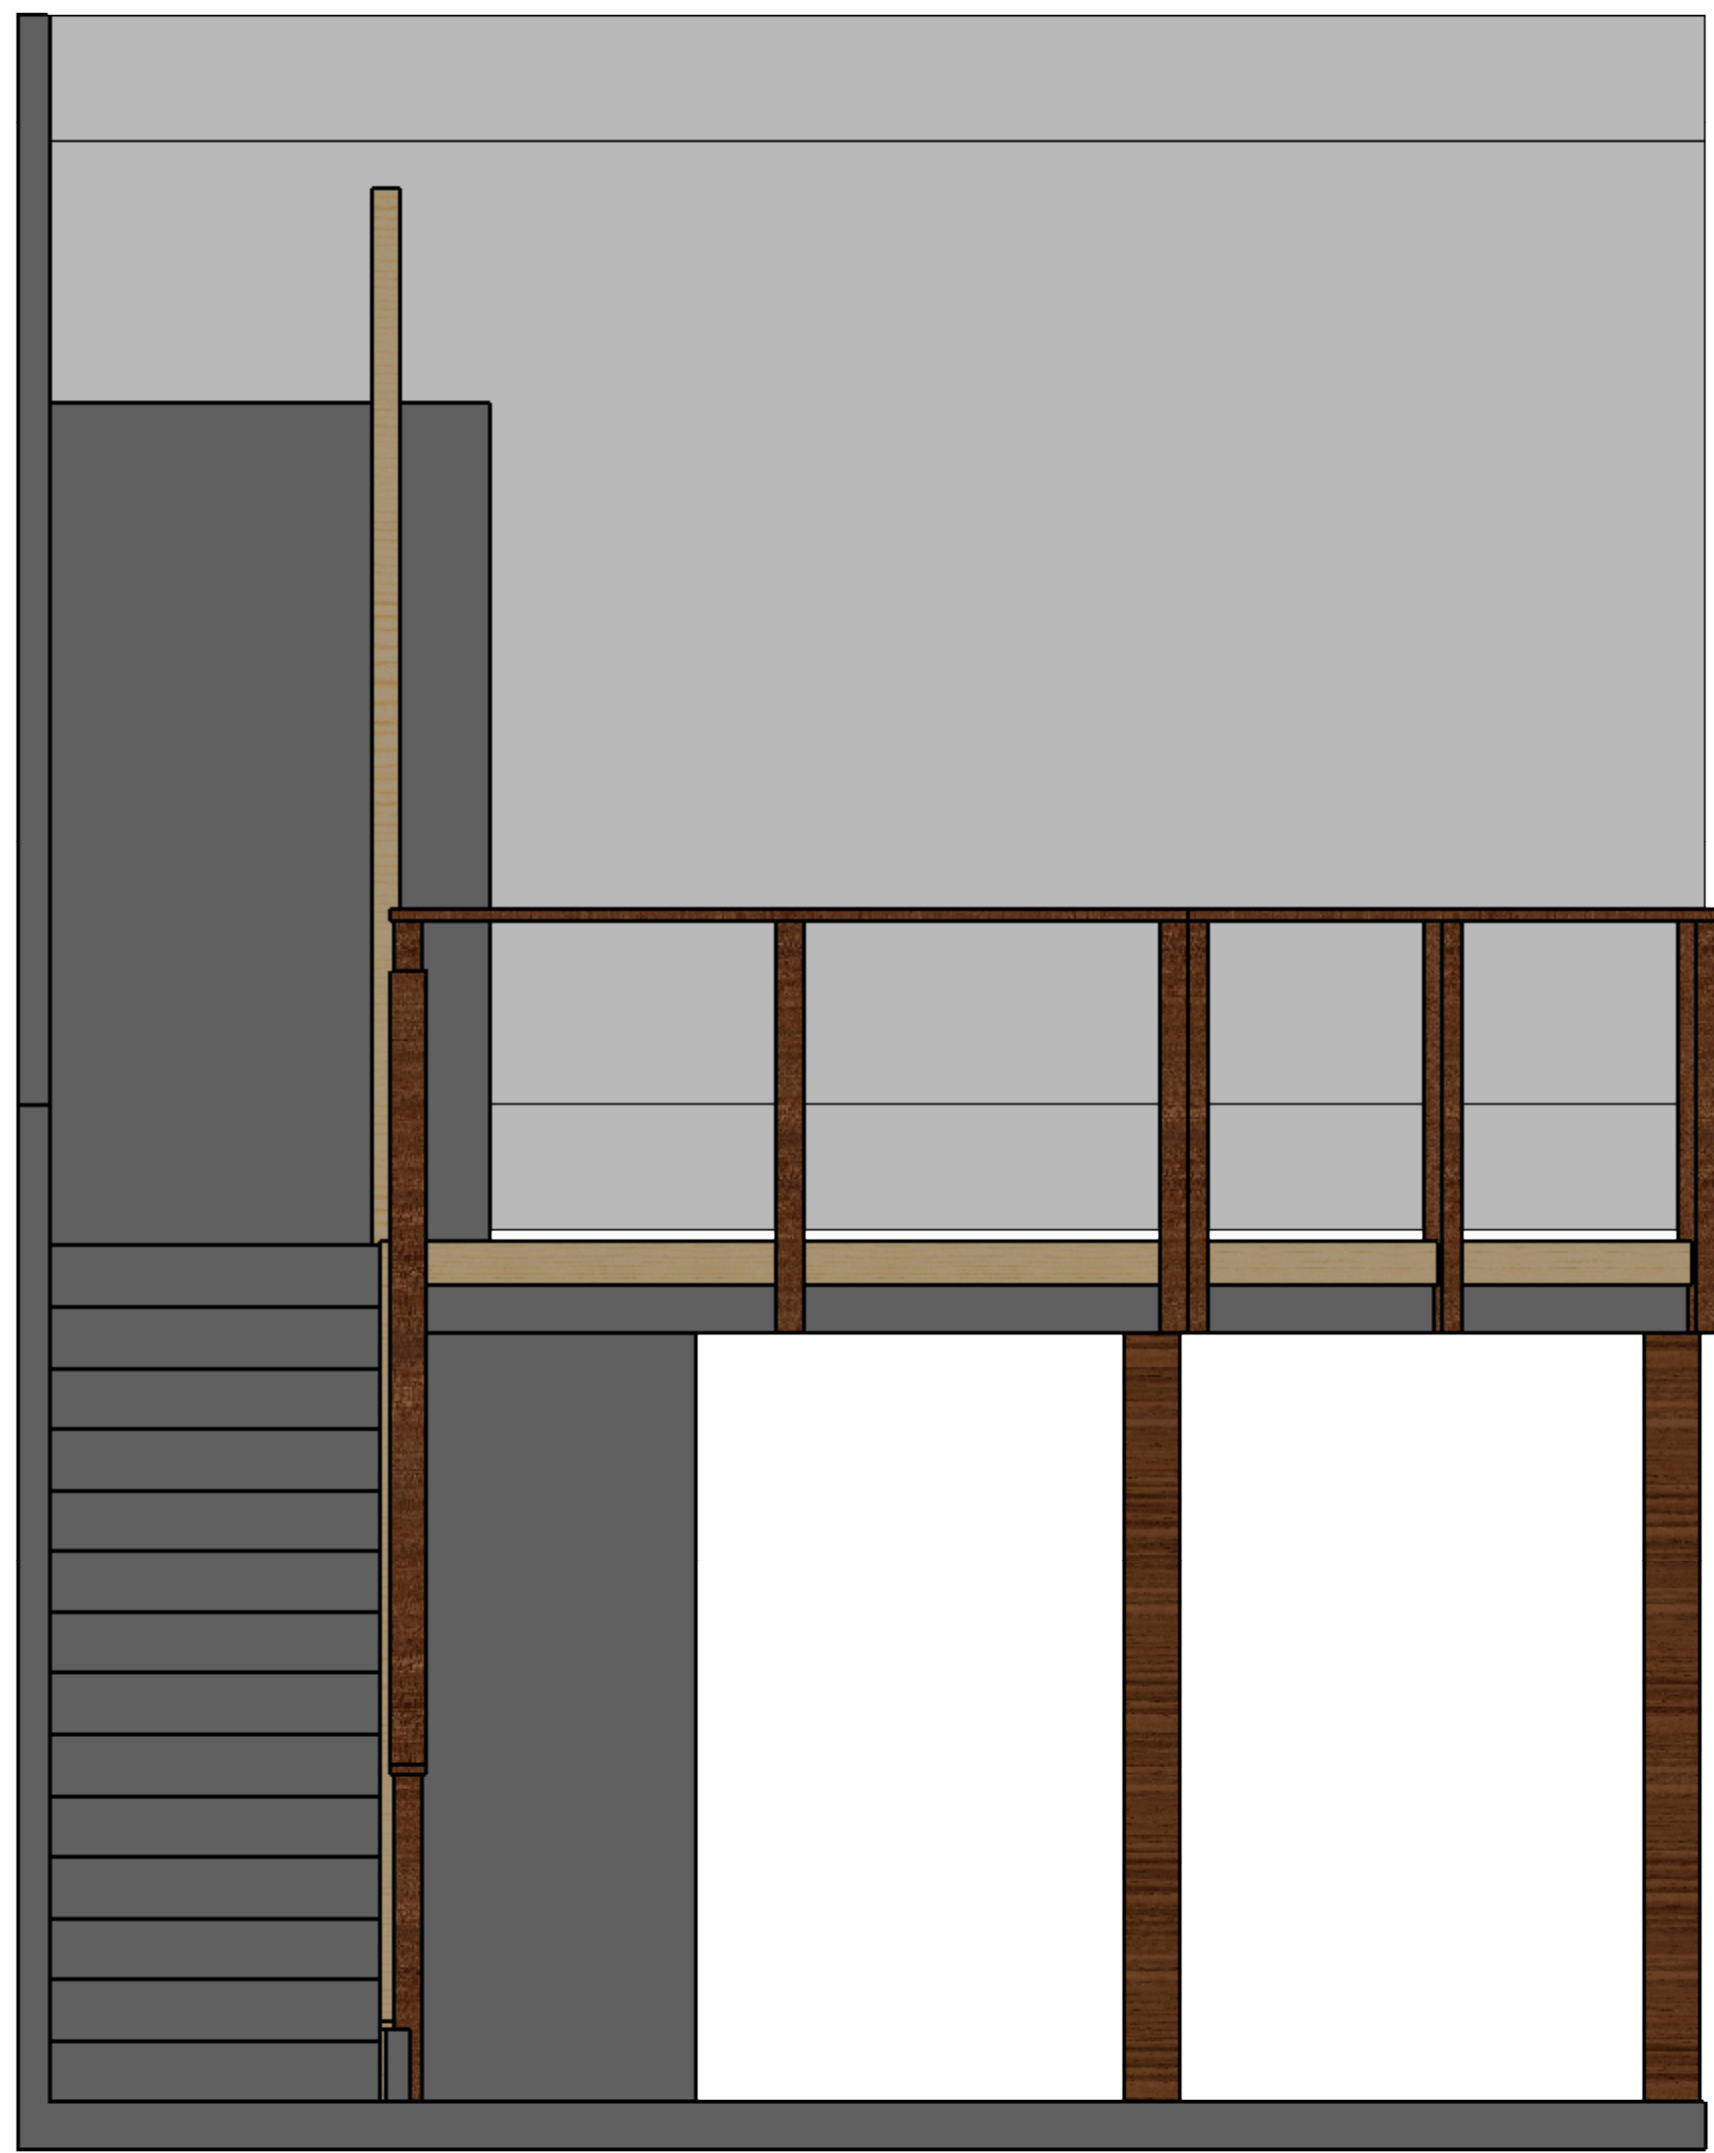


.500 VERTICAL  
RISE FOR CARPET  
TO BUTT UP AGAINST

5.500 TRIM HEIGHT

DETAIL G  
SCALE 1 : 4


SECTION B-B

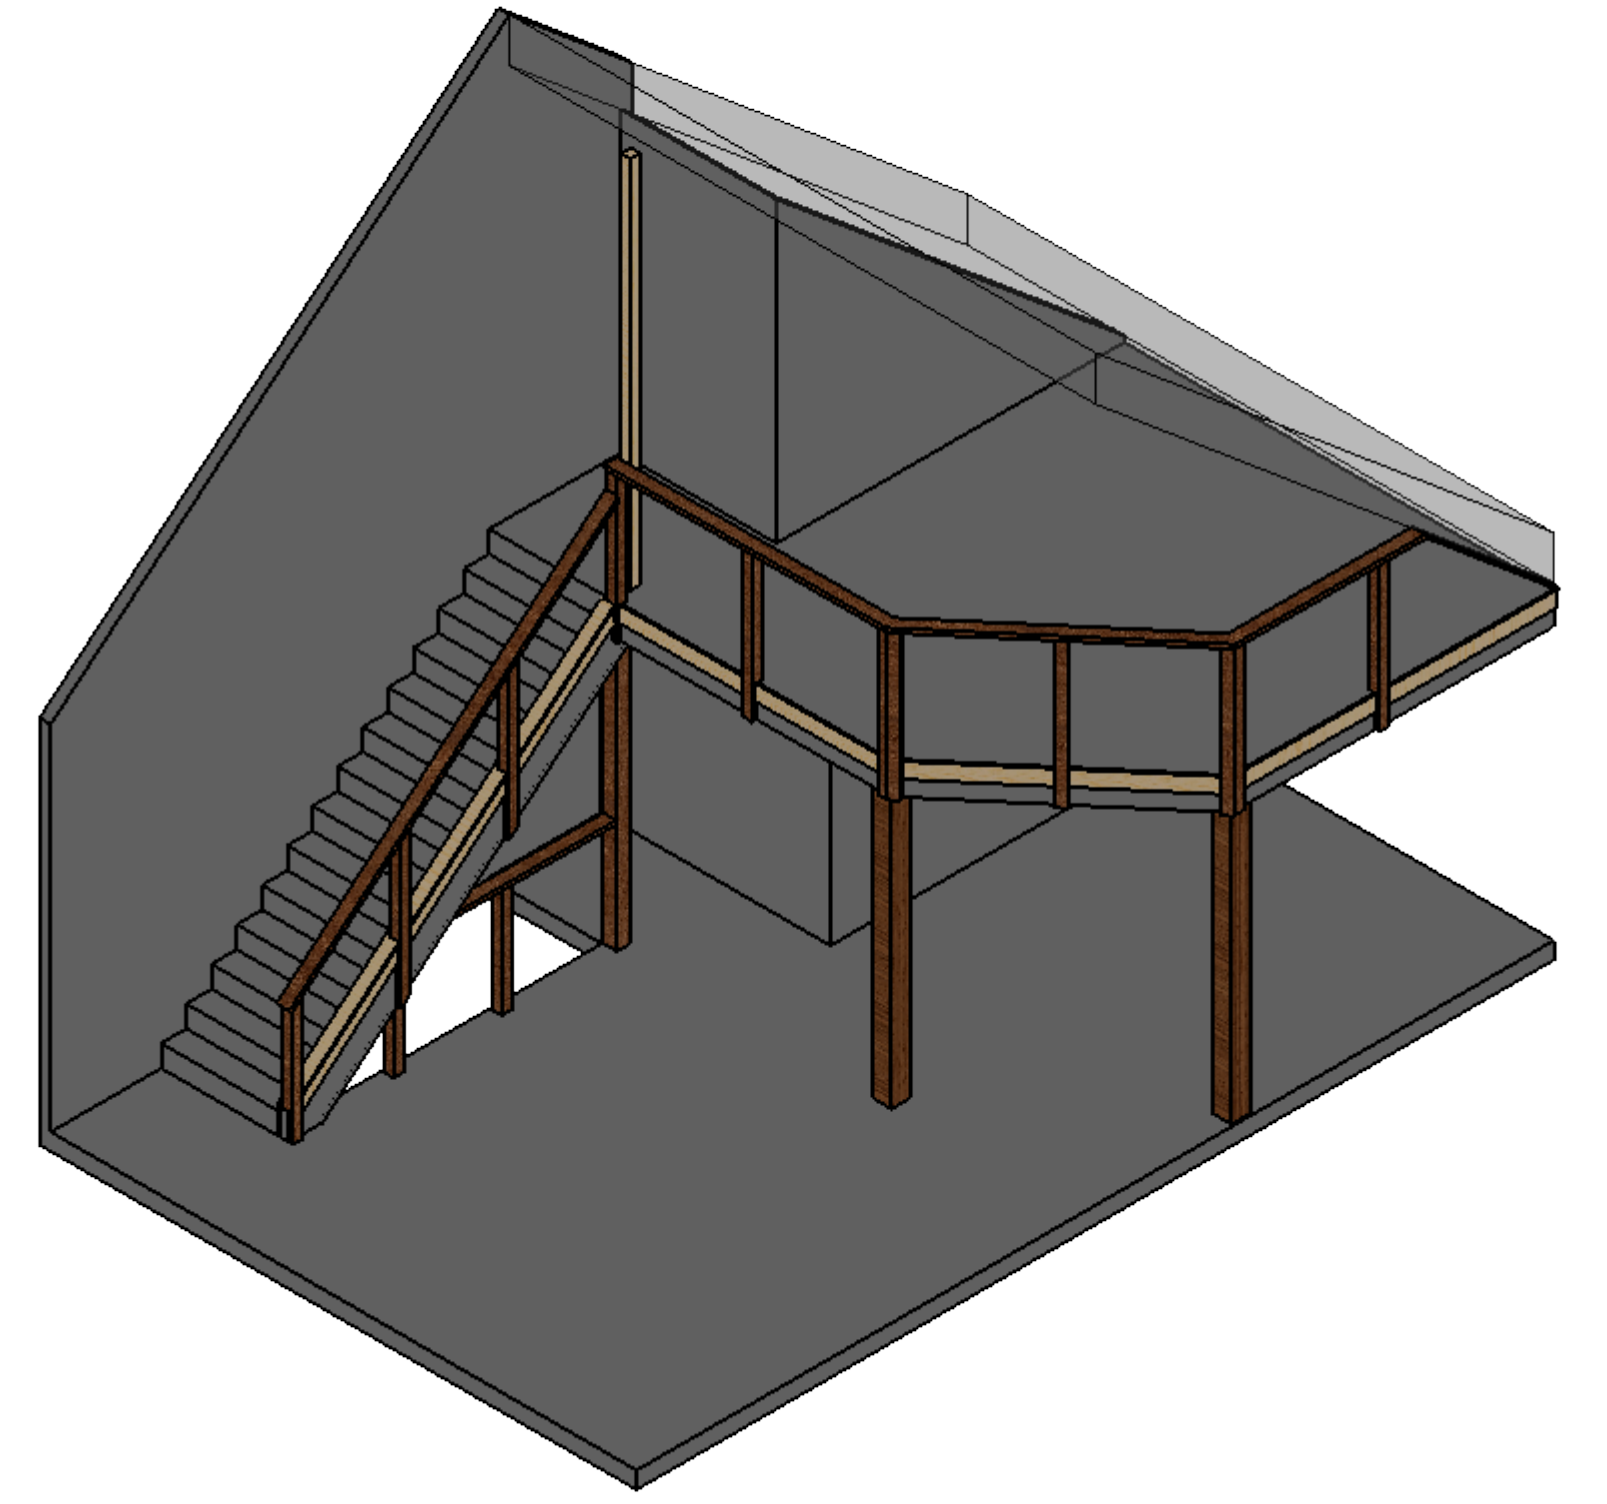


SECTION A-A

NOTE:	
1	INTERPRET DRAWING WITH ASME Y14.5M-1994
2	USE LOCTITE® 243™ THREADLOCKER (OR EQUIVALENT) TO RETAIN ALL THREADED FASTENERS UNLESS OTHERWISE NOTED




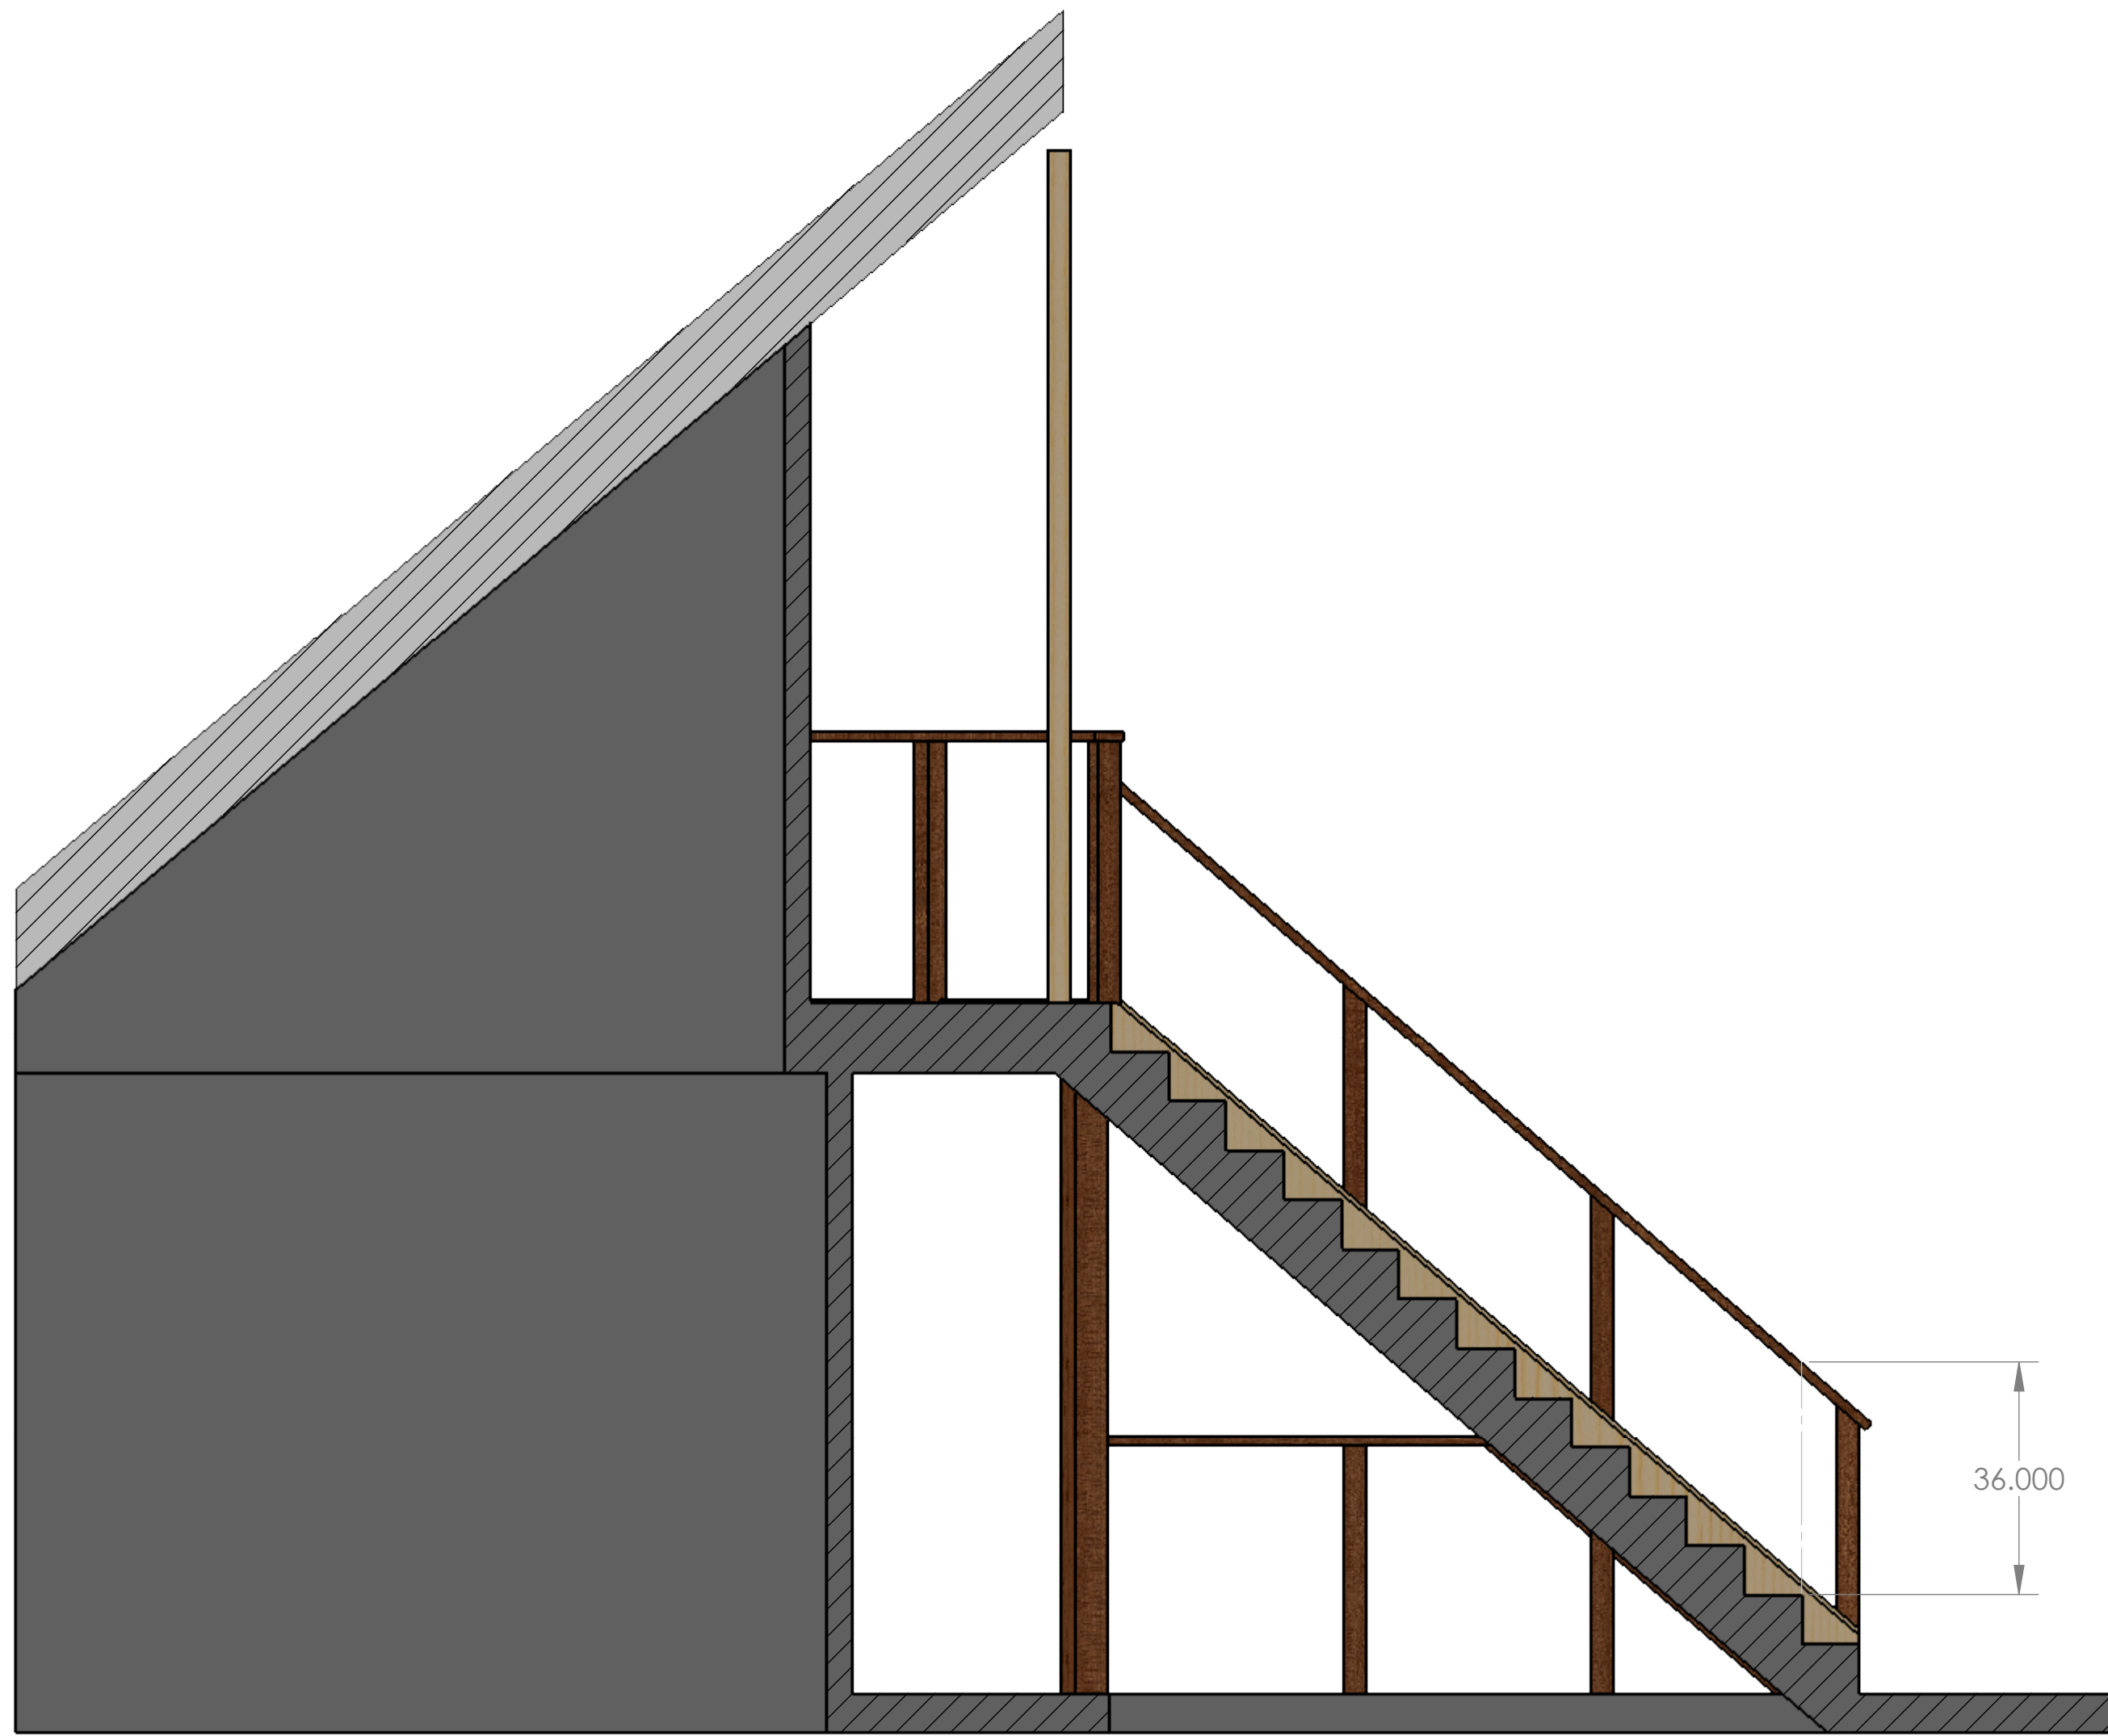


SECTION H-H

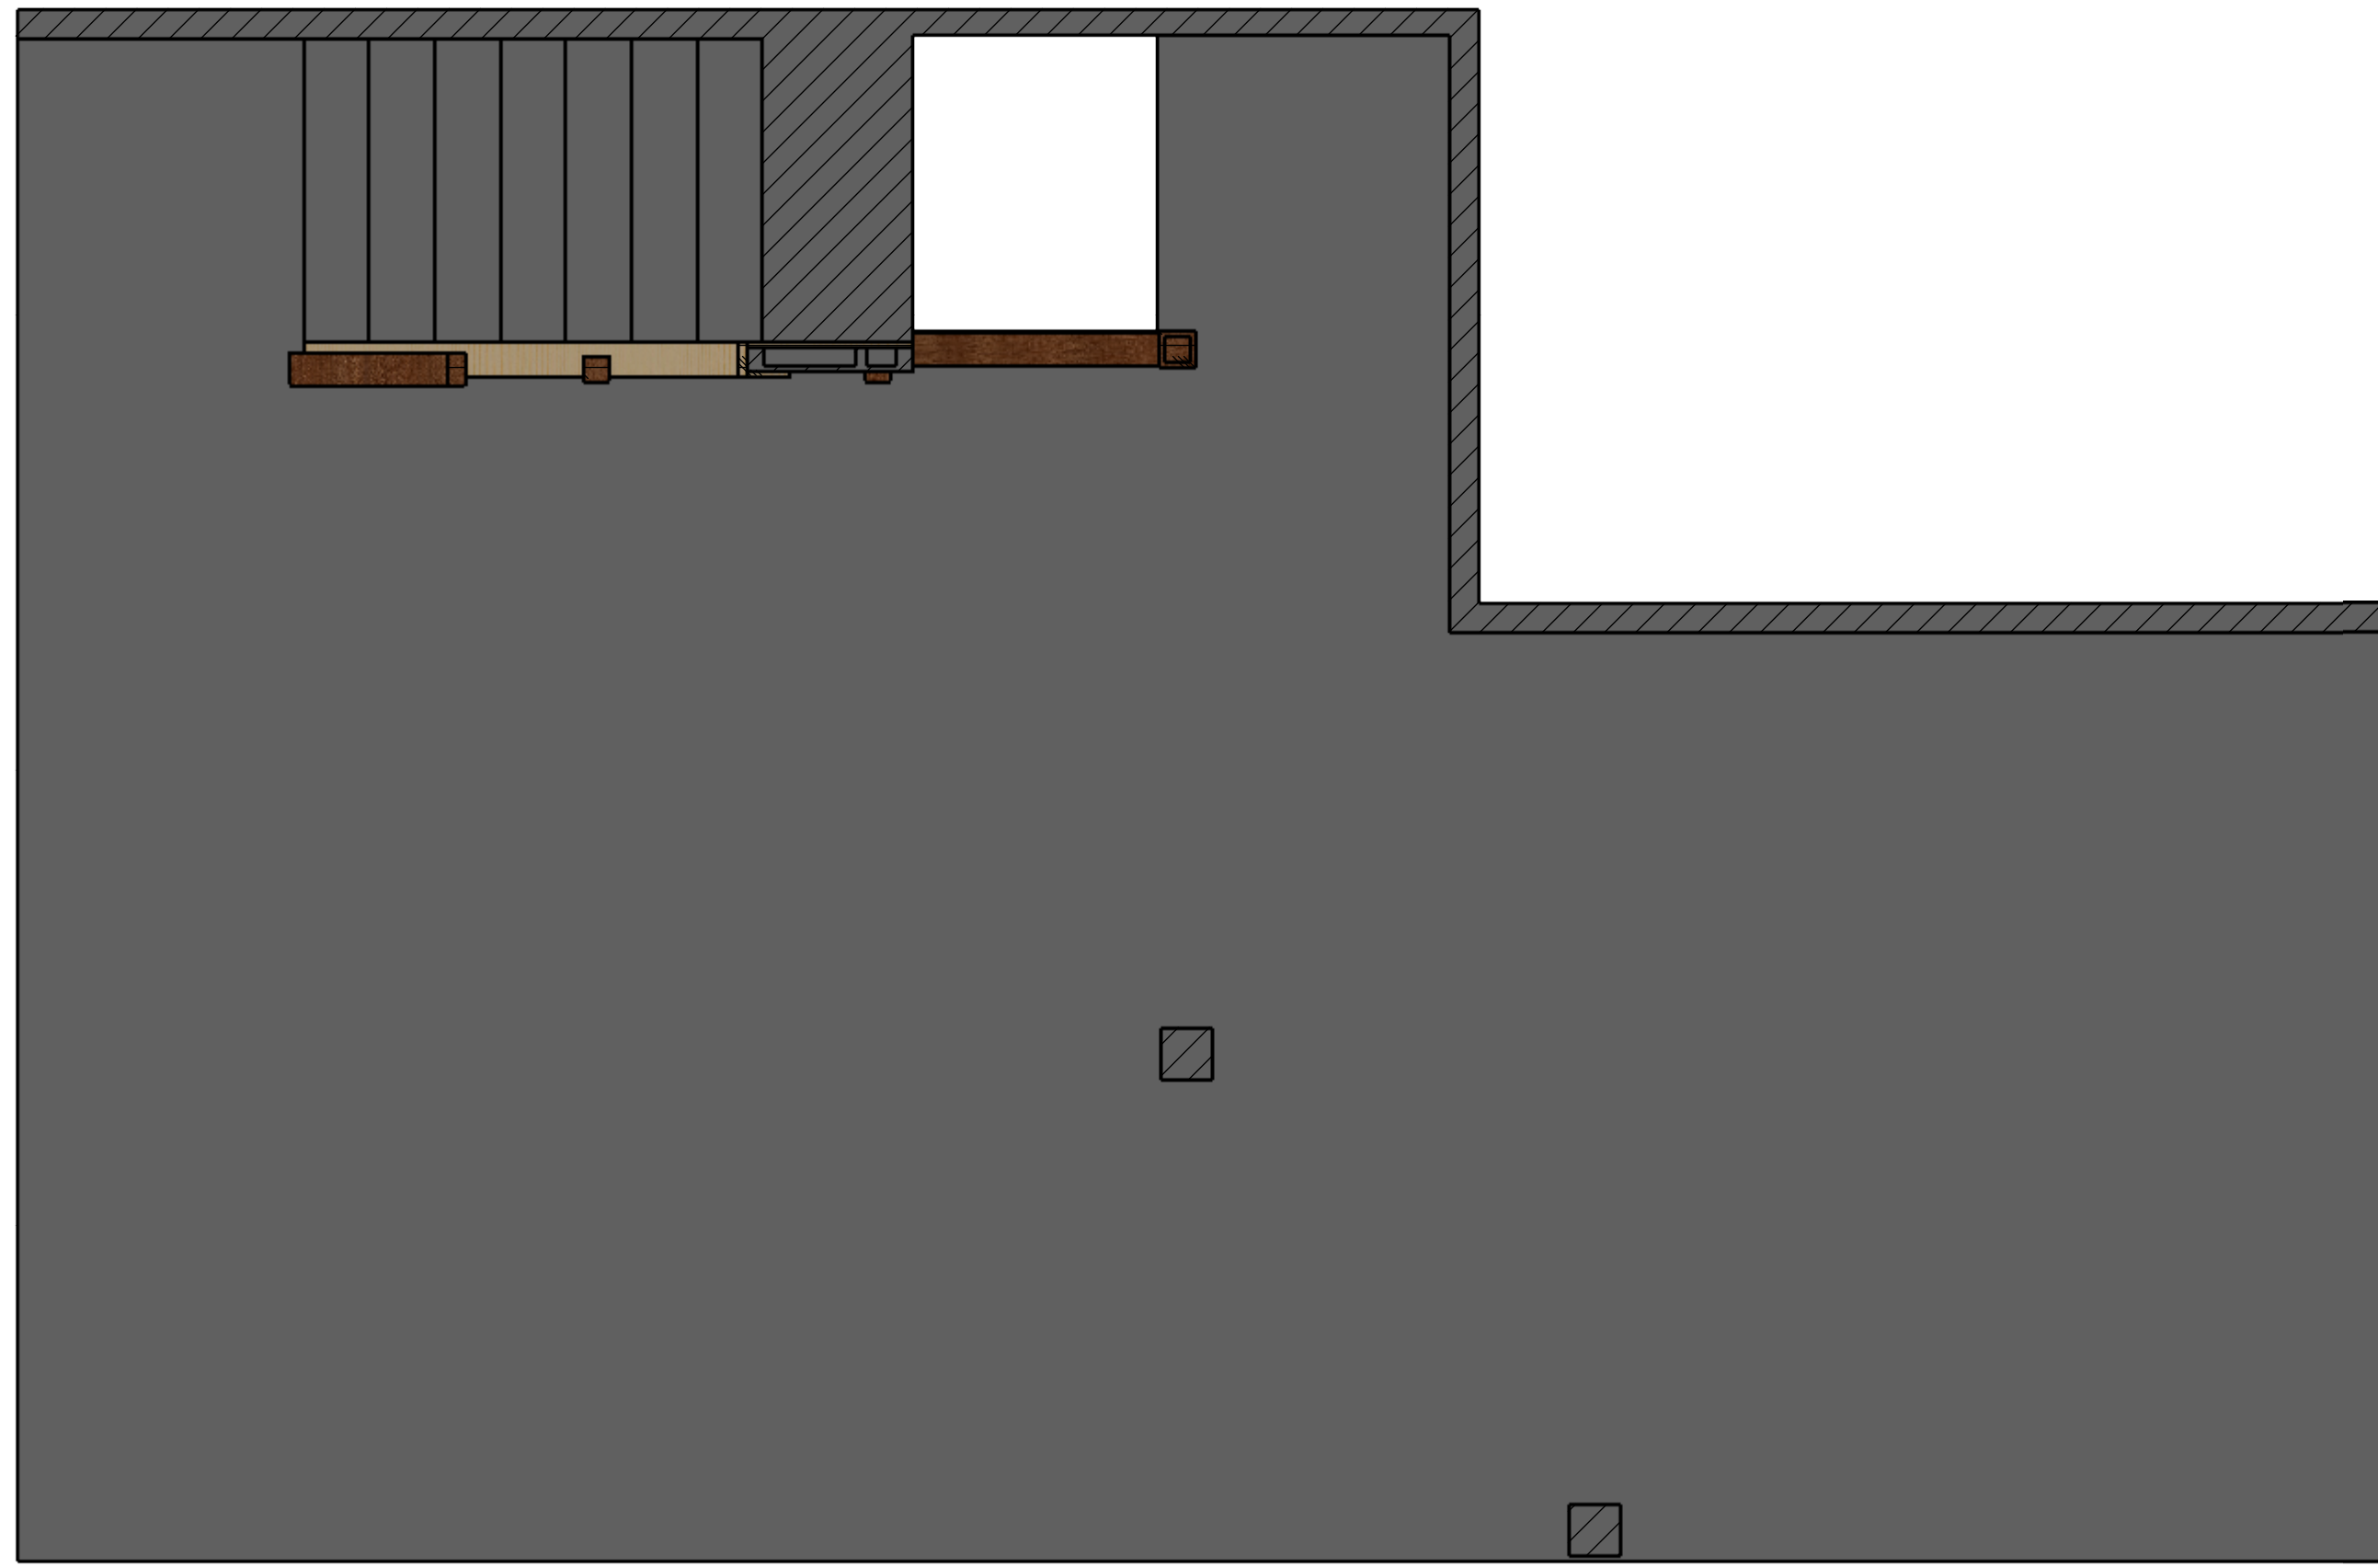


SECTION C-C

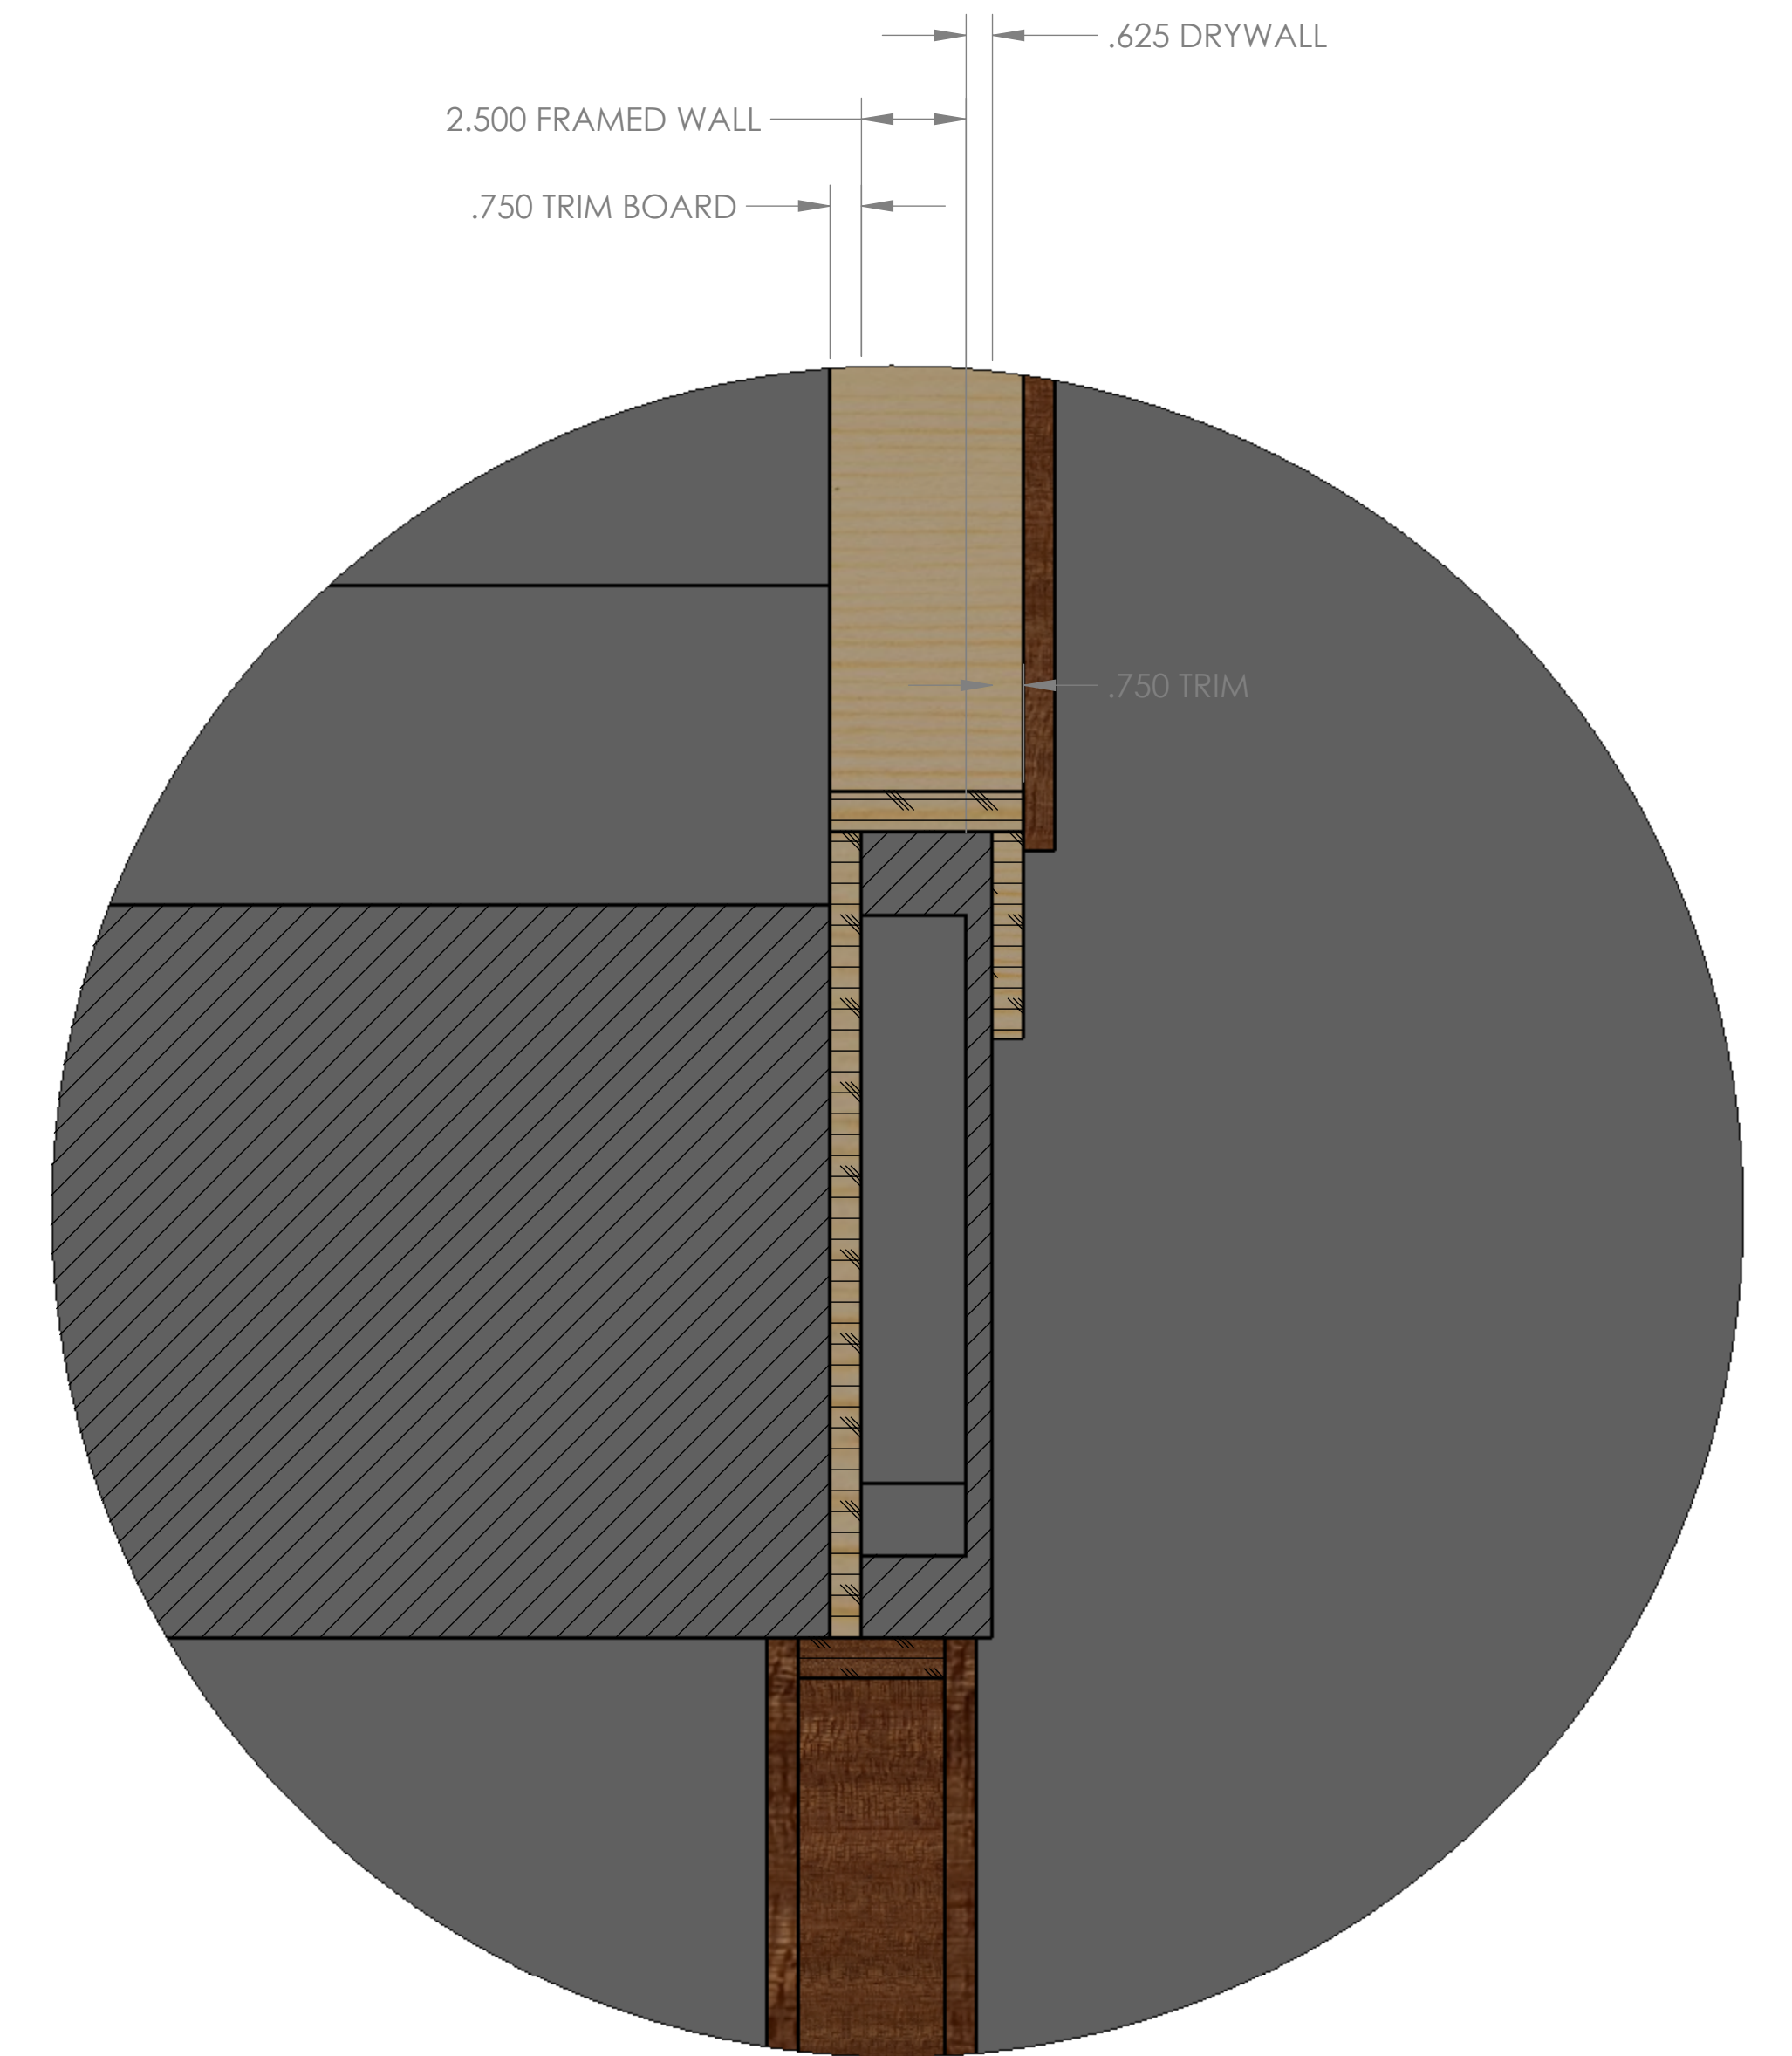


DETAIL F  
SCALE 1 : 4

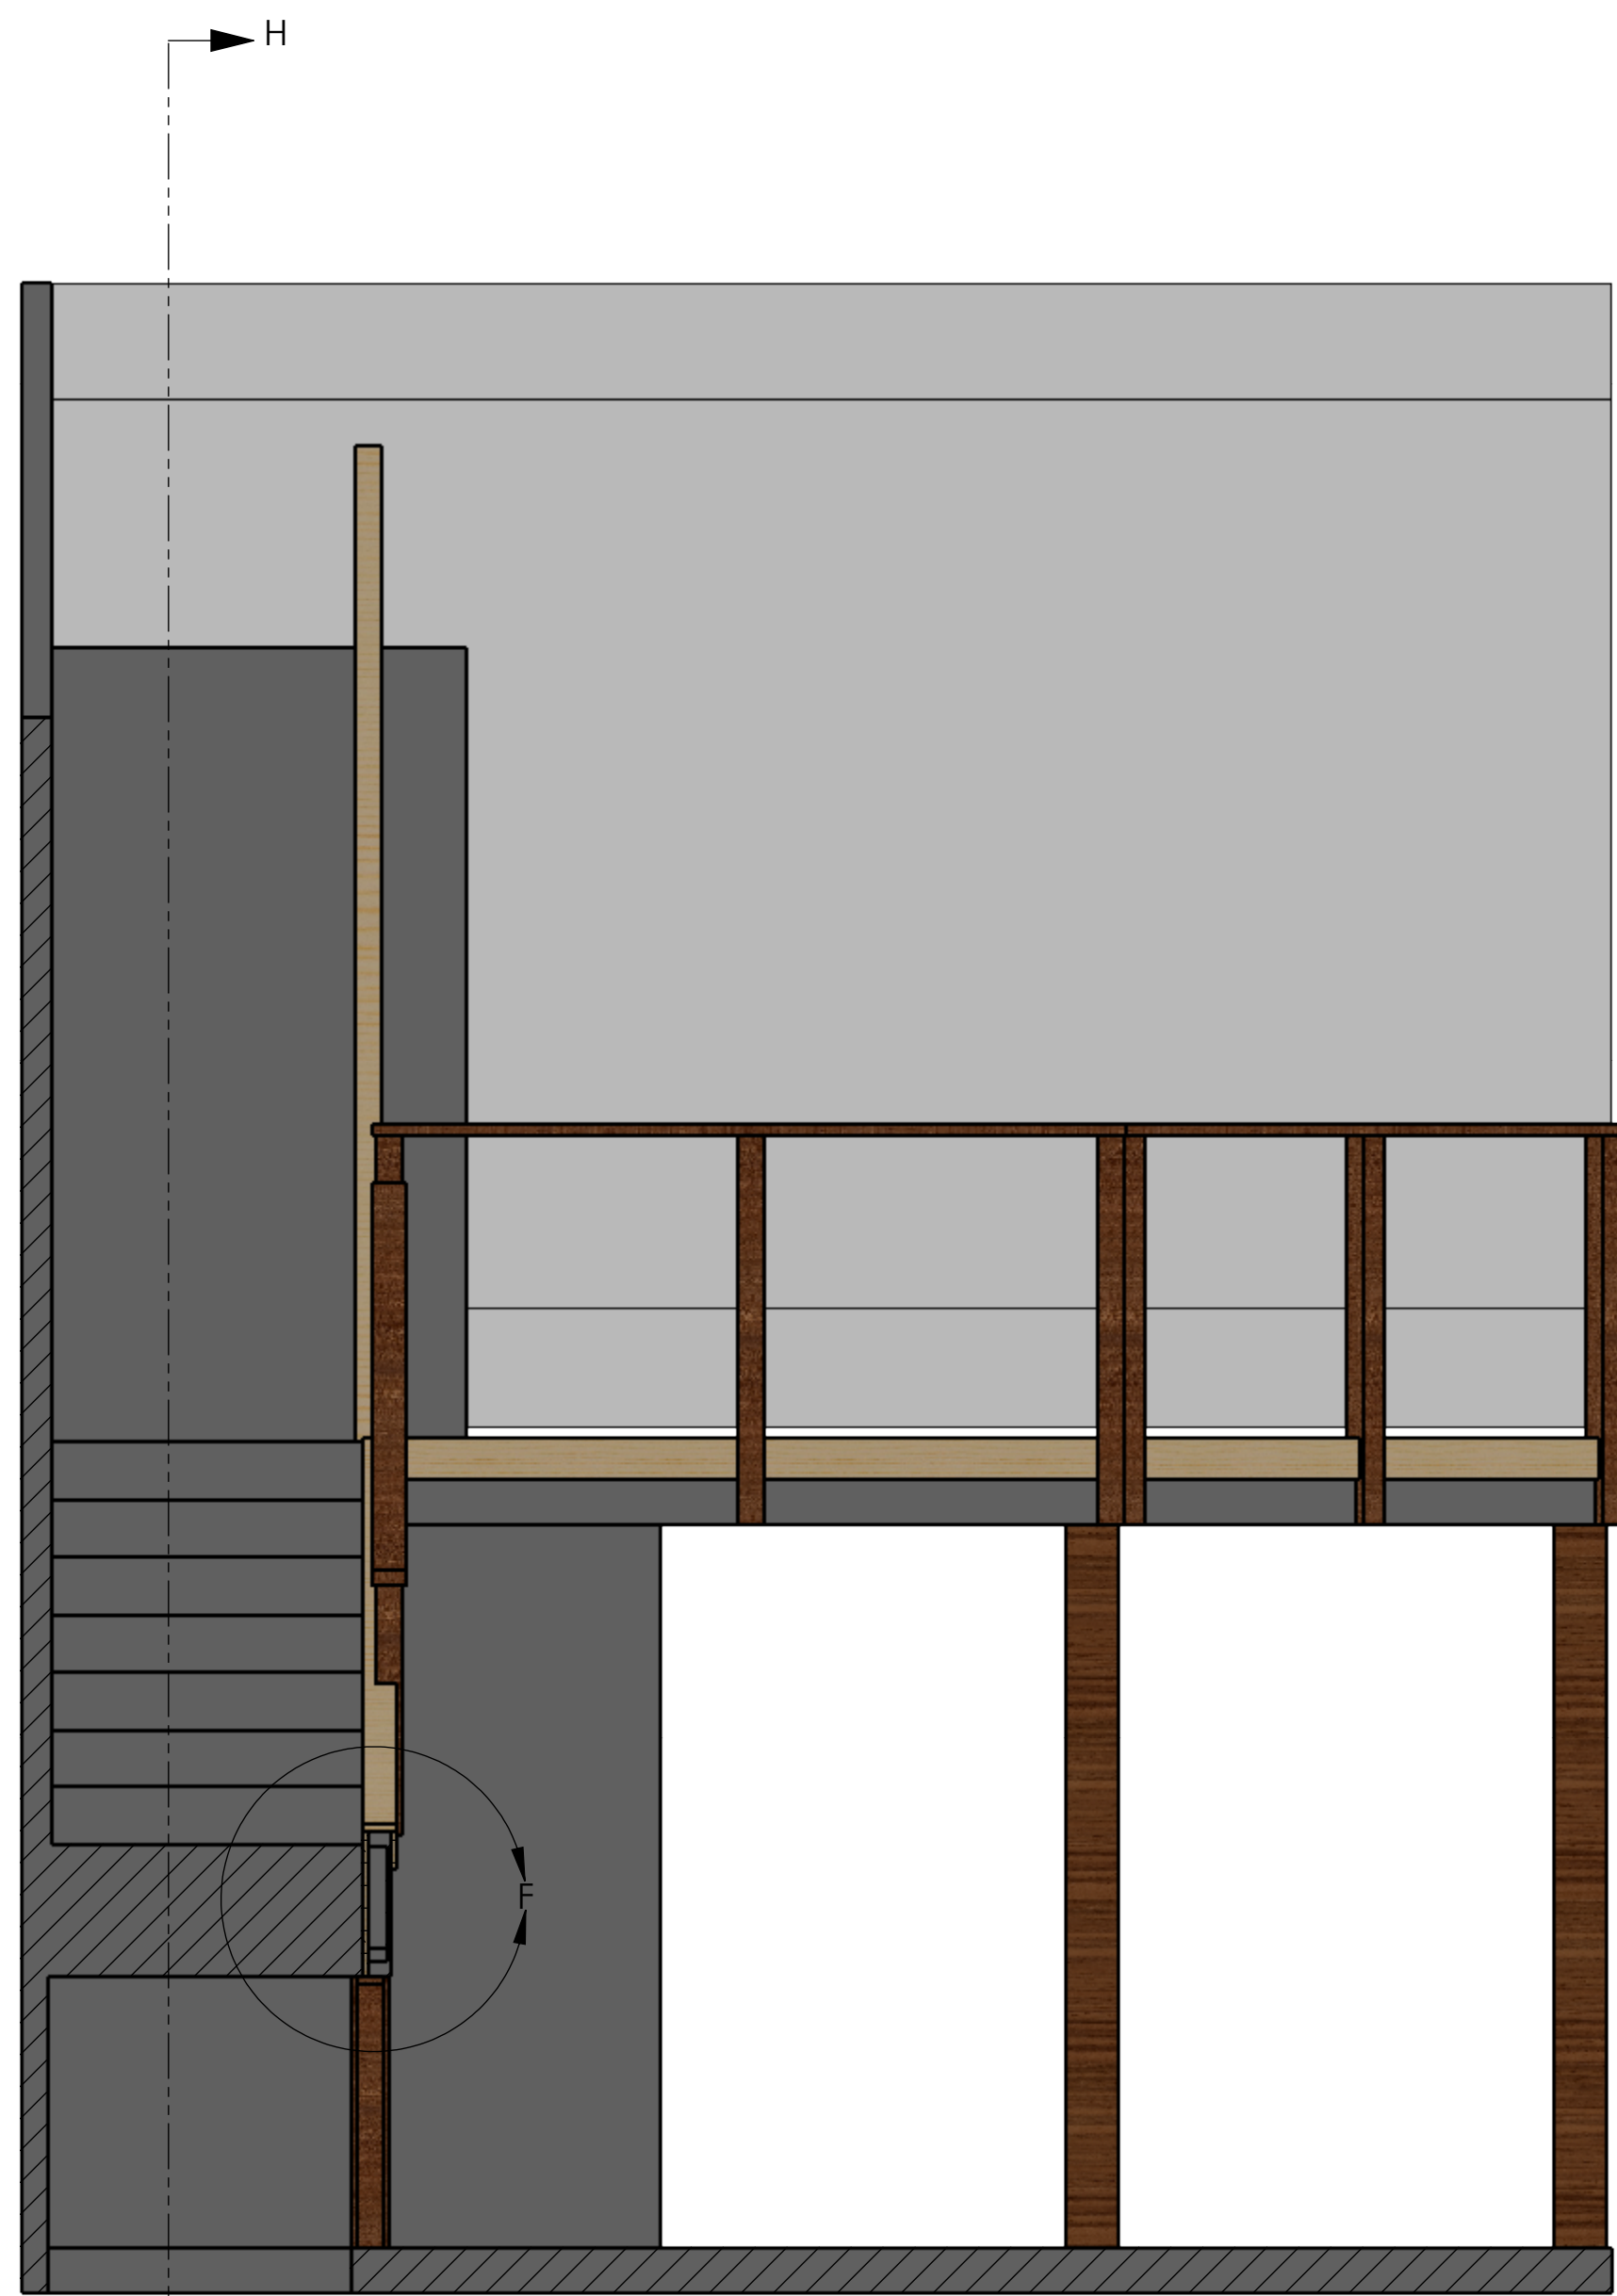


SECTION E-E

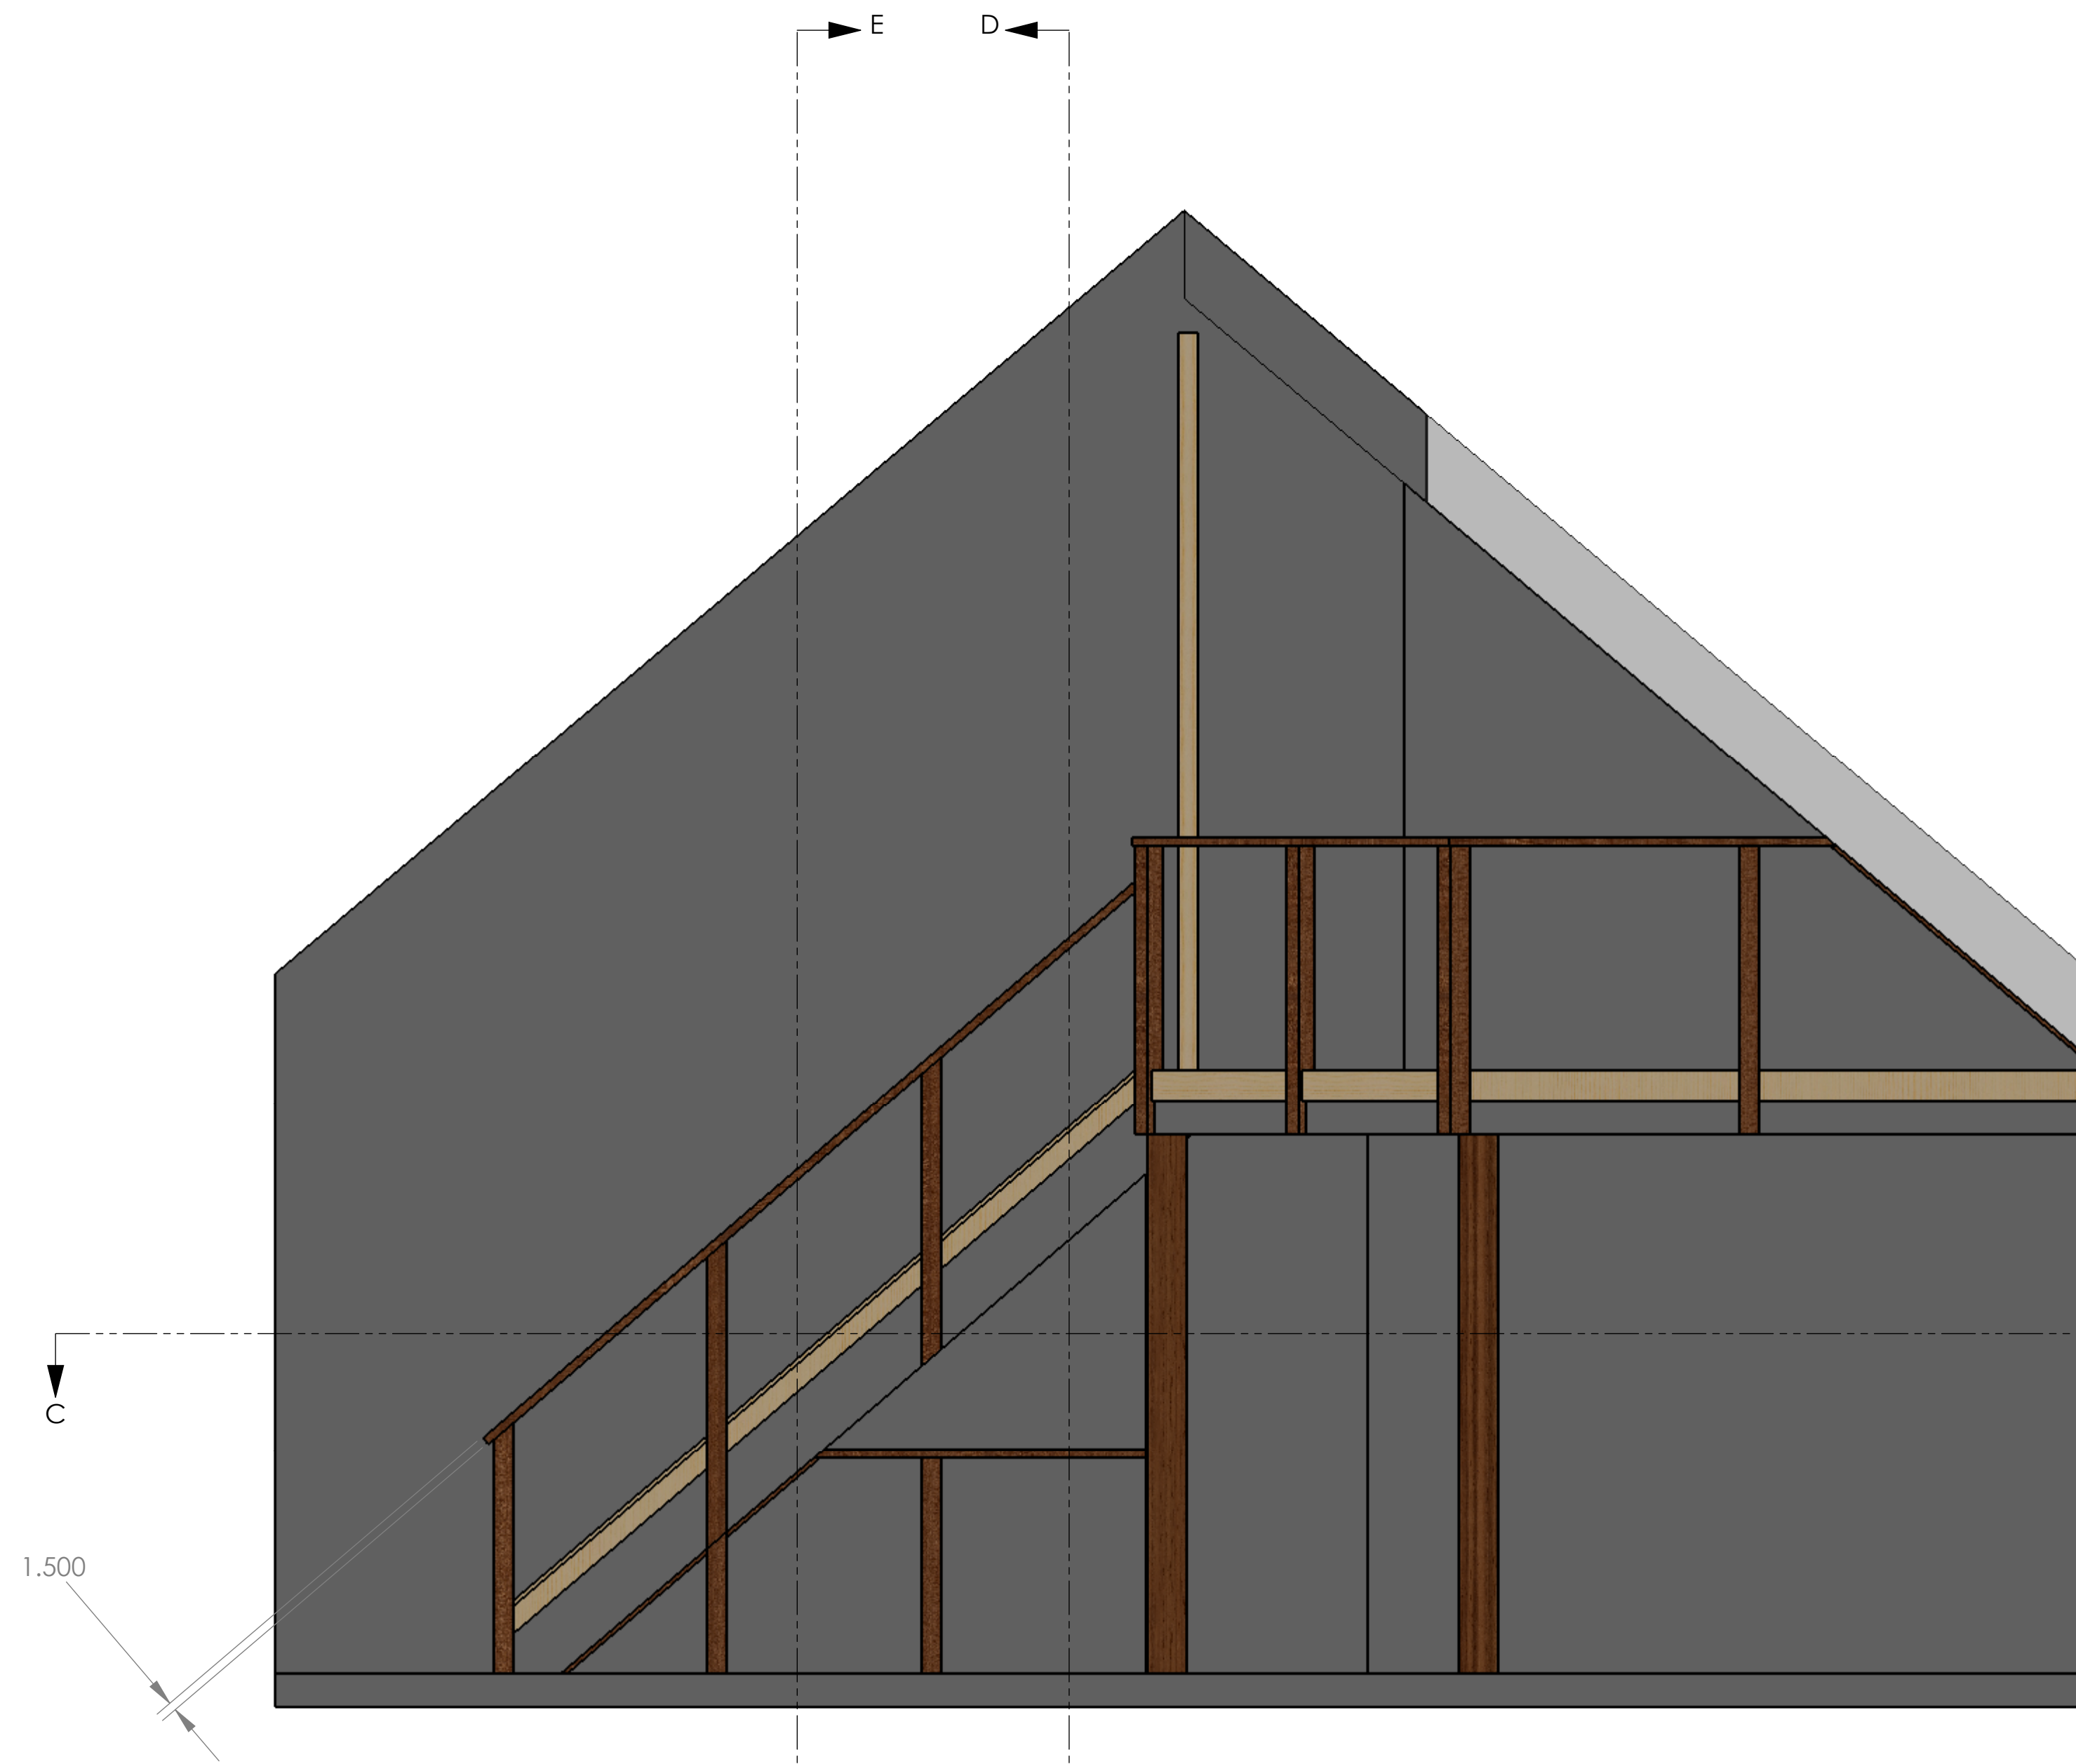


SECTION D-D

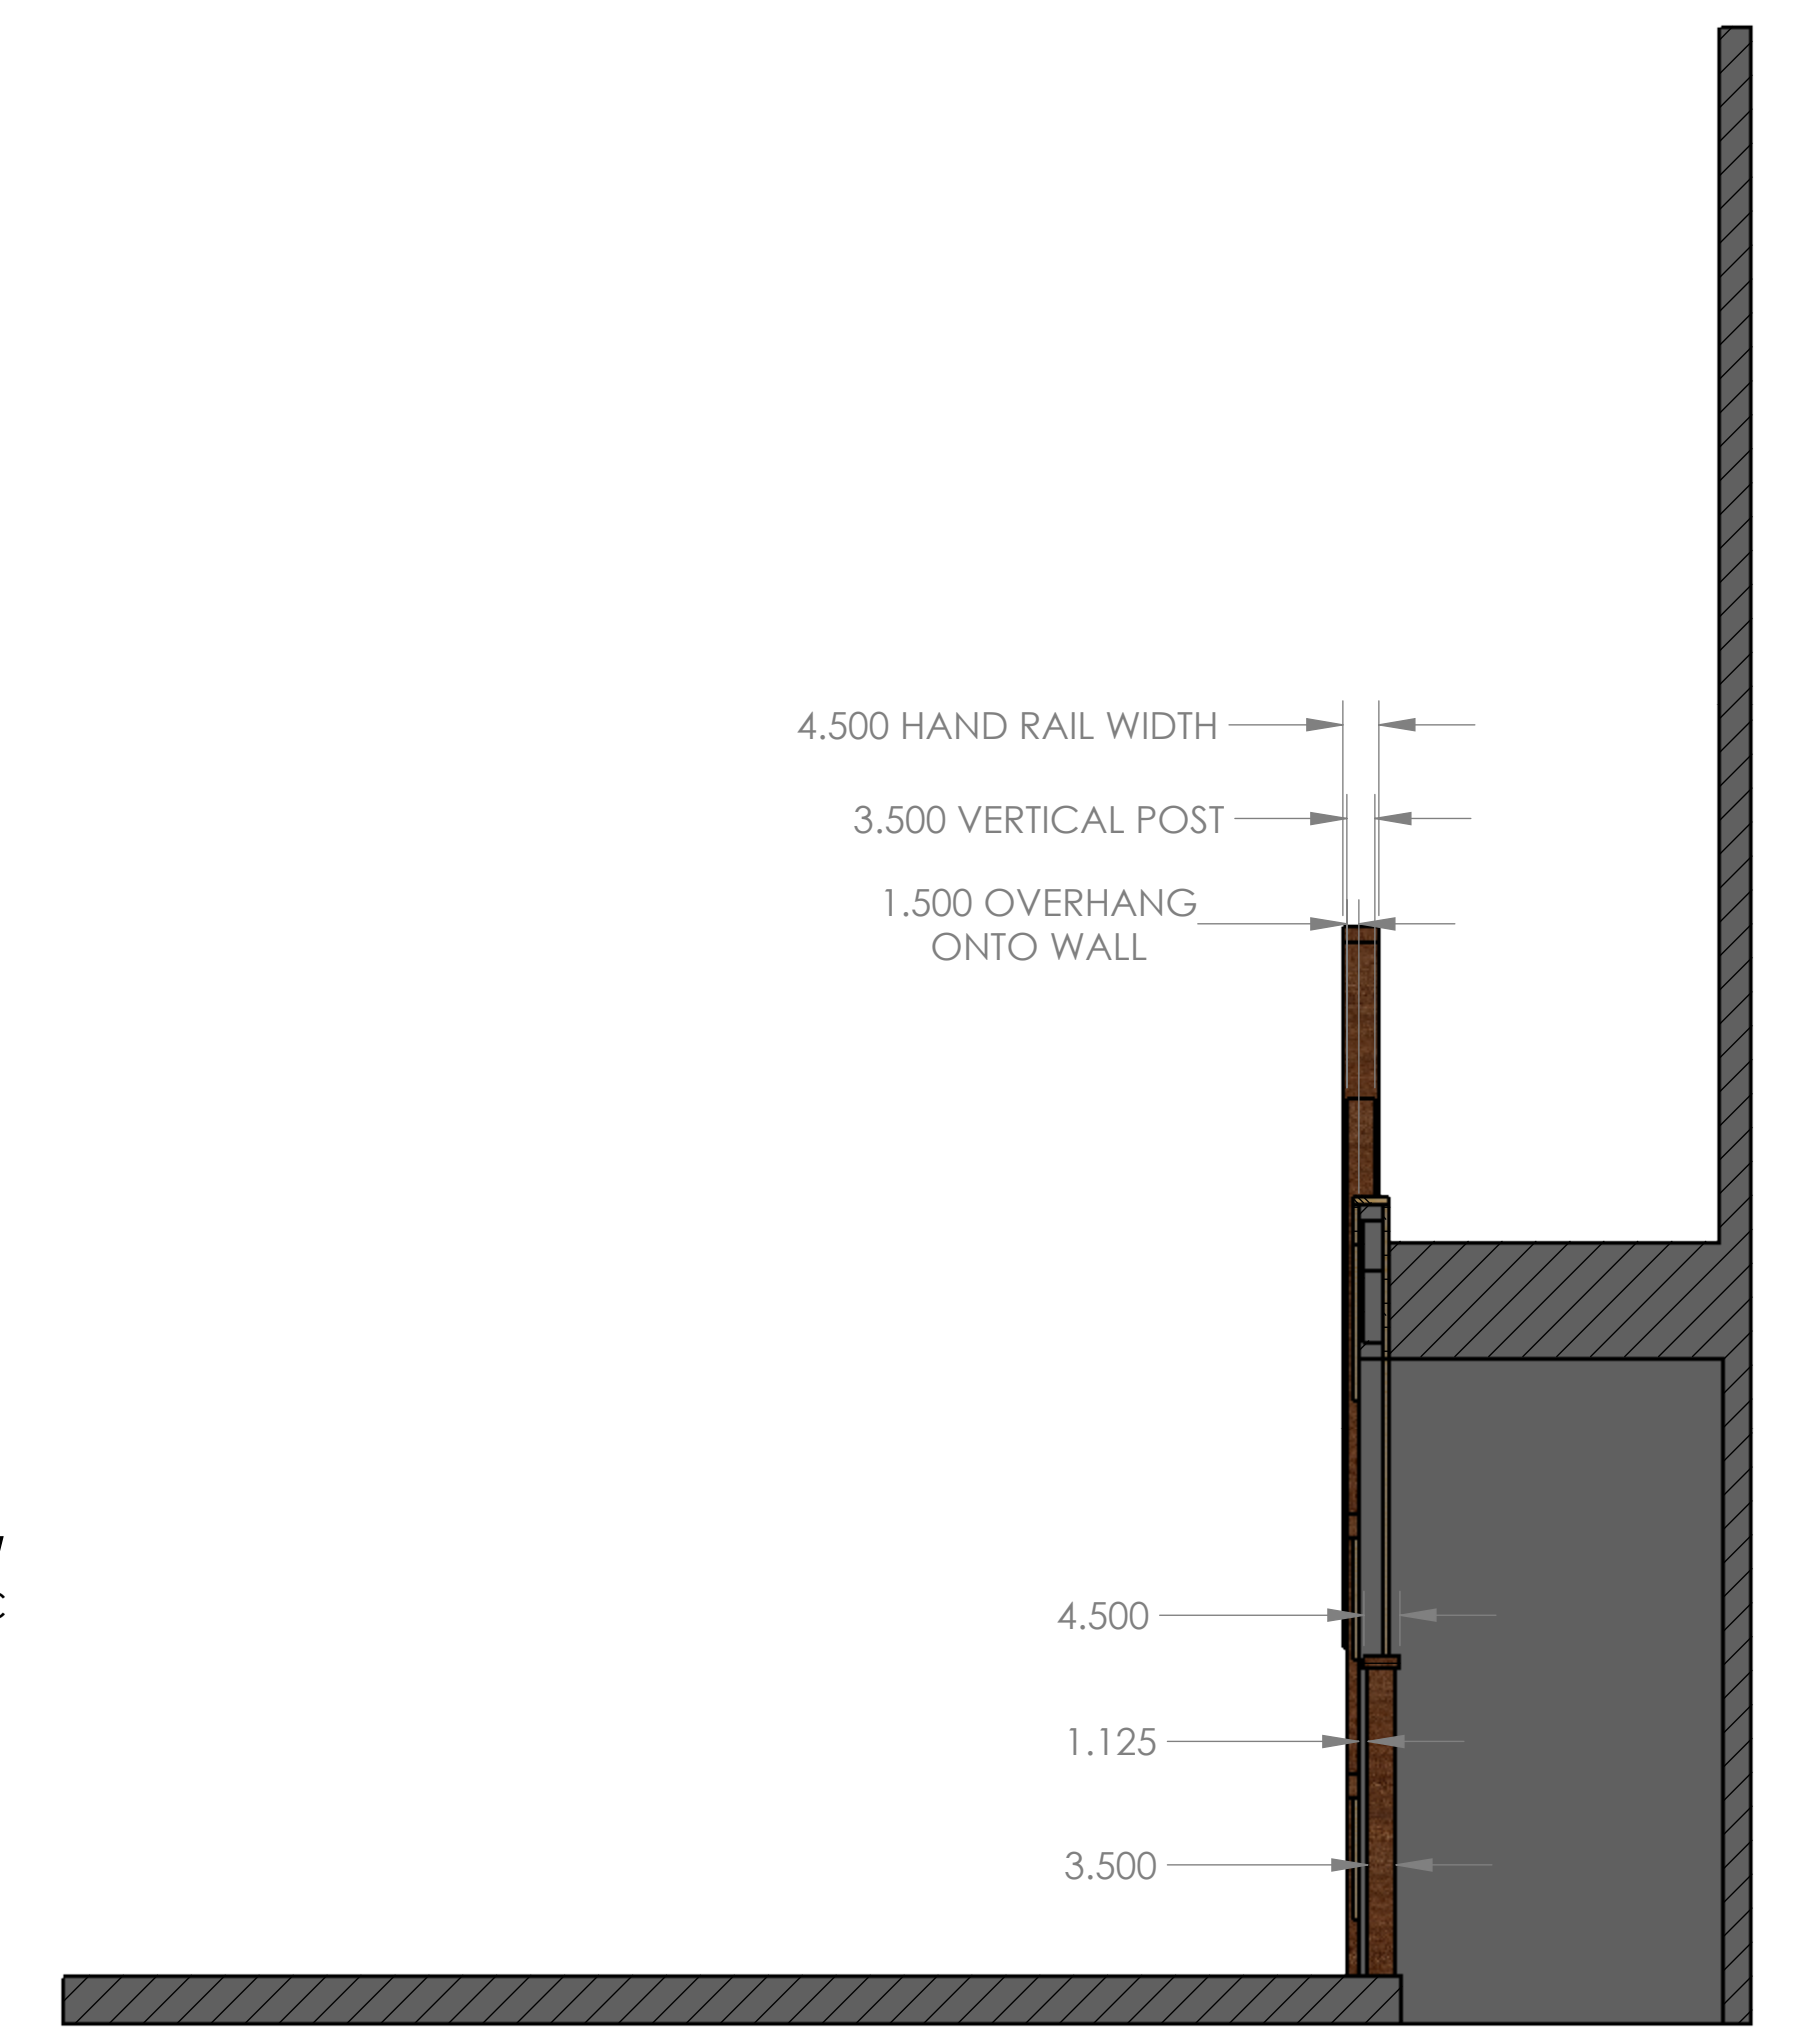



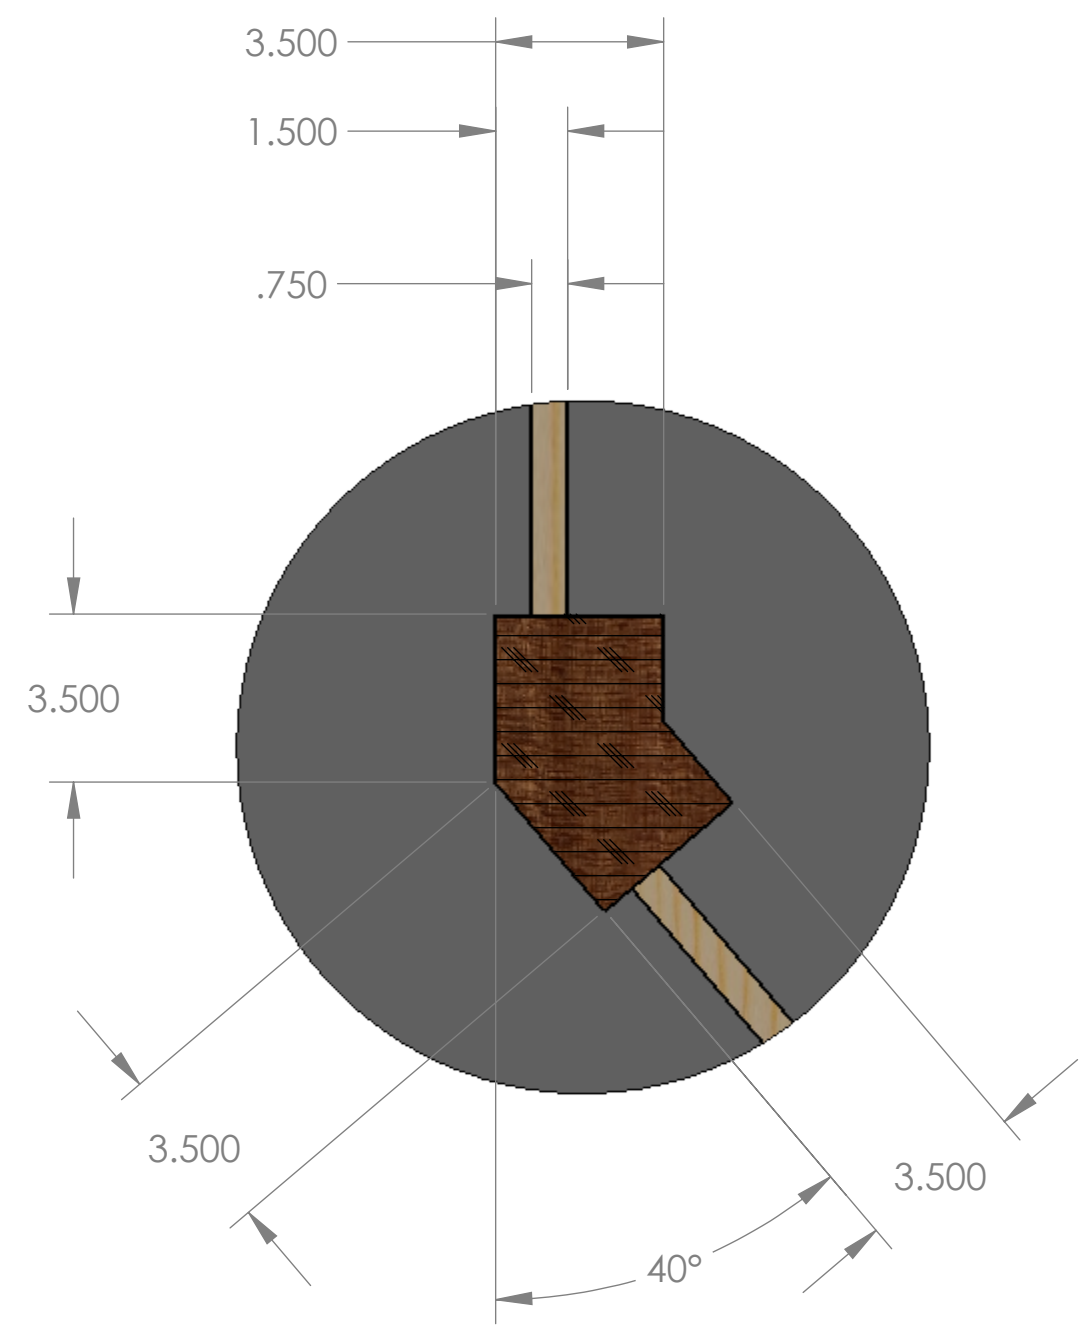

DETAIL K  
SCALE 1 : 4

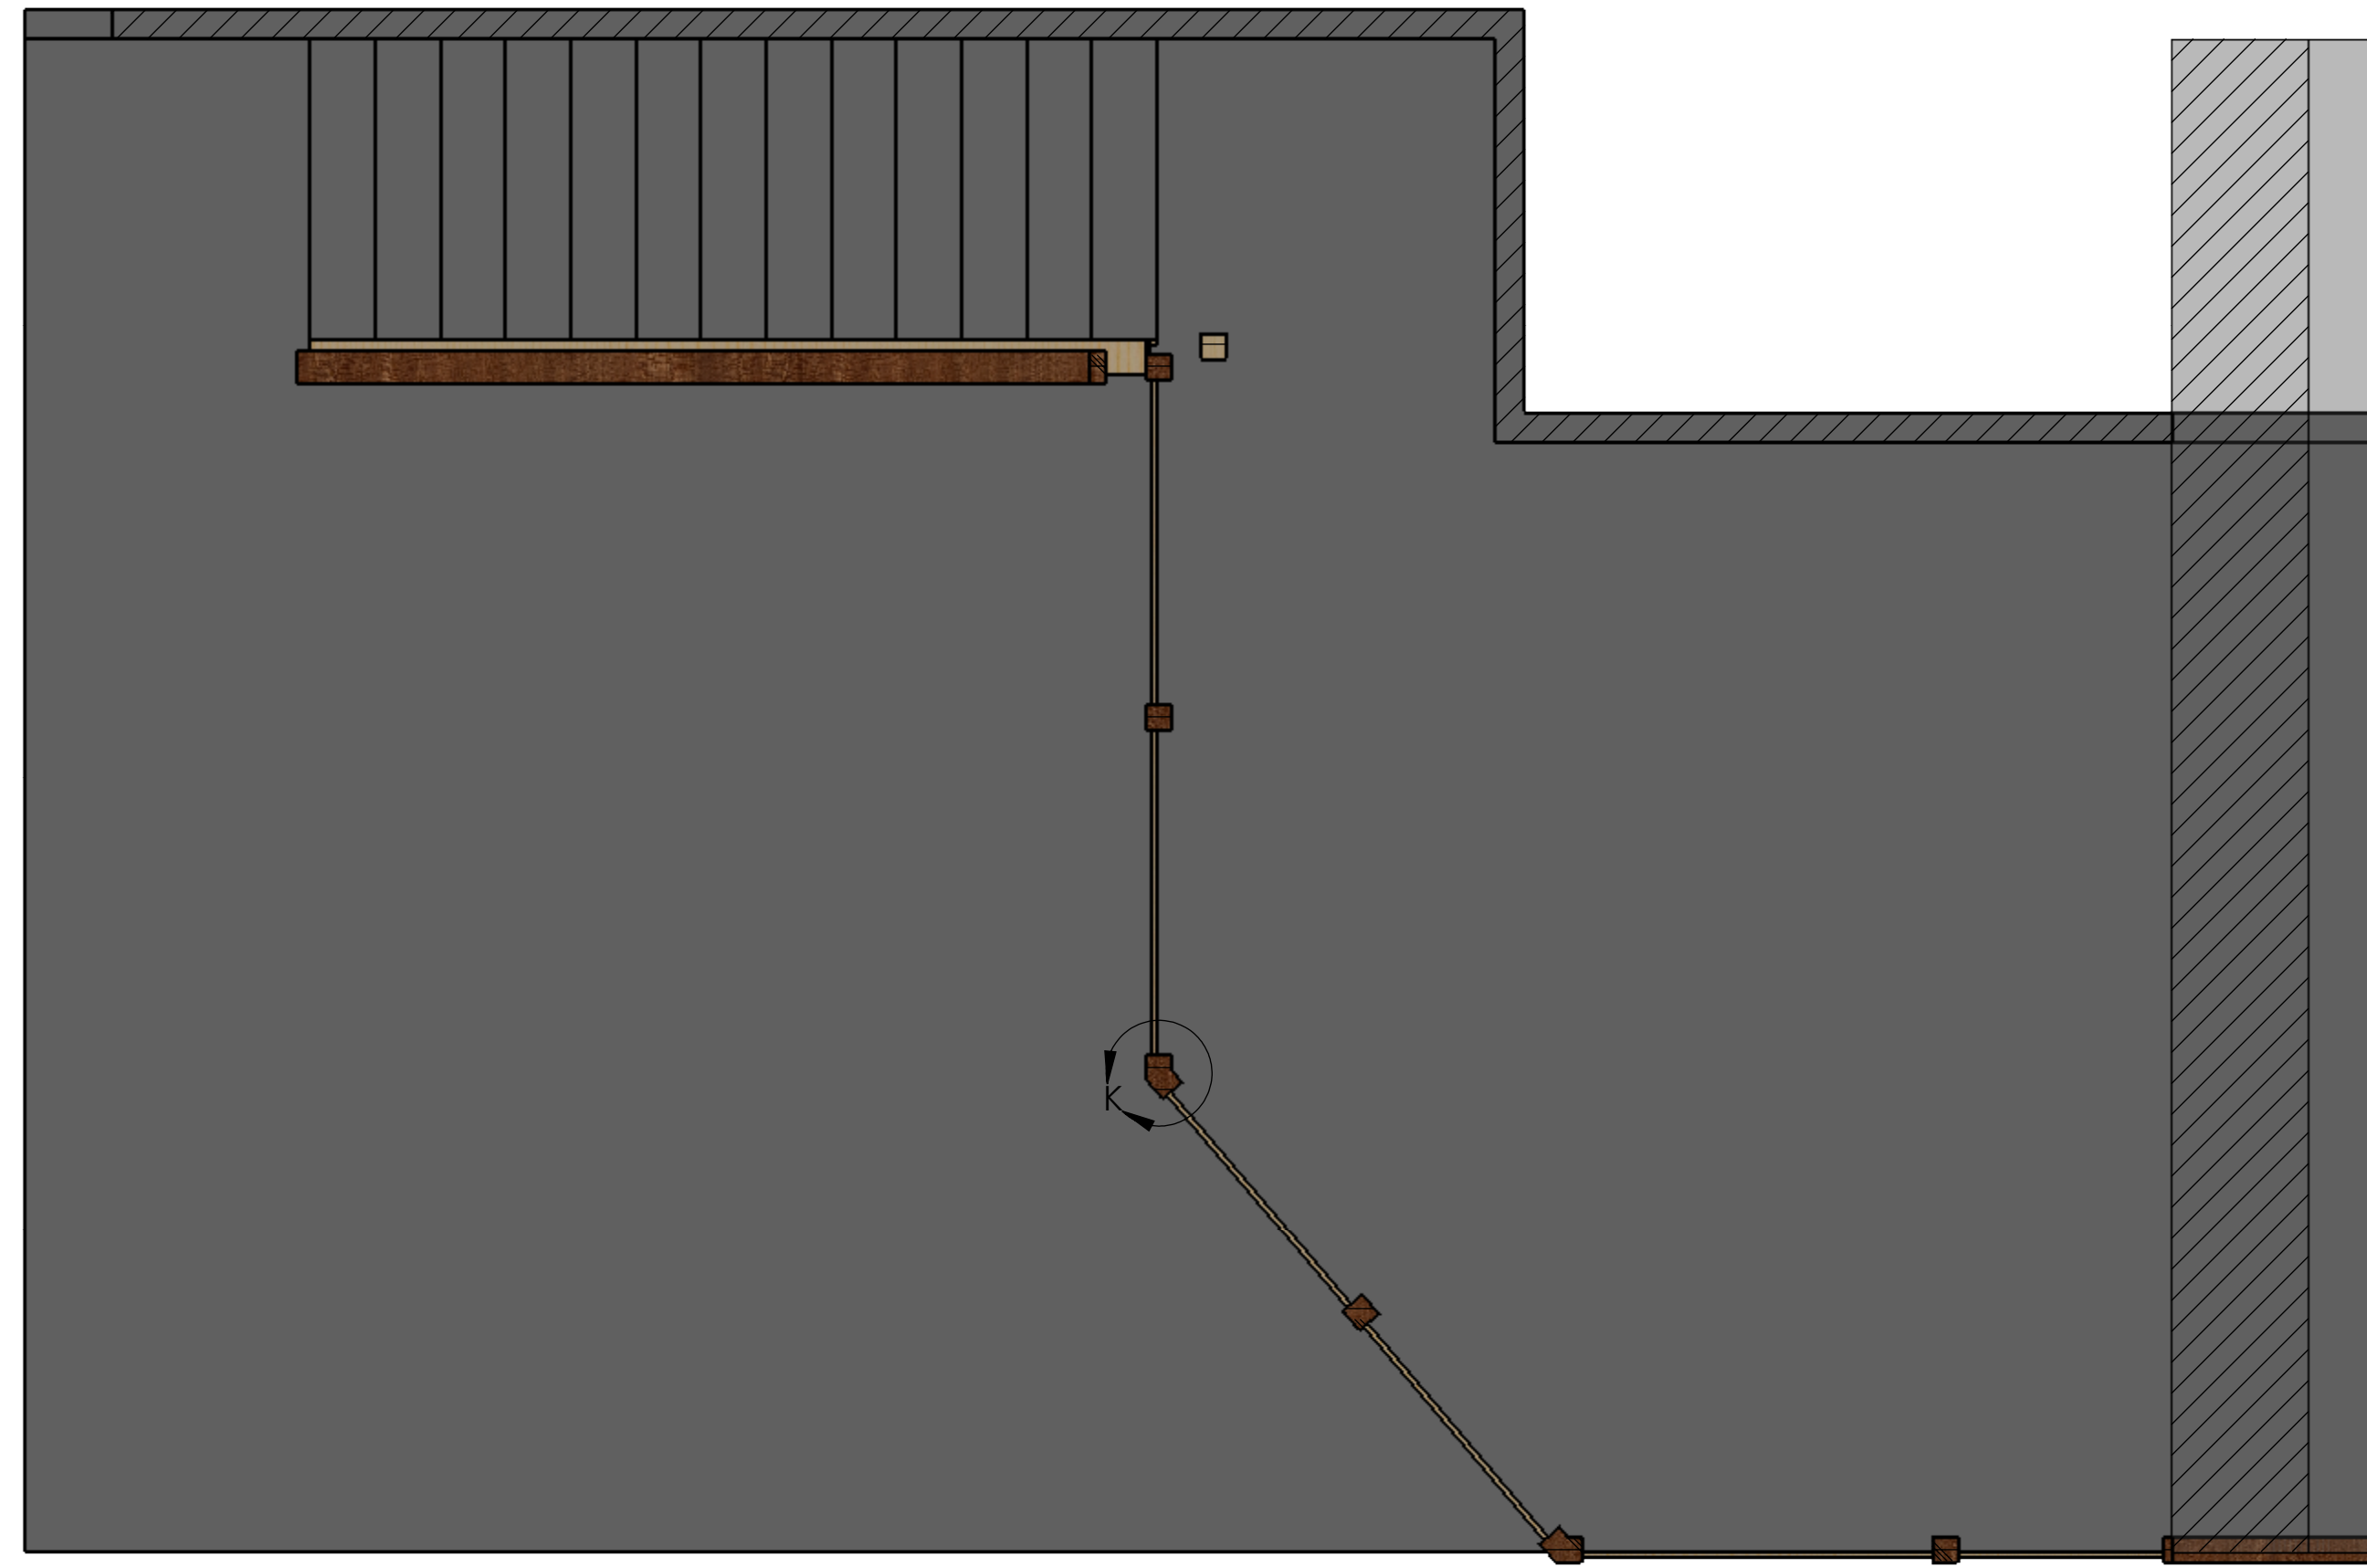

SECTION J-J

