



1. Gather materials.

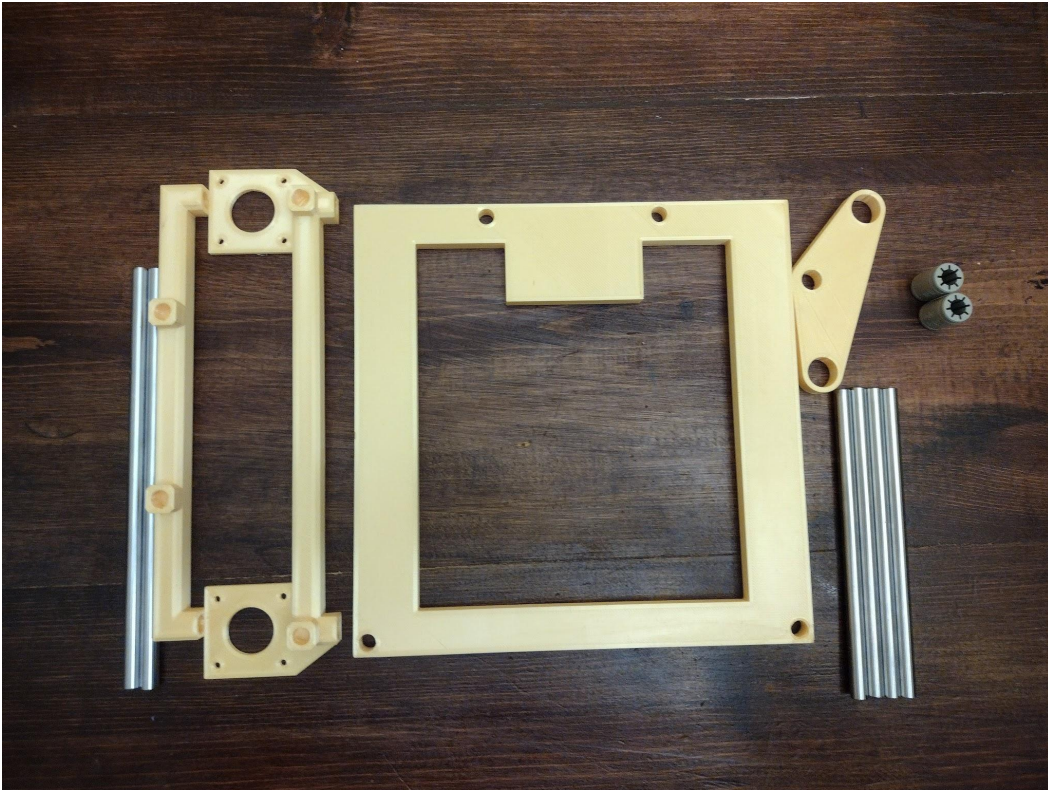

2. Assemble the front and back beams with 200mm linear rods.

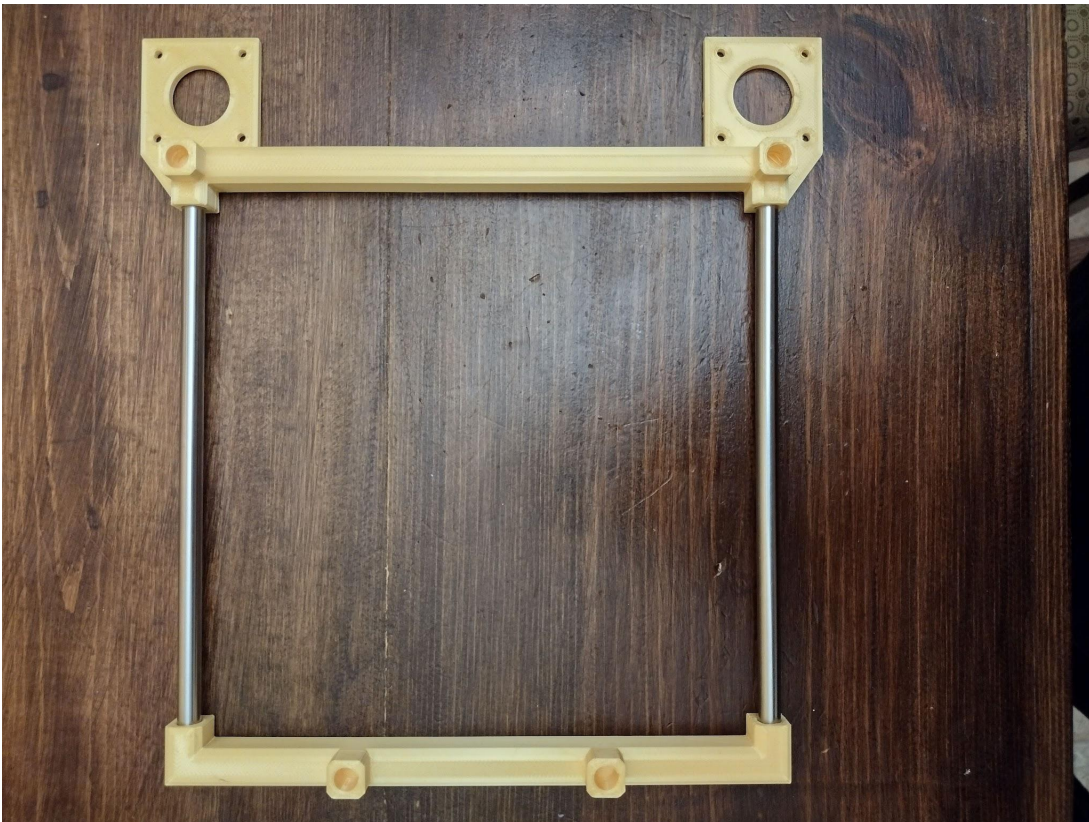




3. Insert linear bearings into Z gantry.




4. Put remaining linear rods into the base.

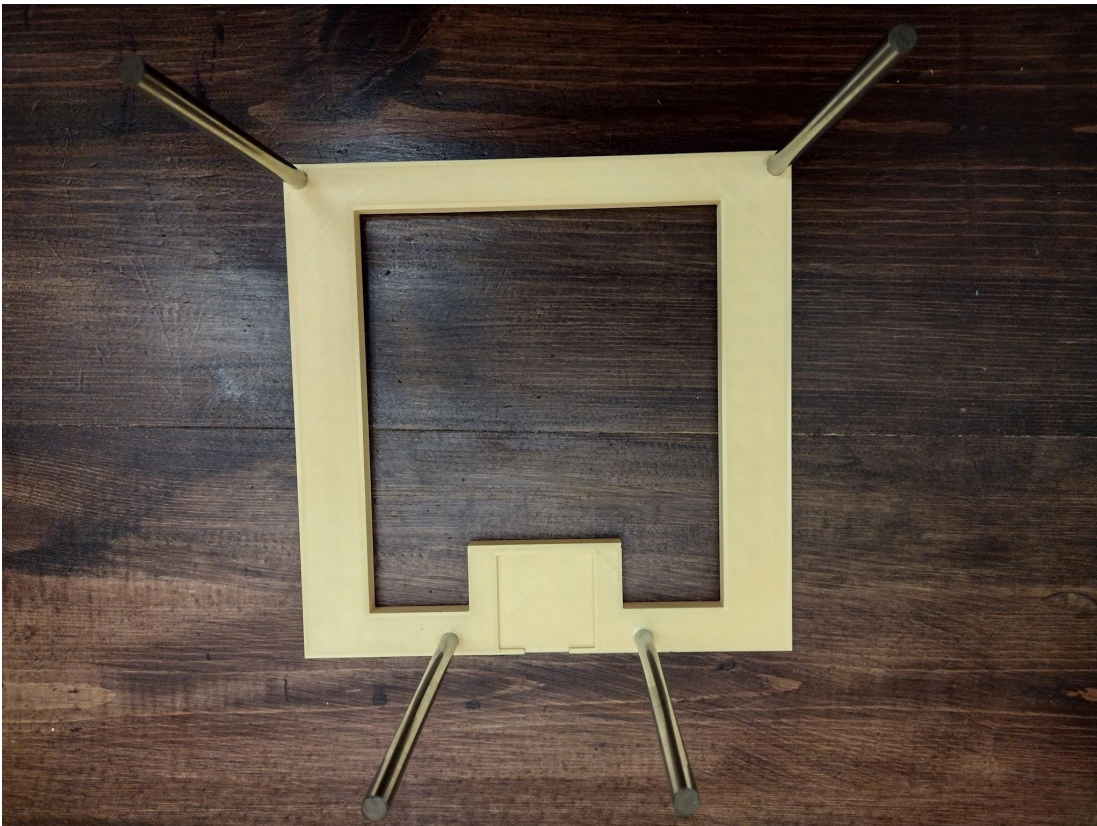




5. Put z gantry on back linear rods(the ones that are closer to each other).

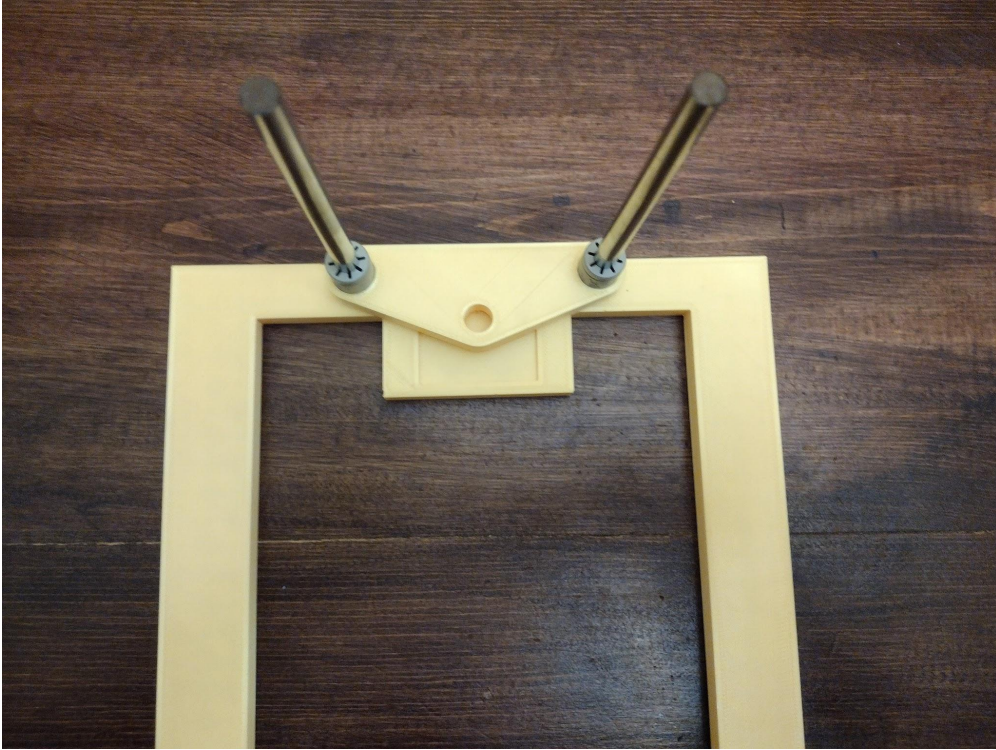

6. Put top assembly on linear rods attached to the base, make sure the linear rods slide all the way in.

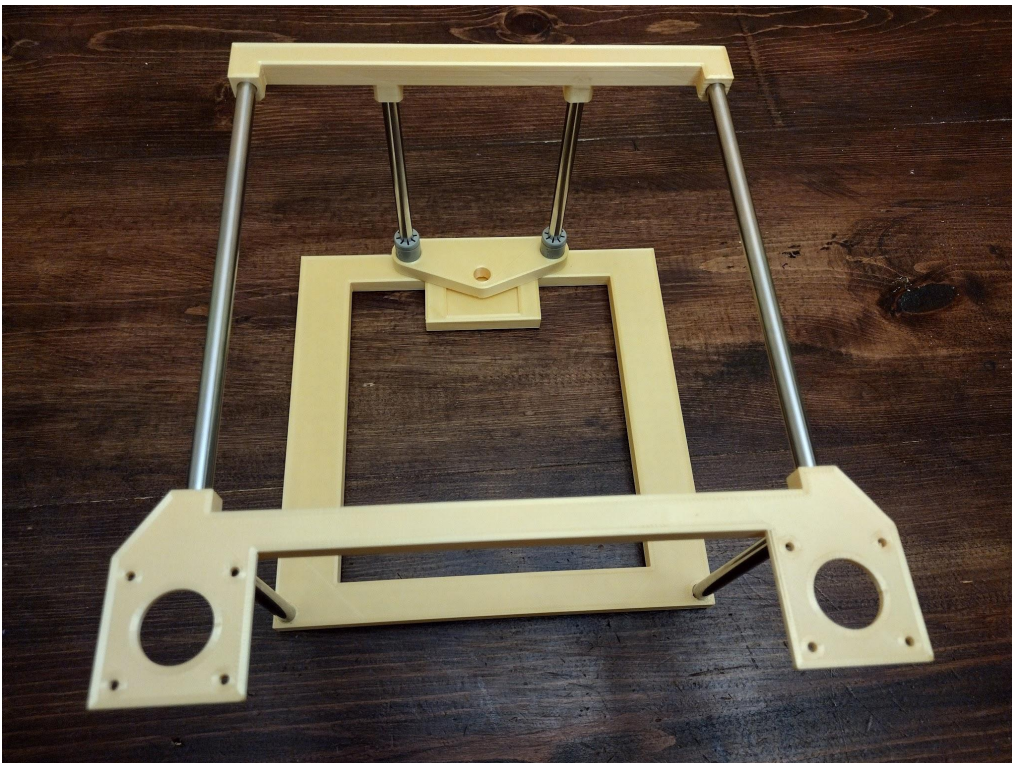

This is as close to complete as the project currently is.