




*Rabat*

---


*Functional Design*

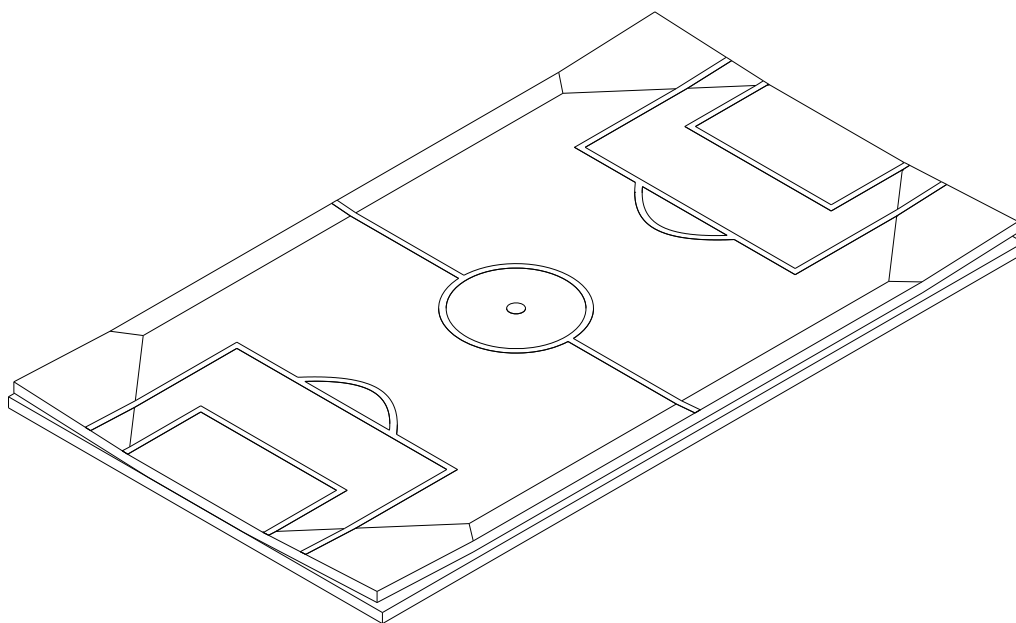


# Playing field Assembly Instructions

©André Mirtschink  
info@rabatzdesign.com  
Licensed under  
Creative Commons BY-NC-SA 4.0


## Overview Playing Field

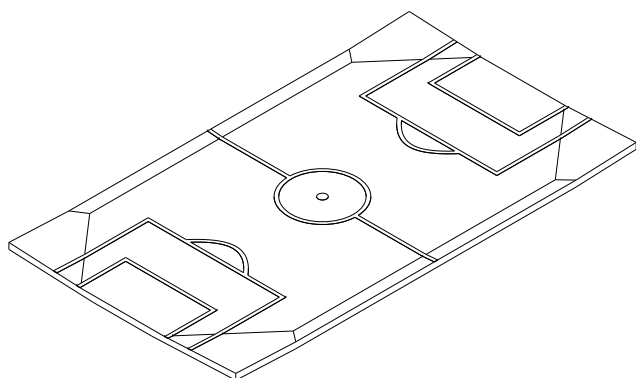


1 x Playing field  
1200 x 680 x 19 mm

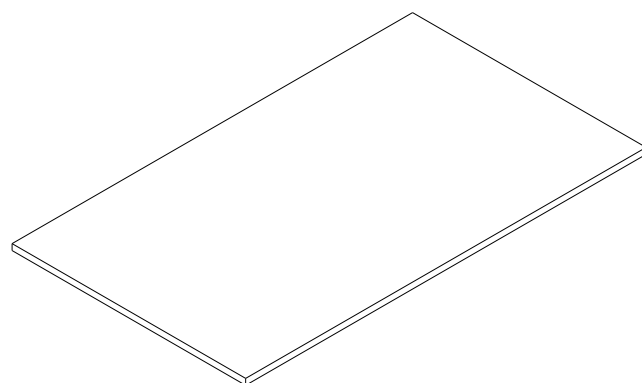

1 x Carrier plate  
1200 x 700 x 19 mm

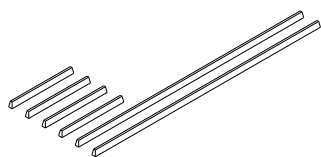

Wedges  
2 x 670 mm  
4 x 180 mm

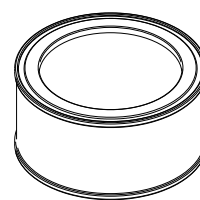


Contact adhesive  
100g

## Assembly of Playing Field

First, the corners and sidelines are raised by inserting wedges into the playfield grooves on the underside of the playing field. Then the playing field is glued to the carrier plate.


- Corner elevation high: 11 mm
- Sideline elevation high: 2 mm

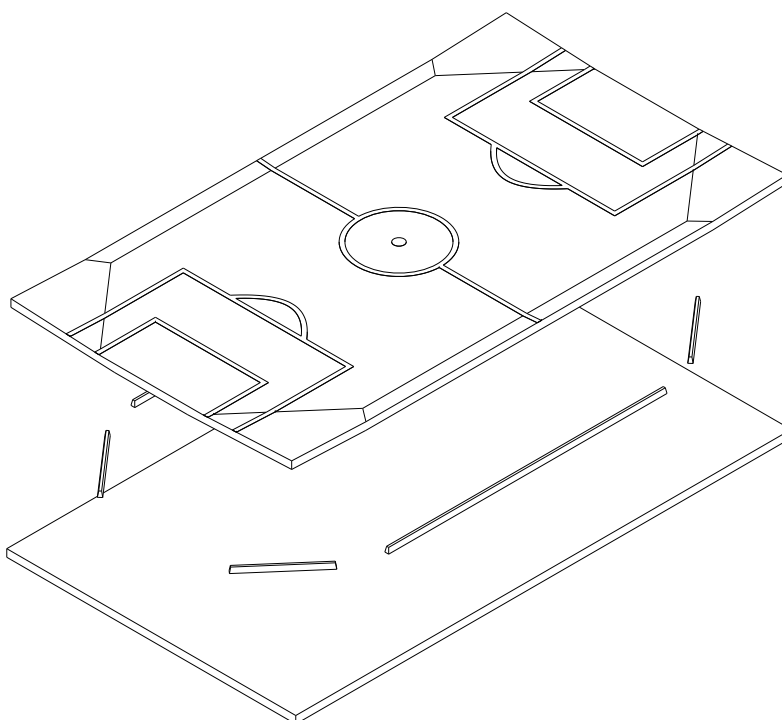

Side view

Elevation sideline

Elevation corners

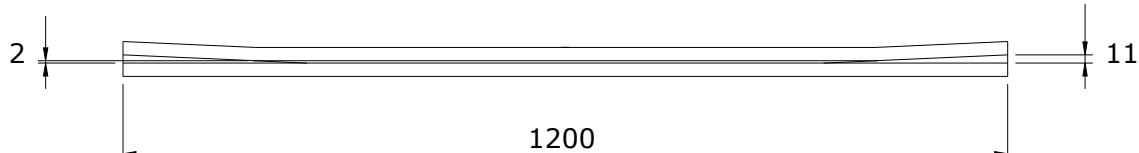

Front view

