





Voltage Measurement

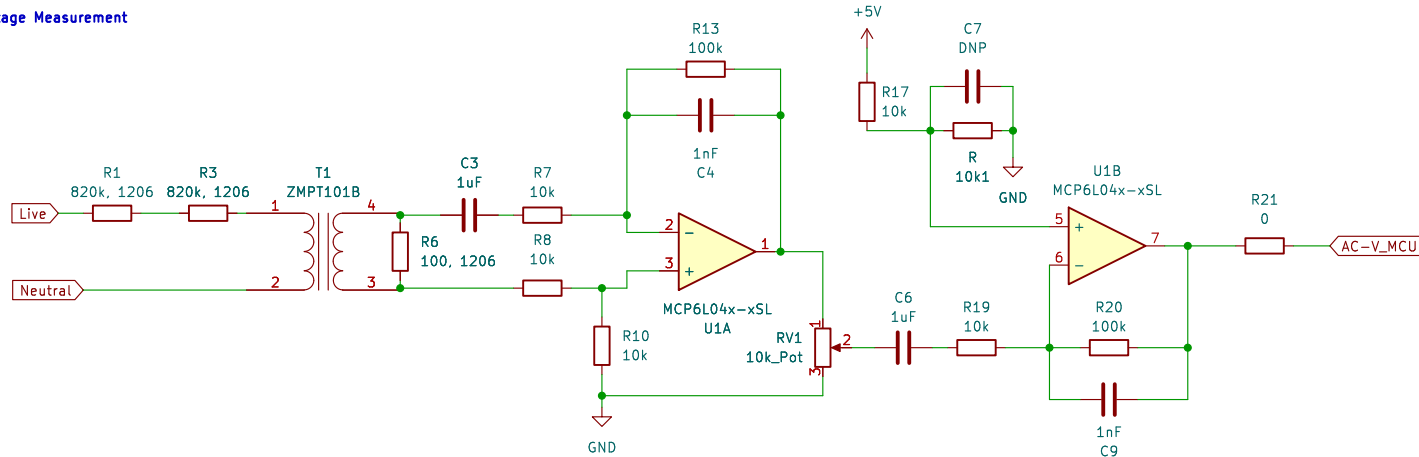


To do:
Place this on Daughter Board near MCU.

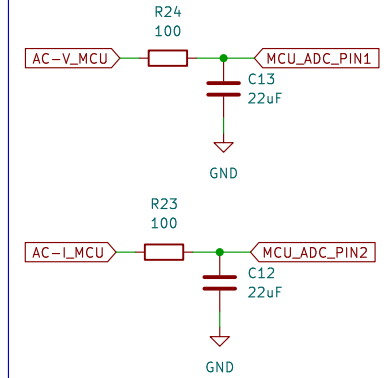

Current Measurement

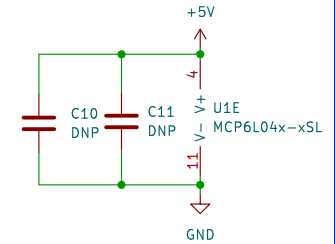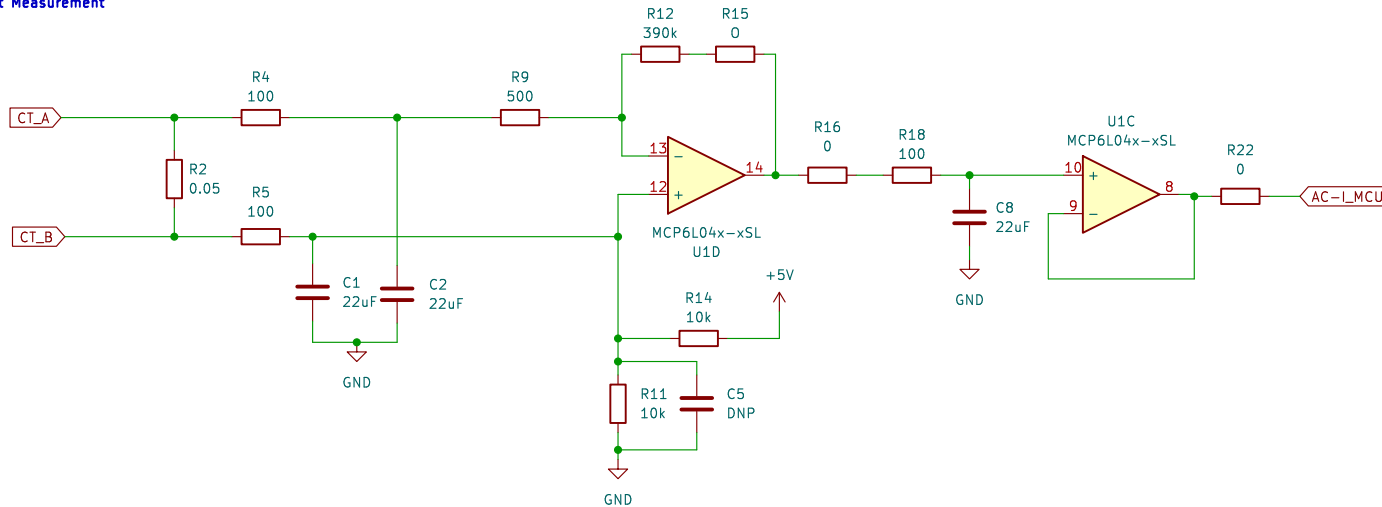


CT Connector

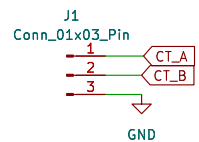

Note: GND for Shielding of CT Wires.

Connector to MCU

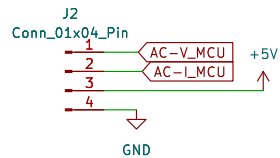

Sheet: /V&I_Measurement/
File: untitled.kicad_sch

Title:

Size: A4

Date:

KiCad E.D.A. kicad 7.0.7

Rev:

Id: 2/2