



DAY- 2 TASKS


Sai Kyvalya Duvvuri

1. Create a UDT named “ConveyorUDT”. Add a parameter named “ConveyorNumber”.

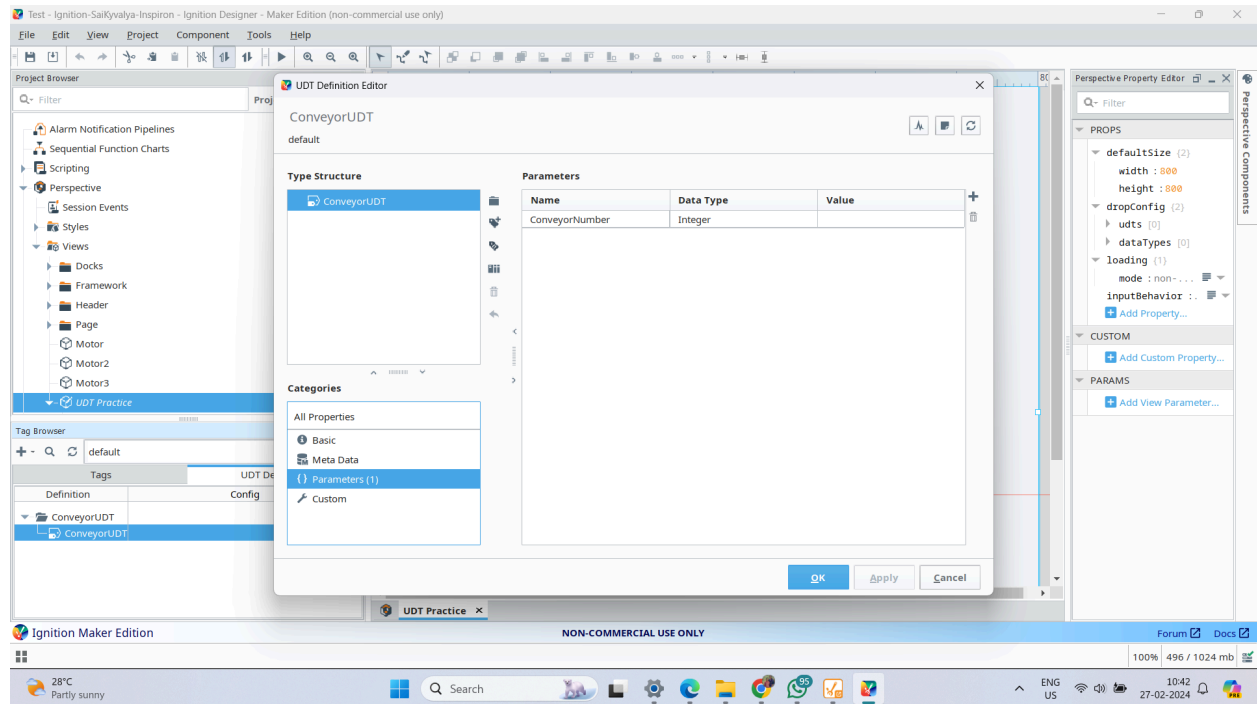


In the LabworkSim device there are many Conveyor folders. Add all 4 tags of any of the Conveyor folders to the UDT (HOA, Speed, Totalizer, & Amps).

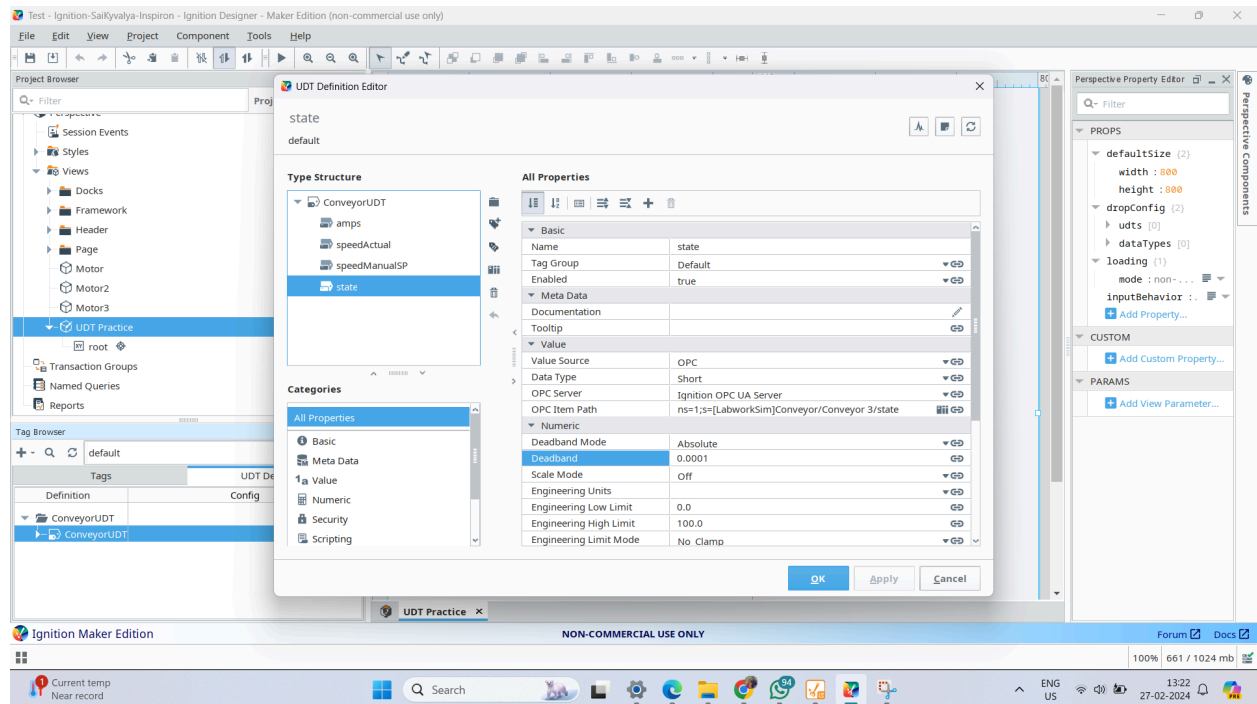


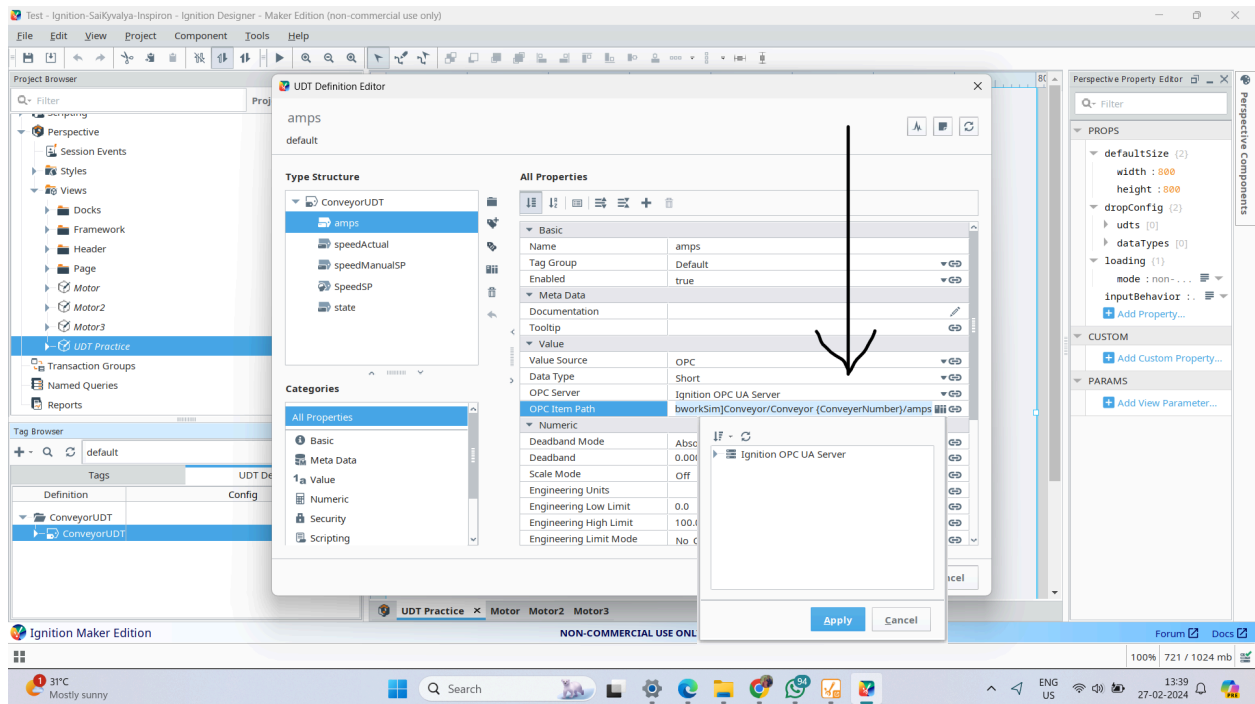


2. Create a Folder named “Conveyor Instances” in the Tag Browser

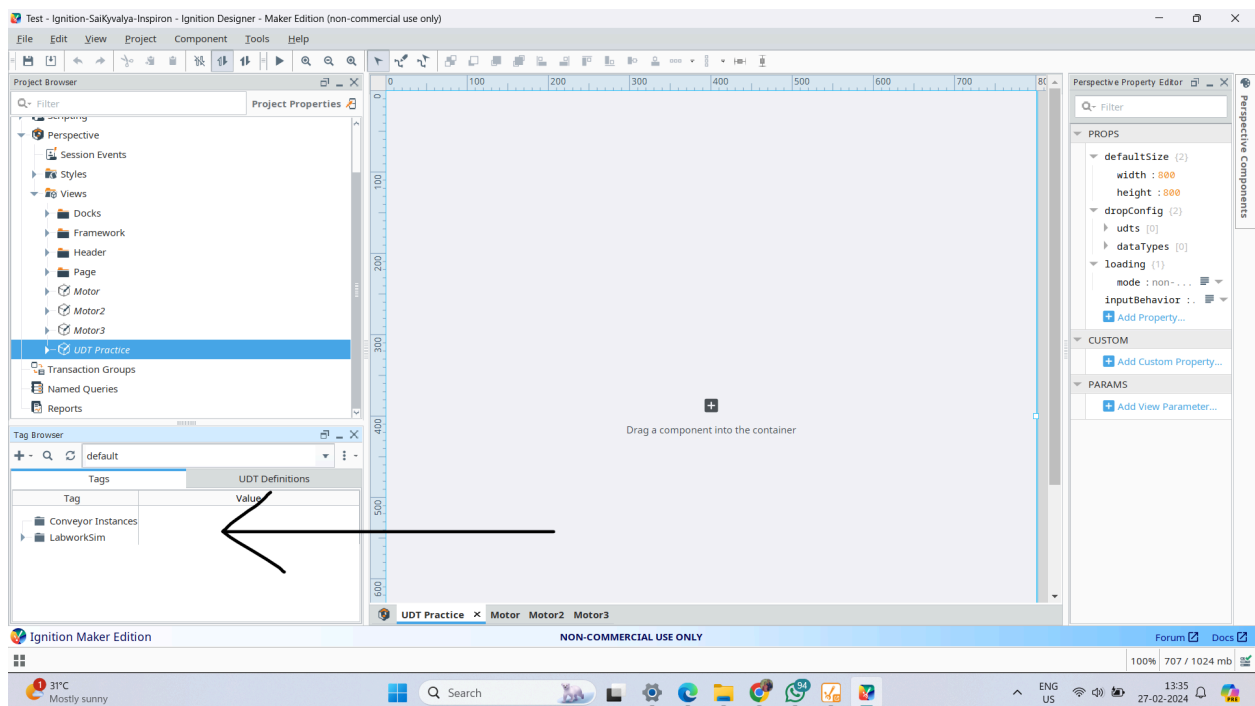



- 3. Create instances for all 15 conveyors in the Conveyor Instances folder**
Conveyors must be named using their number (“Conveyor 1”, “Conveyor 2”, “Conveyor 3”, etc).

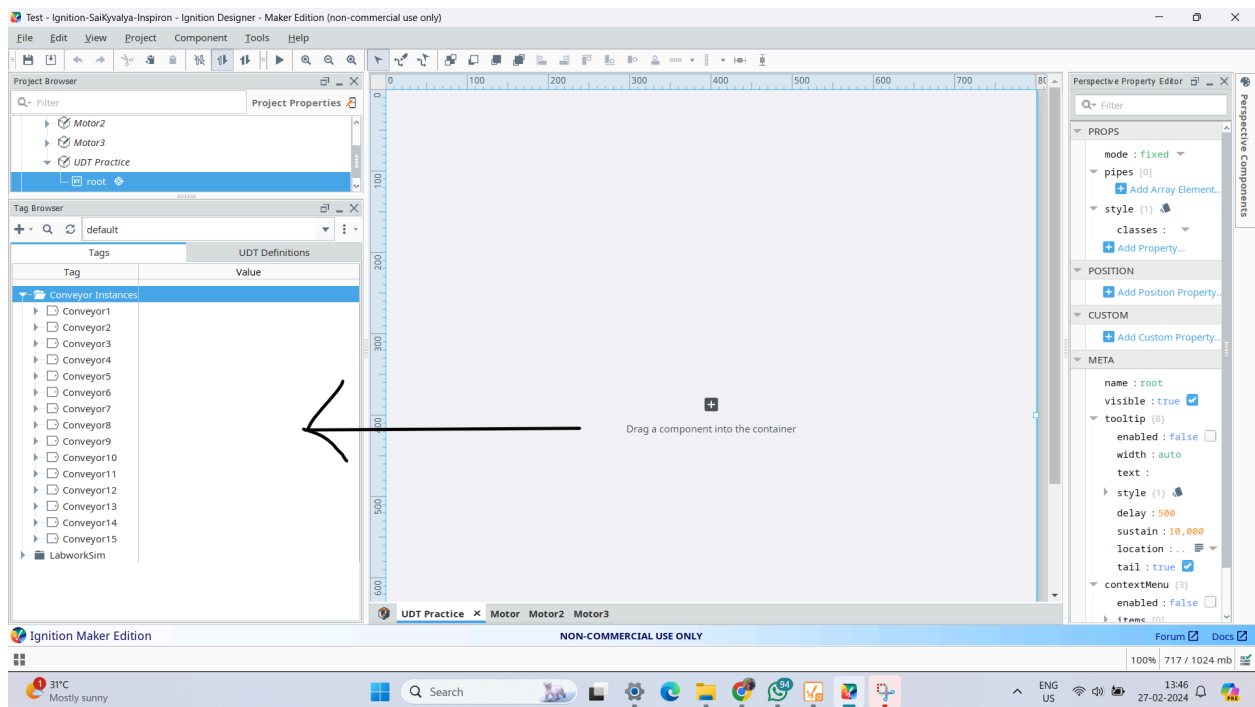


- 4. In Vision, create a template named “Conveyor Template”**

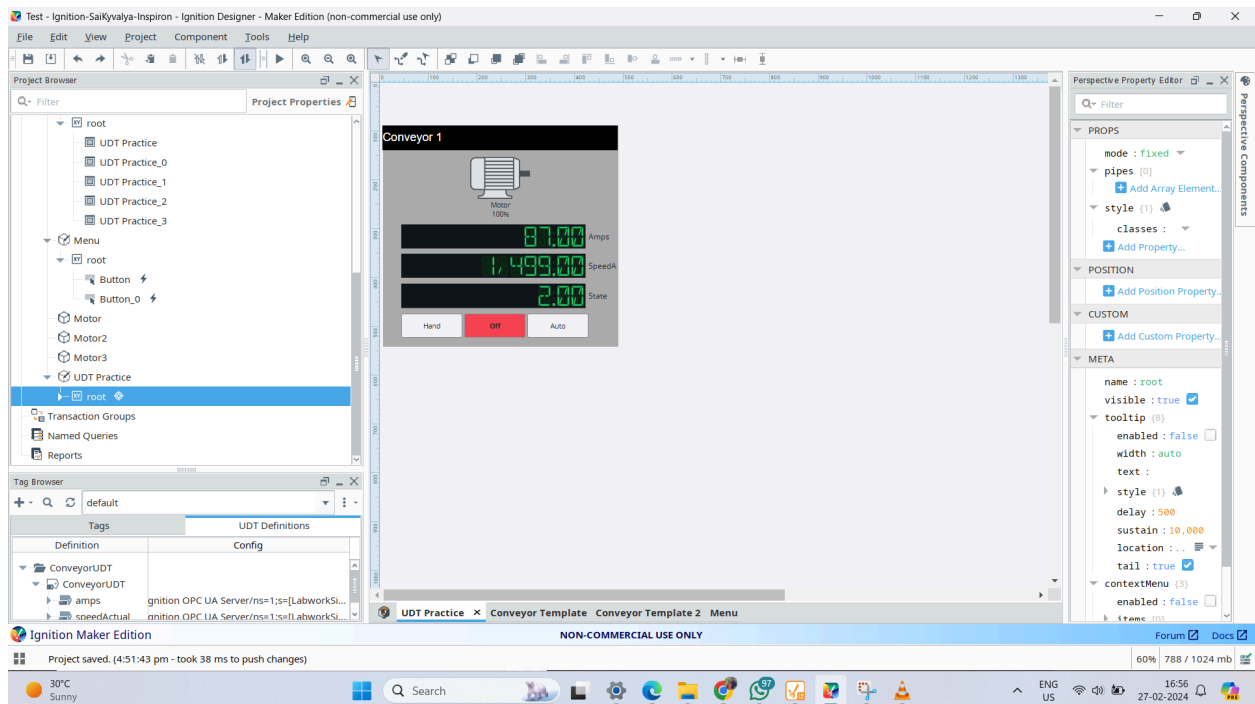


5. Creating 2 windows for conveyor templates

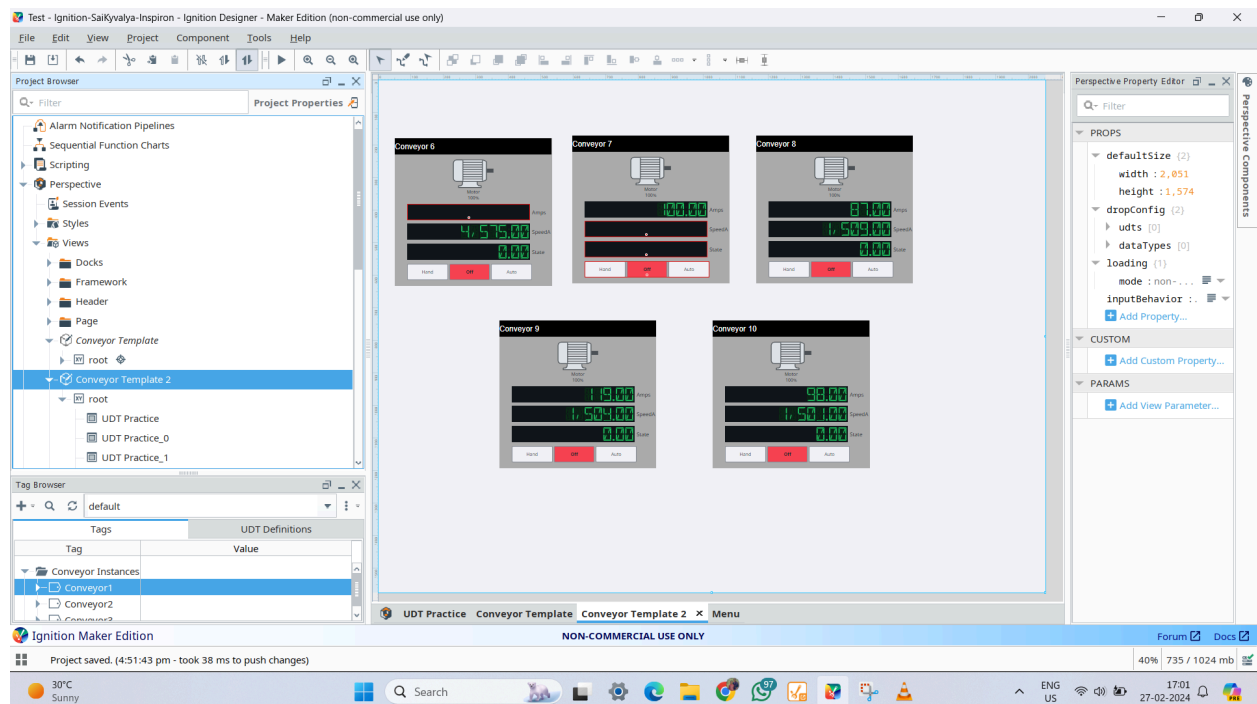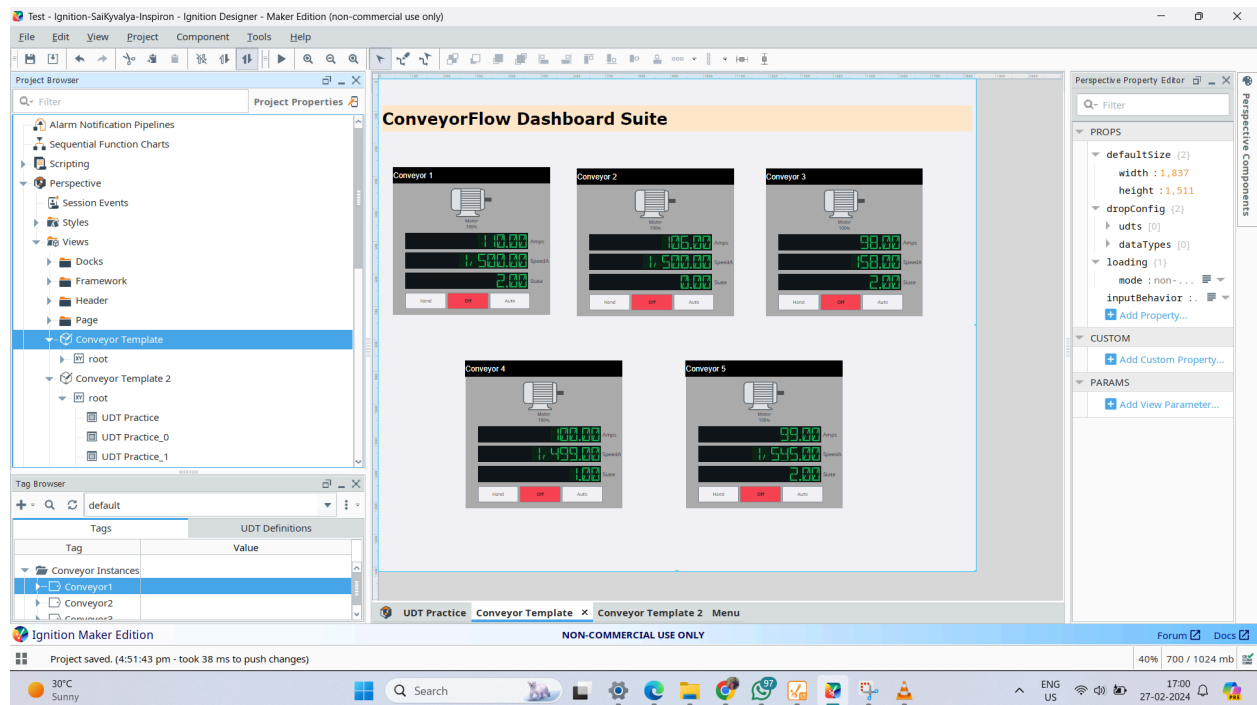

6. Creating Navigation Pages

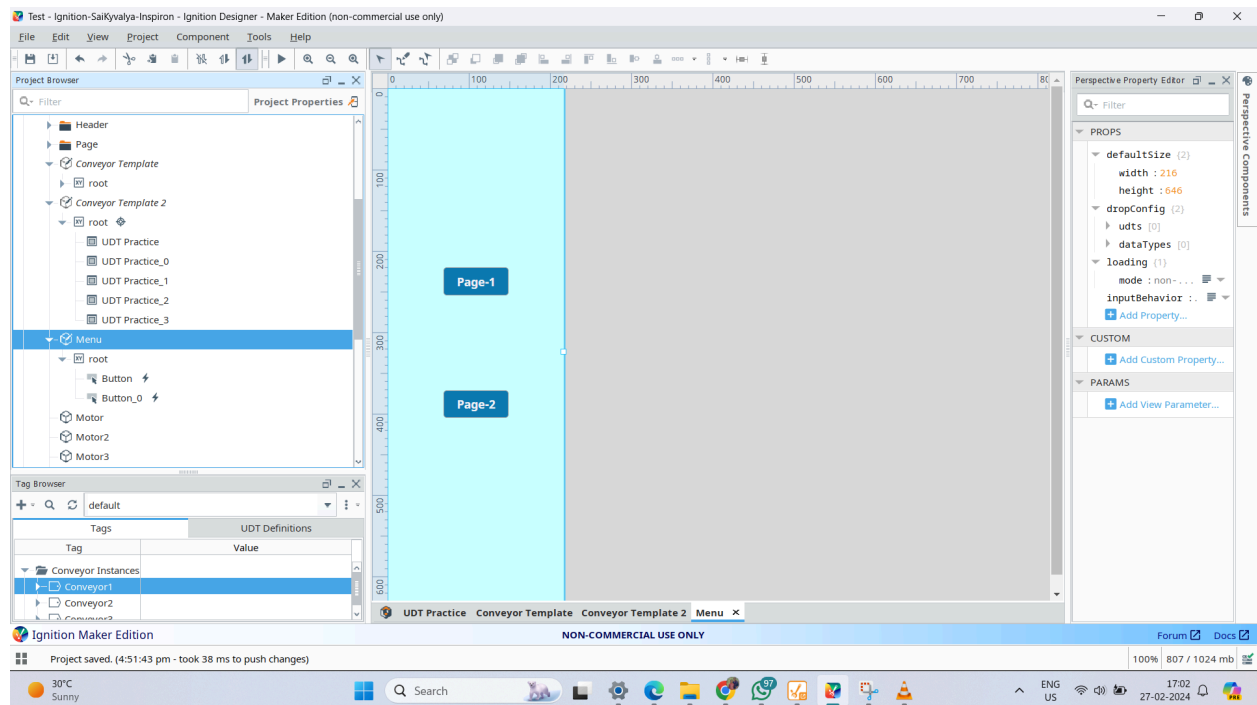

7. Test (Launching URL)

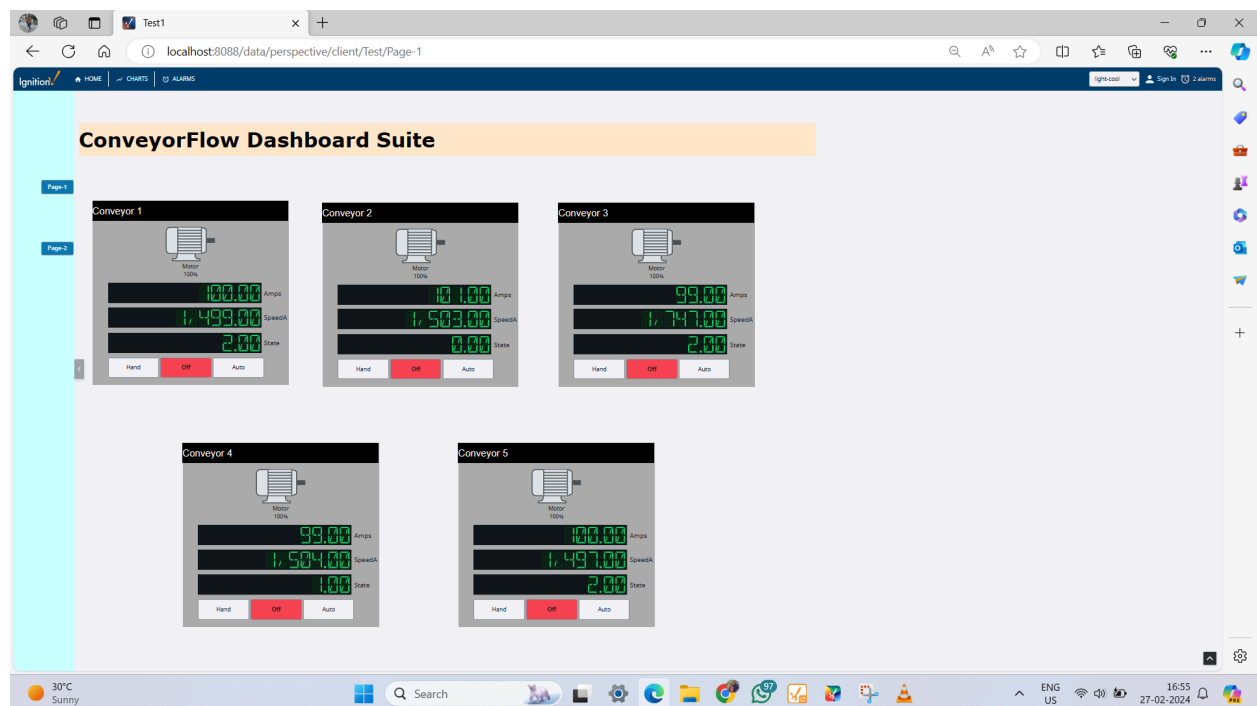

Test1

localhost:8088/data/perspective/client/Test/Page-2

Ignition

HOME

CHARTS

ALARMS

Sign out

1 alarm

Page 1

Page 2

Conveyor 6

Motor 100%

4.38

1.00

0.00

Hand

OFF

Auto

Conveyor 7

Motor 100%

100.00

1.49

0.00

Hand

OFF

Auto

Conveyor 8

Motor 100%

10.10

1.49

0.00

Hand

OFF

Auto

Conveyor 9

Motor 100%

98.00

1.49

0.00

Hand

OFF

Auto

Conveyor 10

Motor 100%

10.10

1.49

0.00

Hand

OFF

Auto

30°C Sunny

Search

ENG US

16:56

27-02-2024