

LIMITED EDITION


THE DRYSDALE

LAZY DAY DRINKER


Adirondack Chair Building Plans

Creator @pixypond 



Consult ChatGPT or a member of your local LGBTQI+ community for help with construction. And remember, in the wise words of The Savage: Failure is always an option.

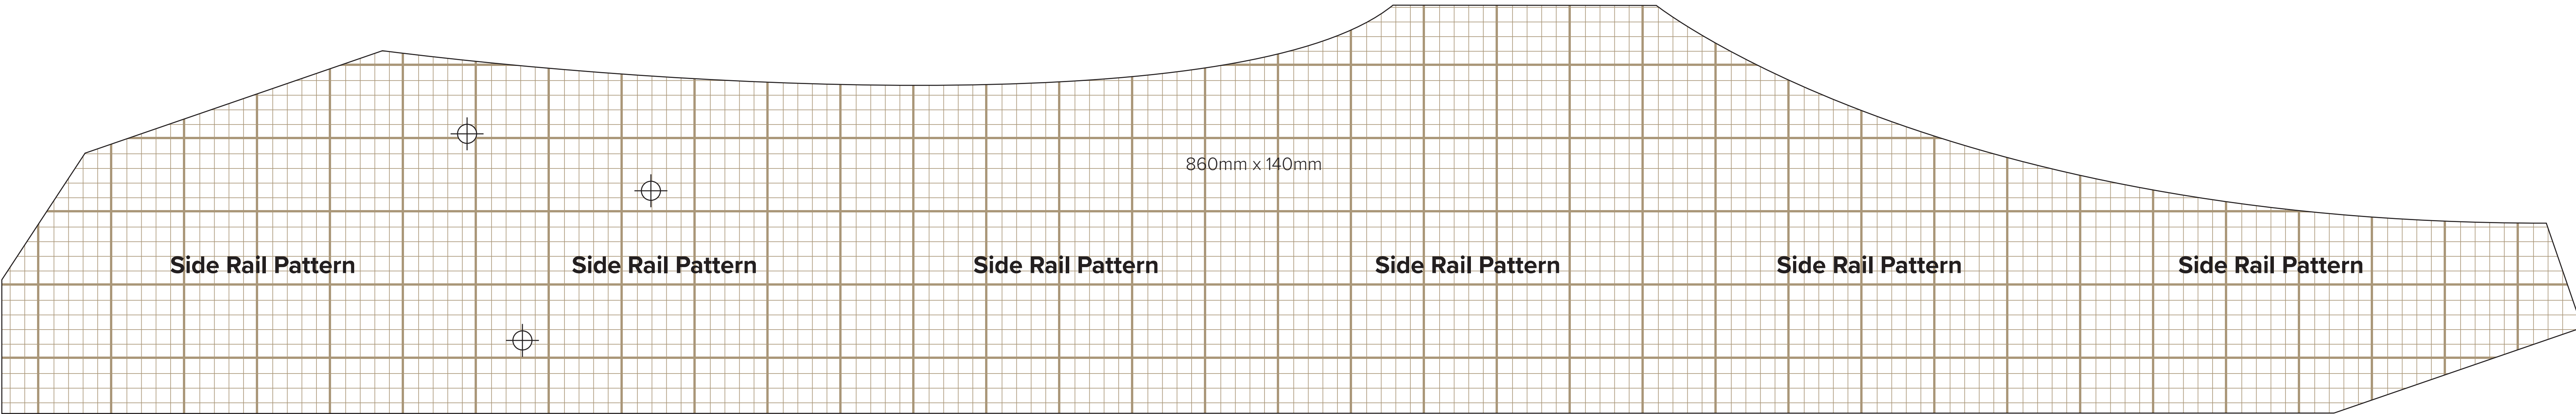


Screw hole position is dependant on the thickness of wood you are using. The holes marked are for 19 mm thick wood.
If you are using a different thickness of wood then use markings as a rough guide only.

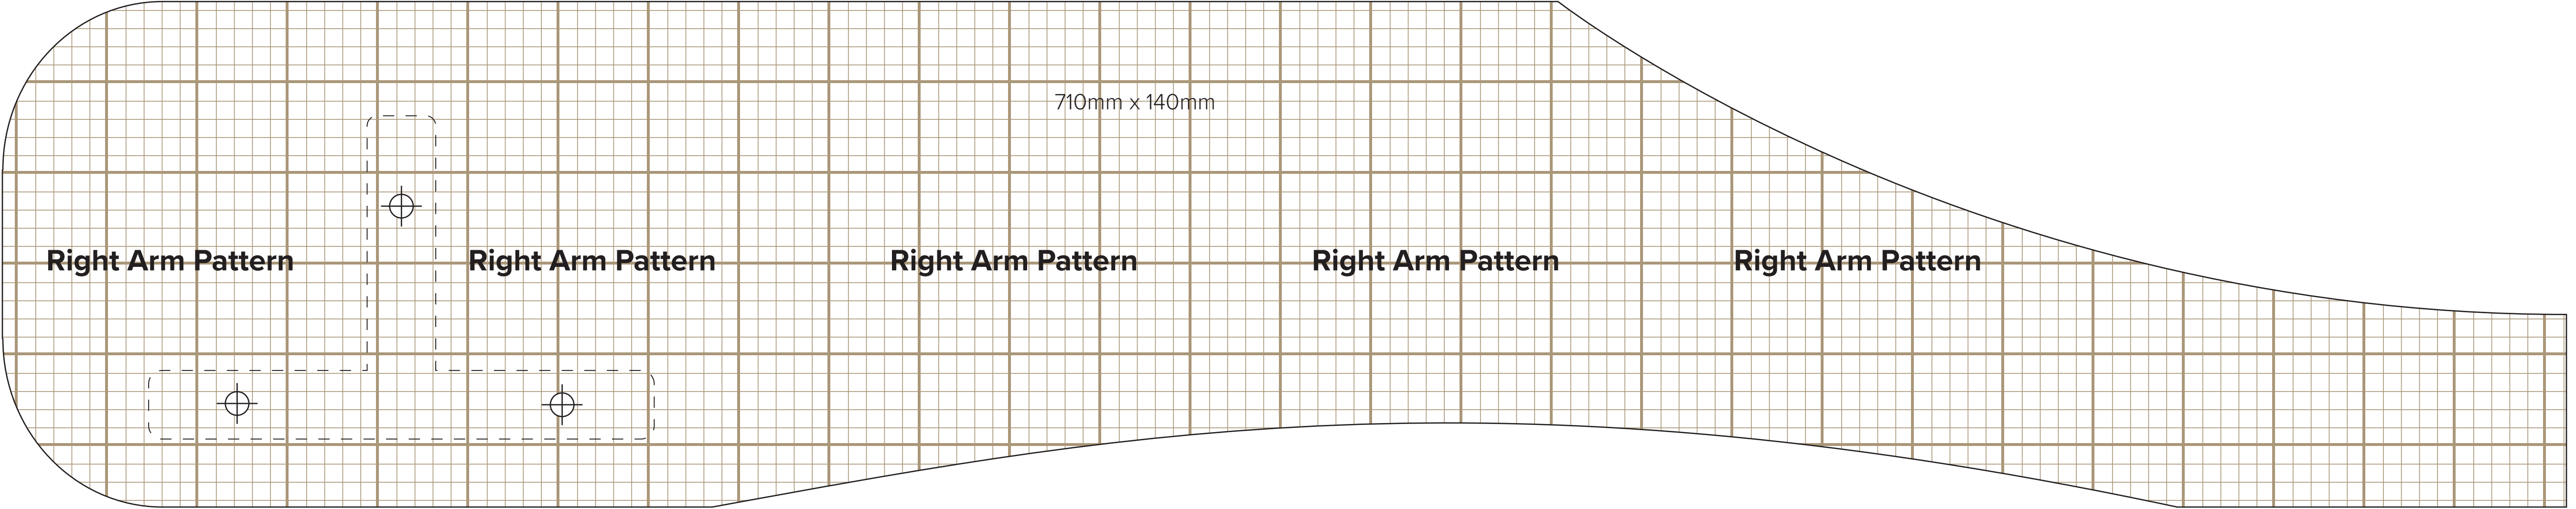


Screw hole position is dependant on the thickness of wood you are using. The holes marked are for 19 mm thick wood.
If you are using a different thickness of wood then use markings as a rough guide only.

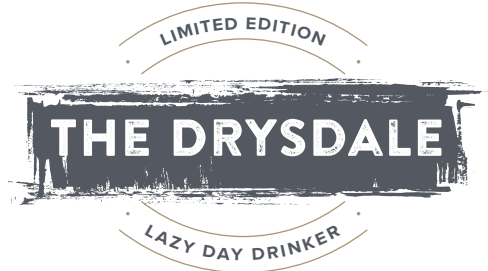
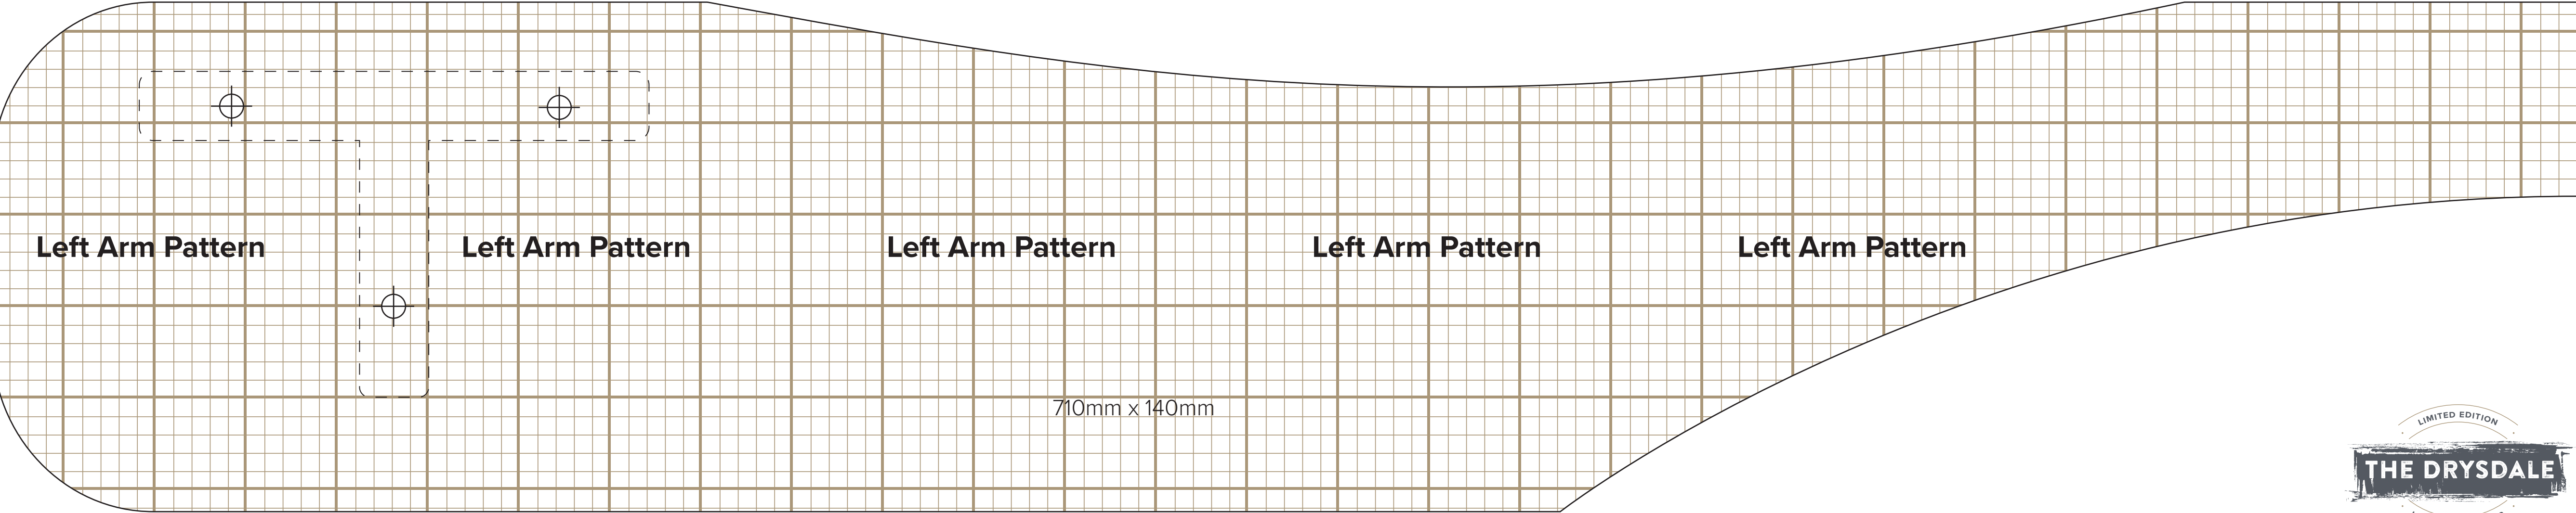



Screw hole position is dependant on the thickness of wood you are using. The holes marked are for 19 mm thick wood.
If you are using a different thickness of wood then use markings as a rough guide only.

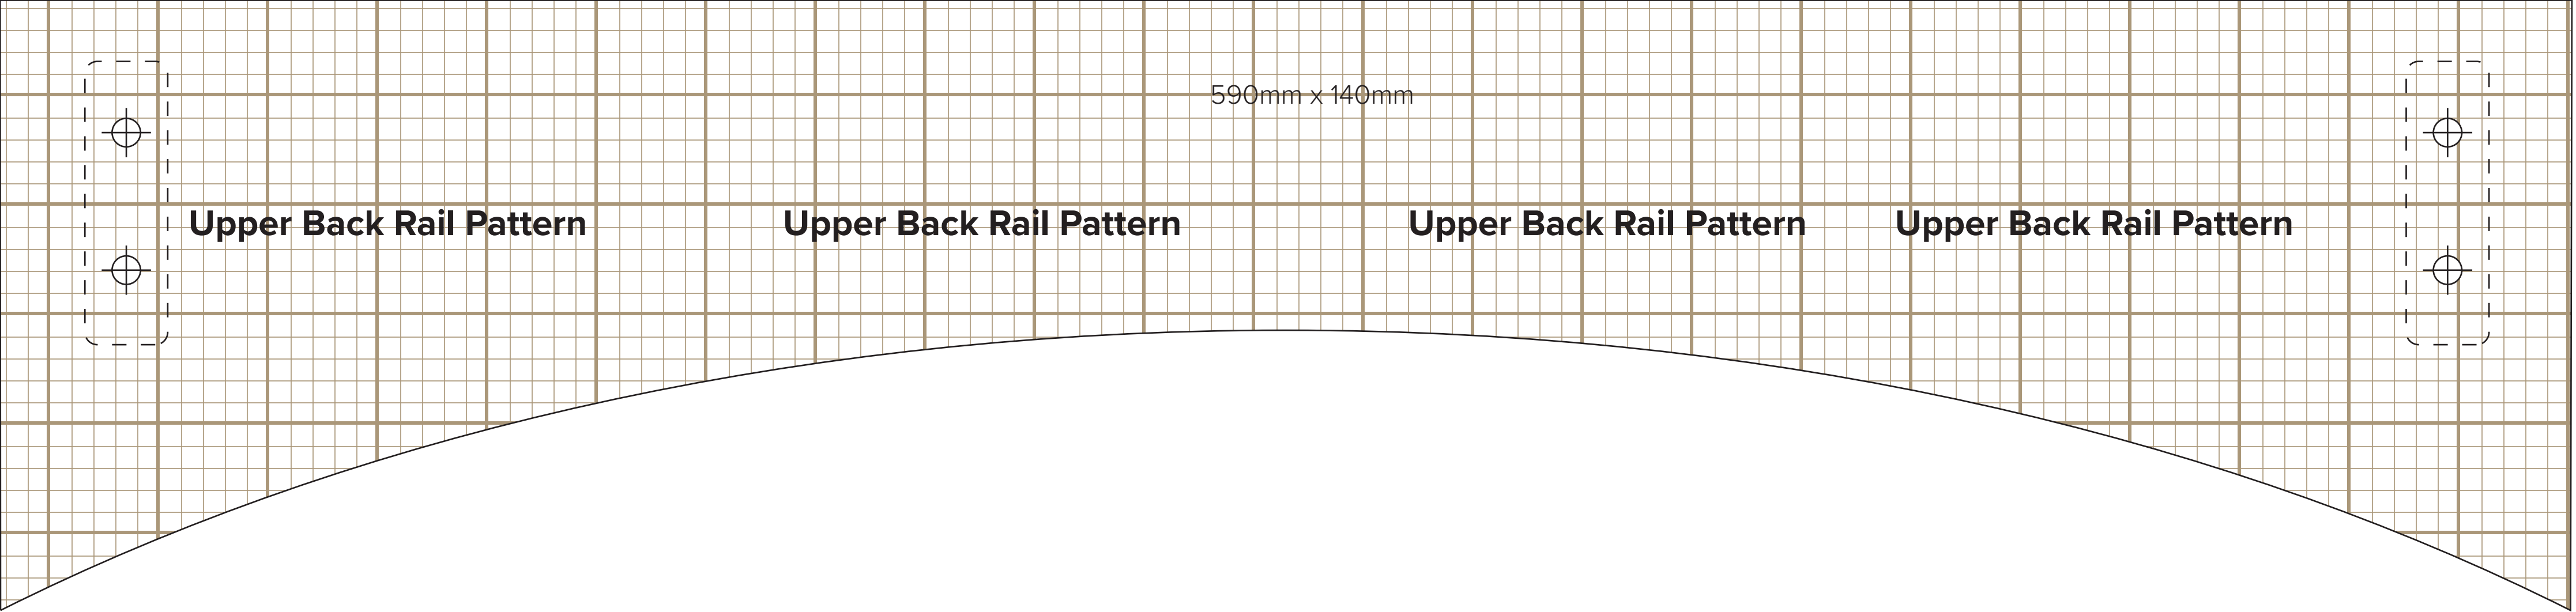


Screw hole position is dependant on the thickness of wood you are using. The holes marked are for 19 mm thick wood.
If you are using a different thickness of wood then use markings as a rough guide only.

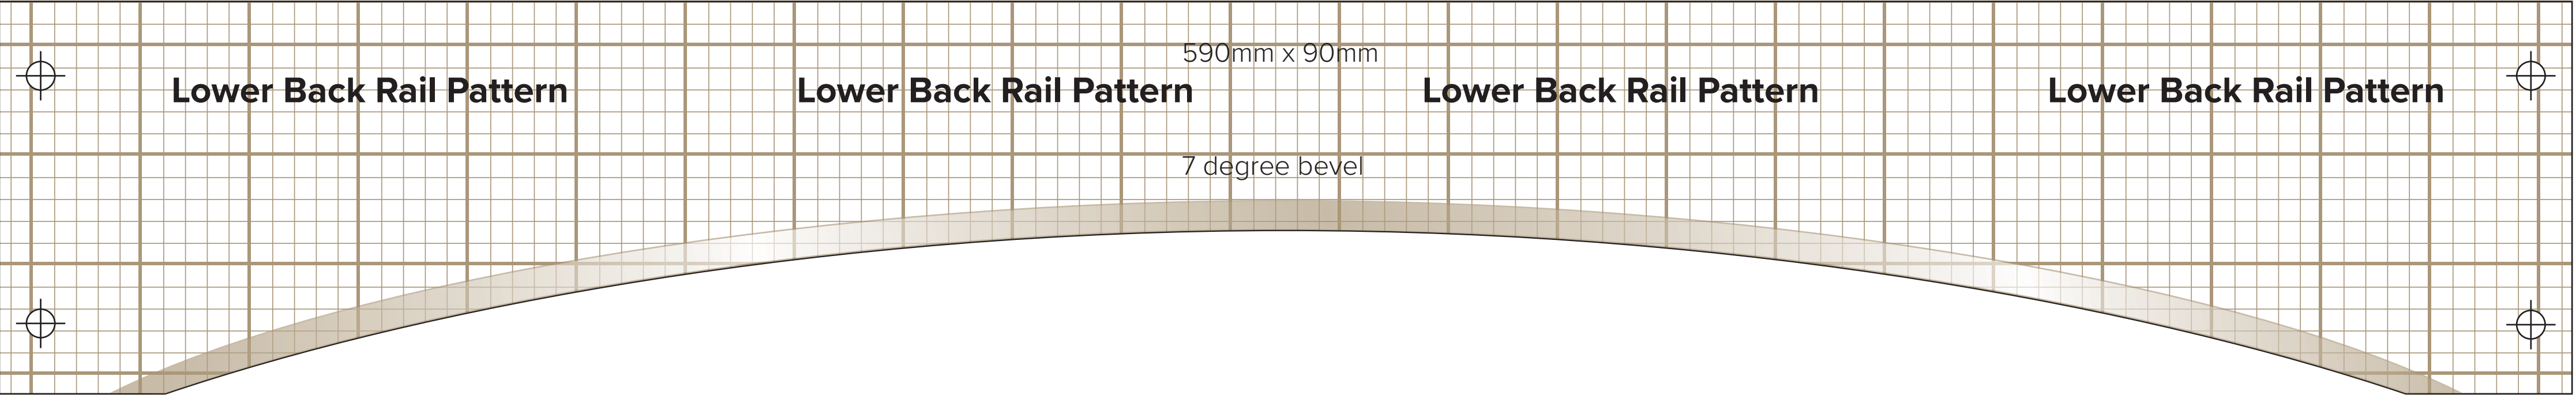

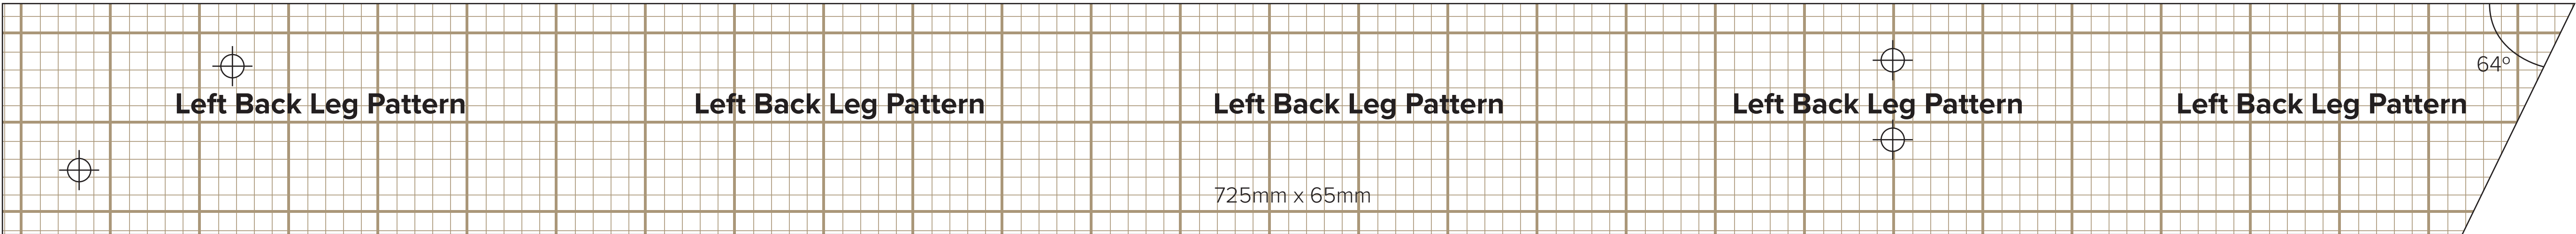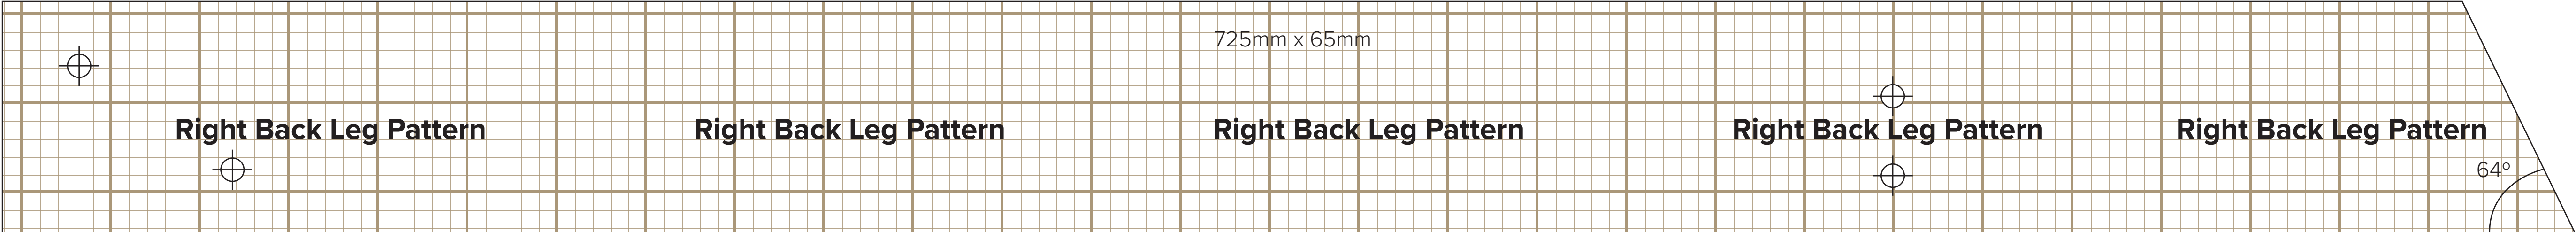

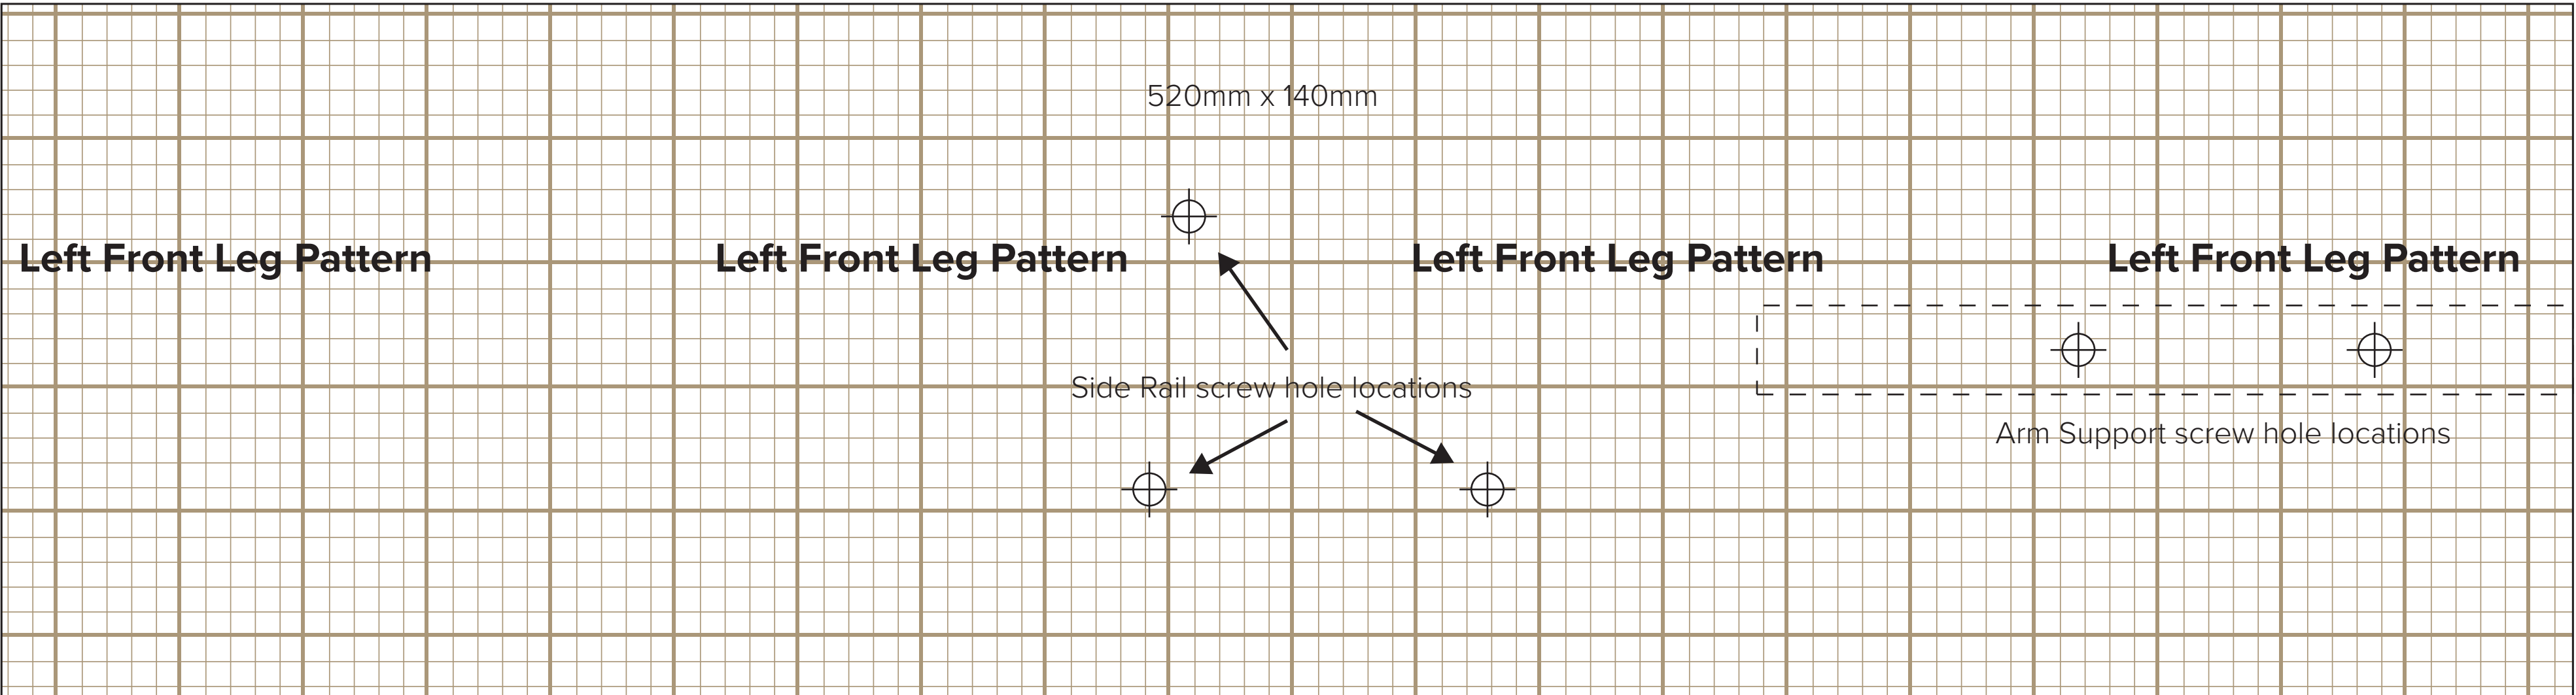

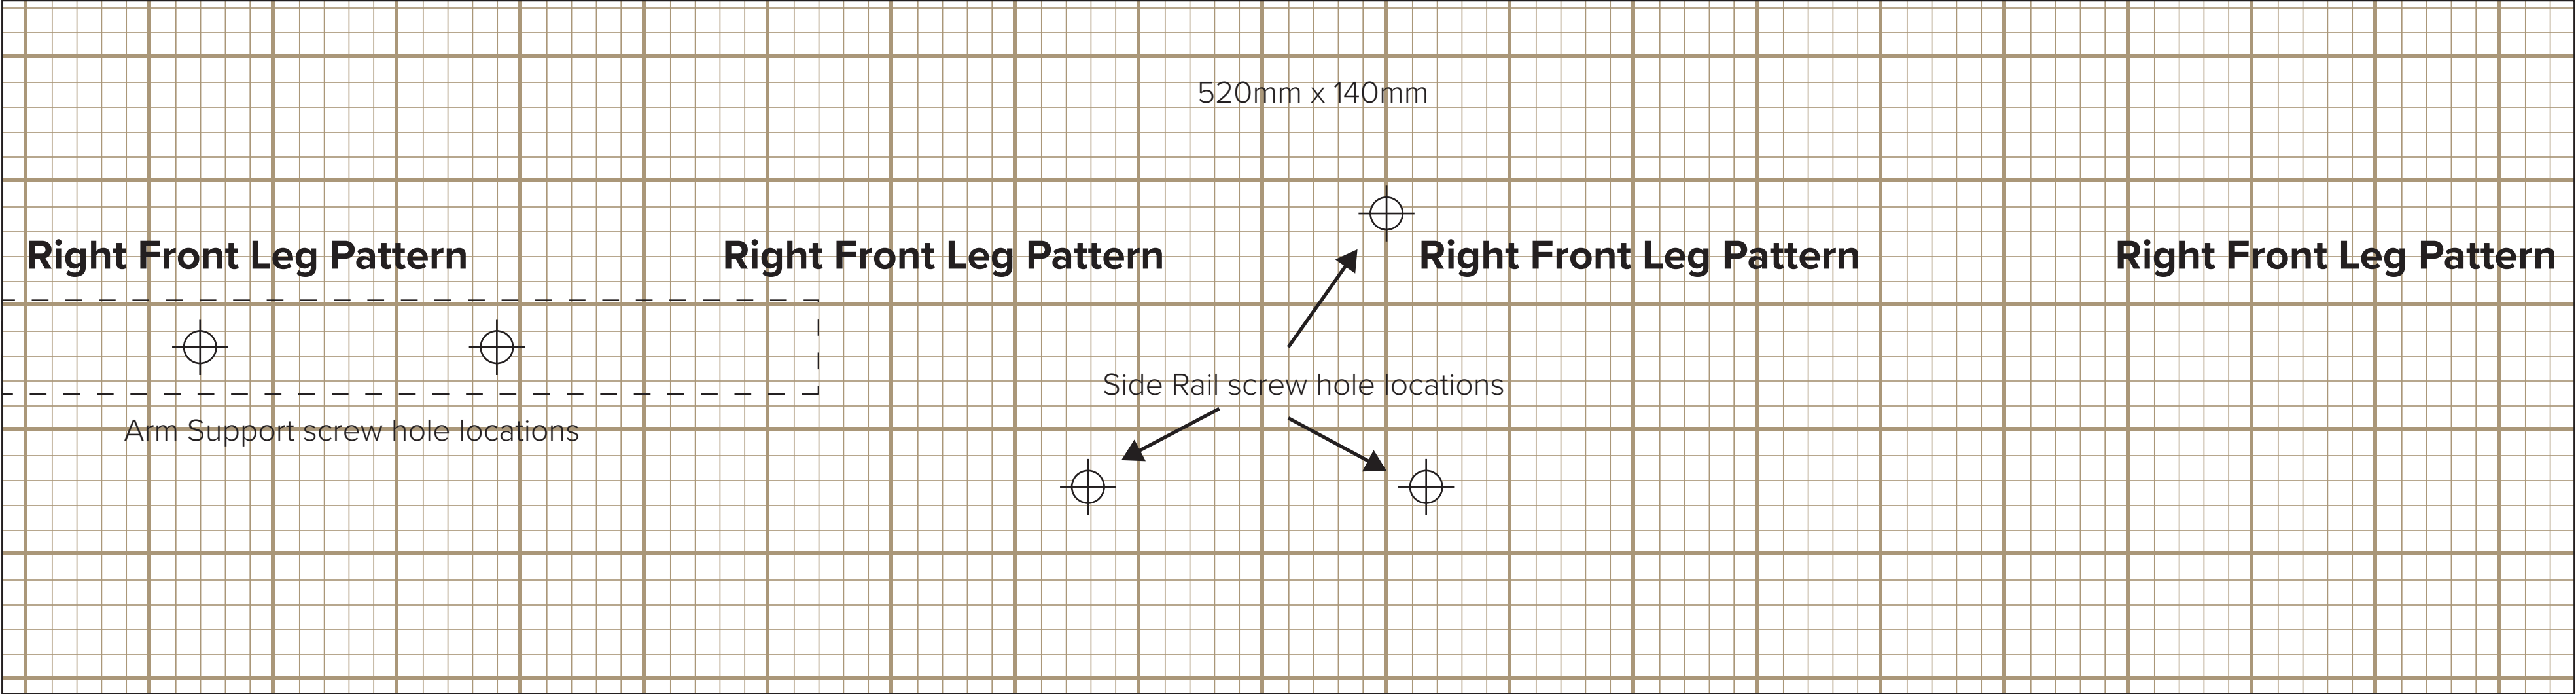

Slat Patterns - 590mm long



1

108°

5, 6, 7, 8

102°

2

105°

112.5°

3

4

115°

9

112.5°

Optional

Rear Arm Support Pattern


100mm x 40mm

Optional Extended Support Pattern

260mm x 110mm

Arm Support Pattern

165mm x 70mm

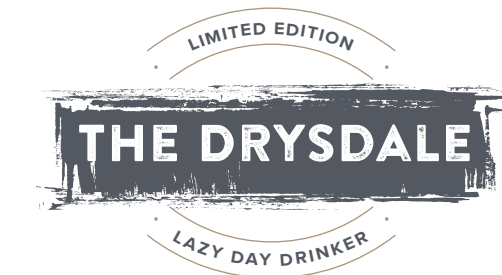


Screw hole position is dependant on the thickness of wood you are using. The holes marked are for 19 mm thick wood.
If you are using a different thickness of wood then use markings as a rough guide only.


860mm x 200mm

Optional Extended Right Arm Pattern

Optional Extended Right Arm Pattern

Optional Extended Right Arm Pattern

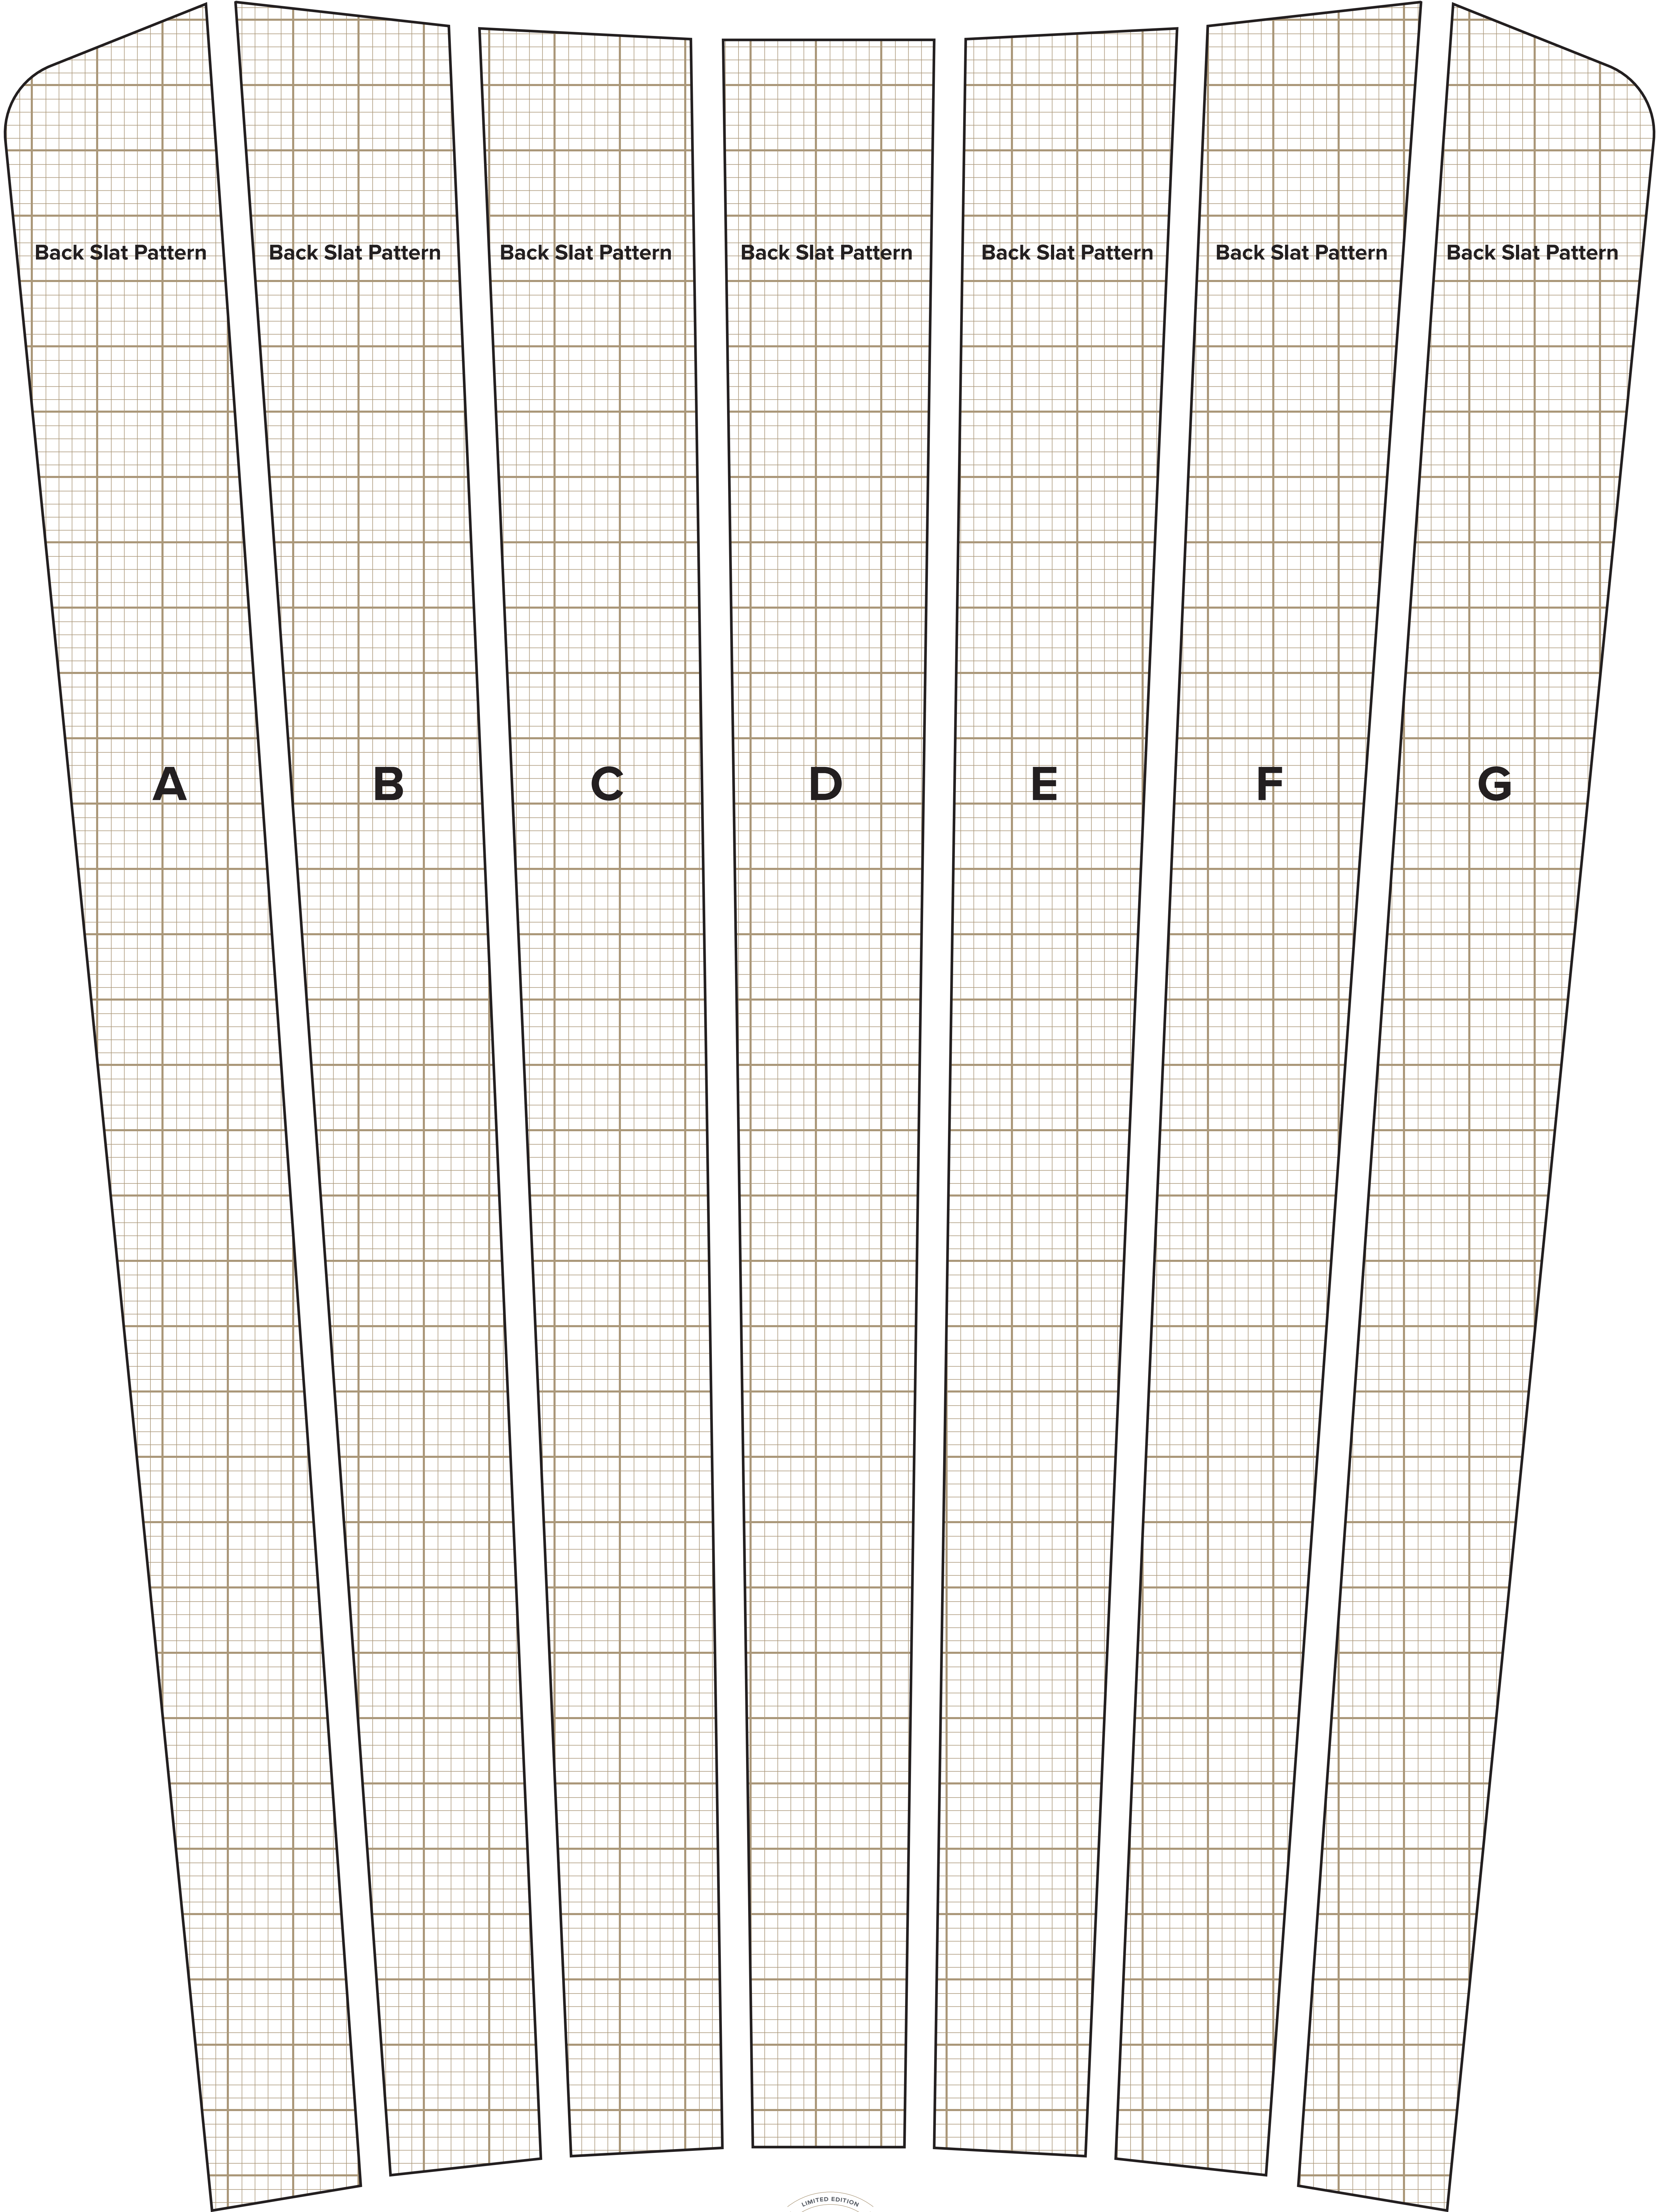

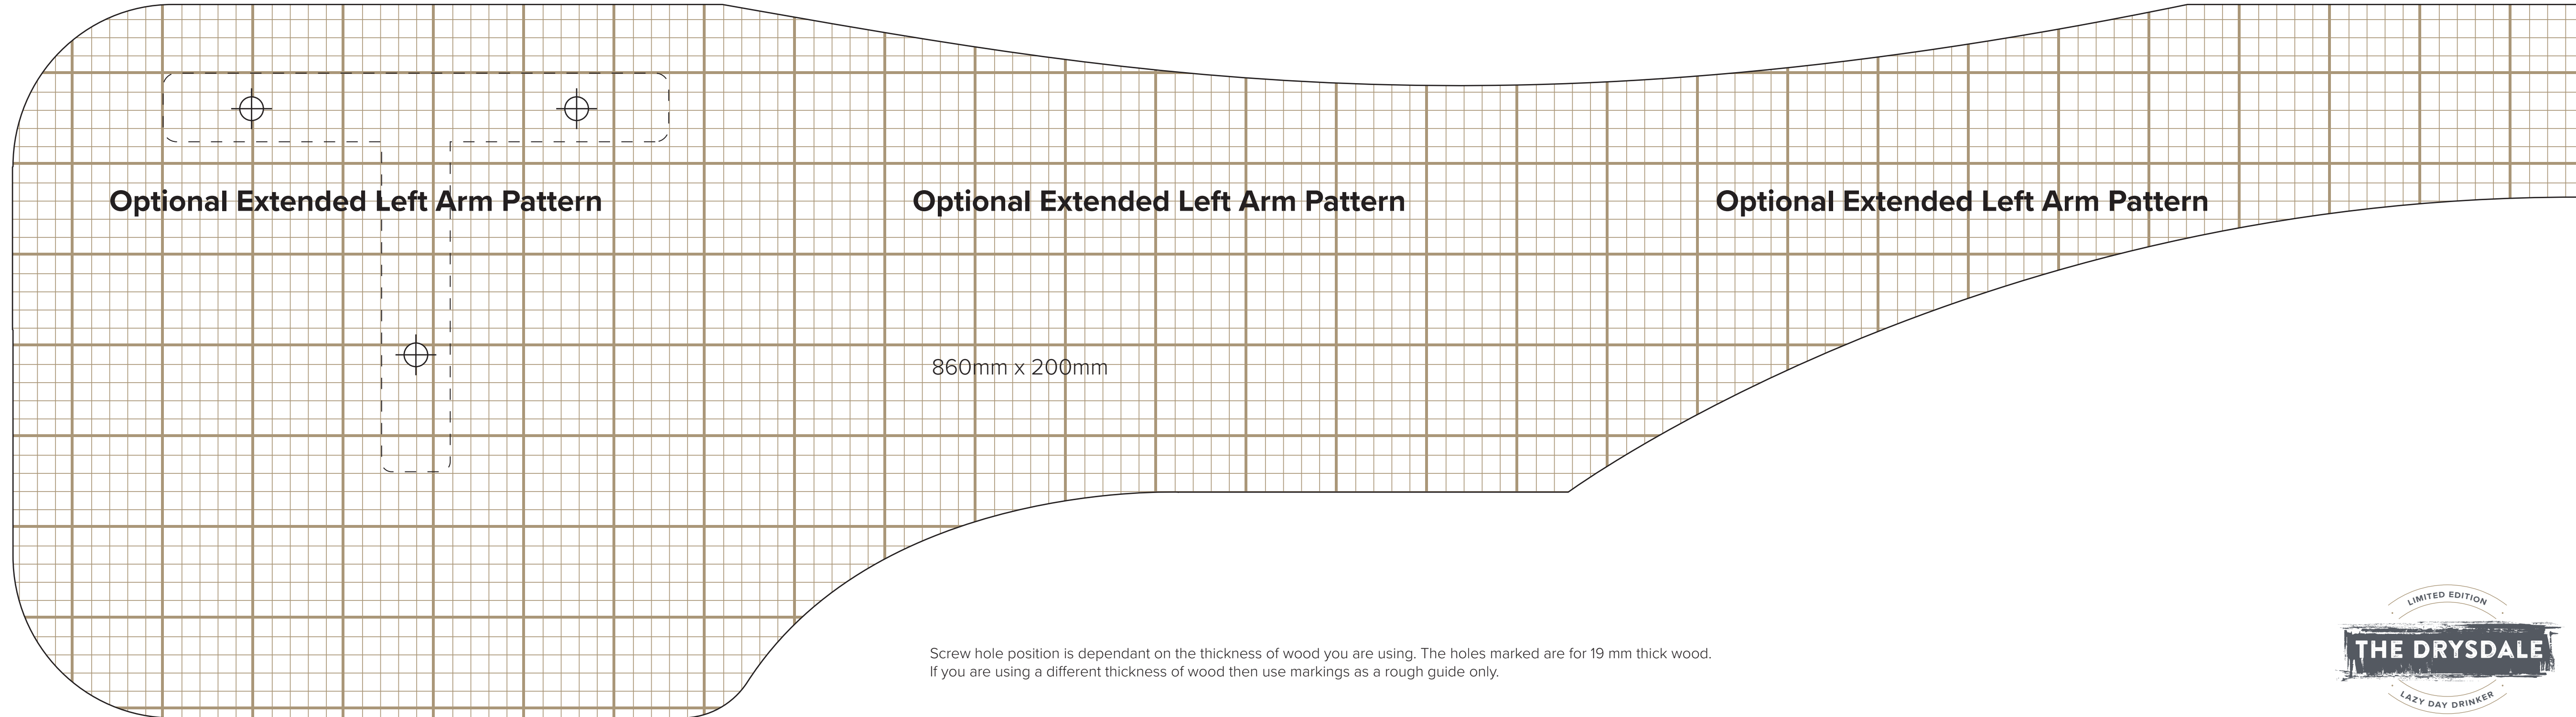


Optional Extended Left Arm Pattern


Optional Extended Left Arm Pattern




Optional Extended Left Arm Pattern

860mm x 200mm

Screw hole position is dependant on the thickness of wood you are using. The holes marked are for 19 mm thick wood.
If you are using a different thickness of wood then use markings as a rough guide only.

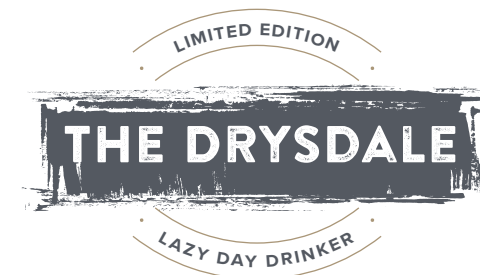

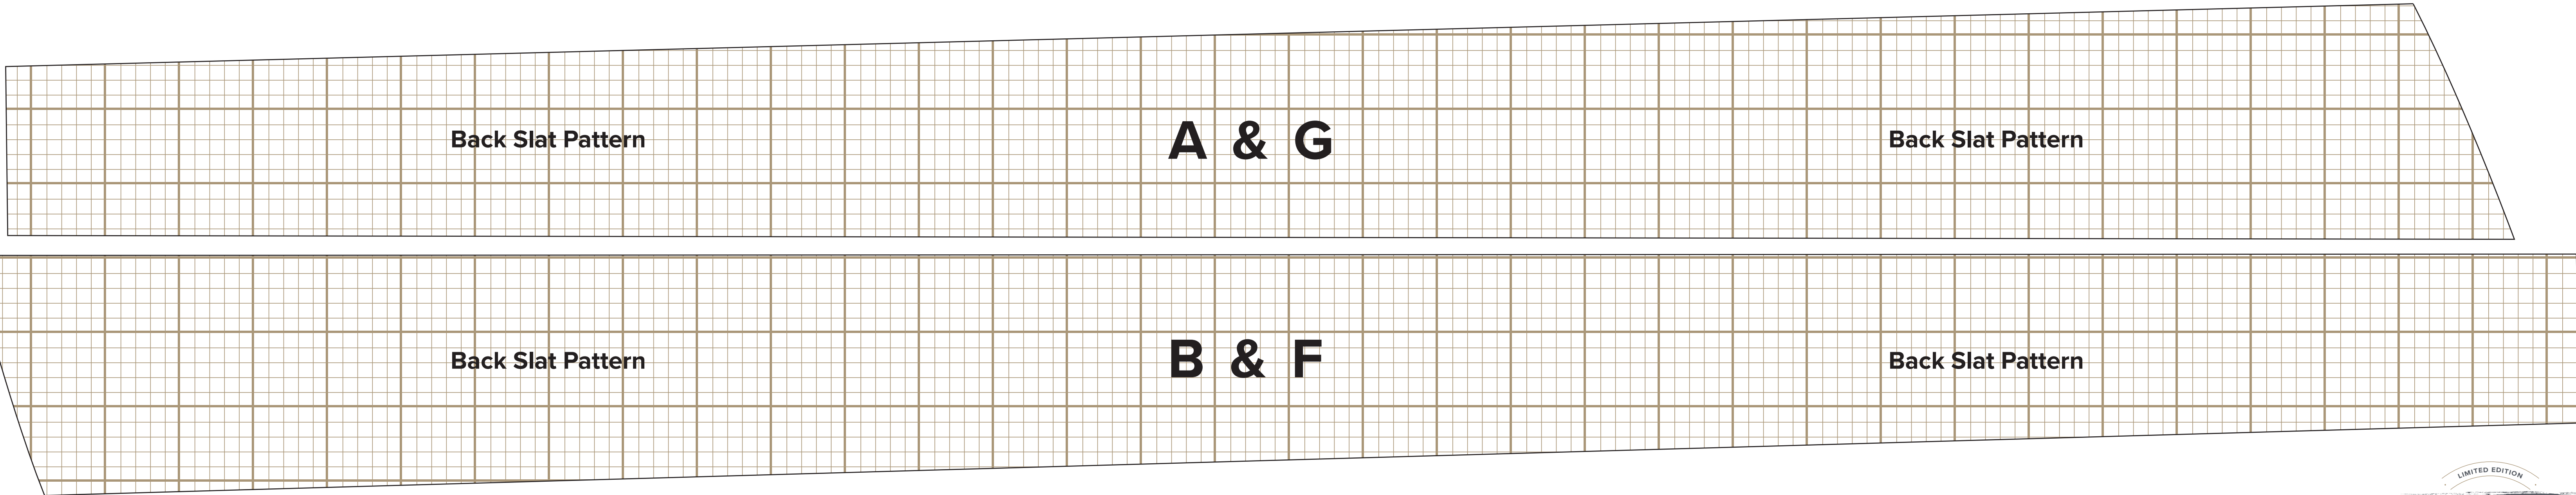

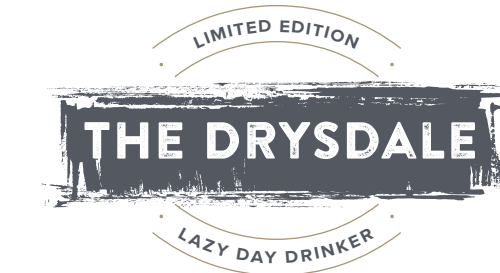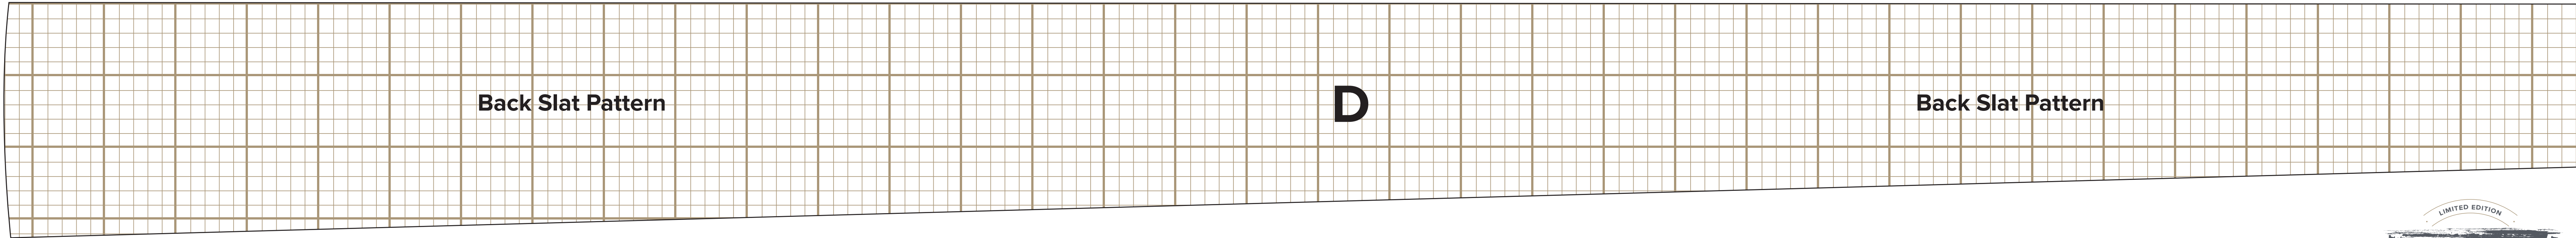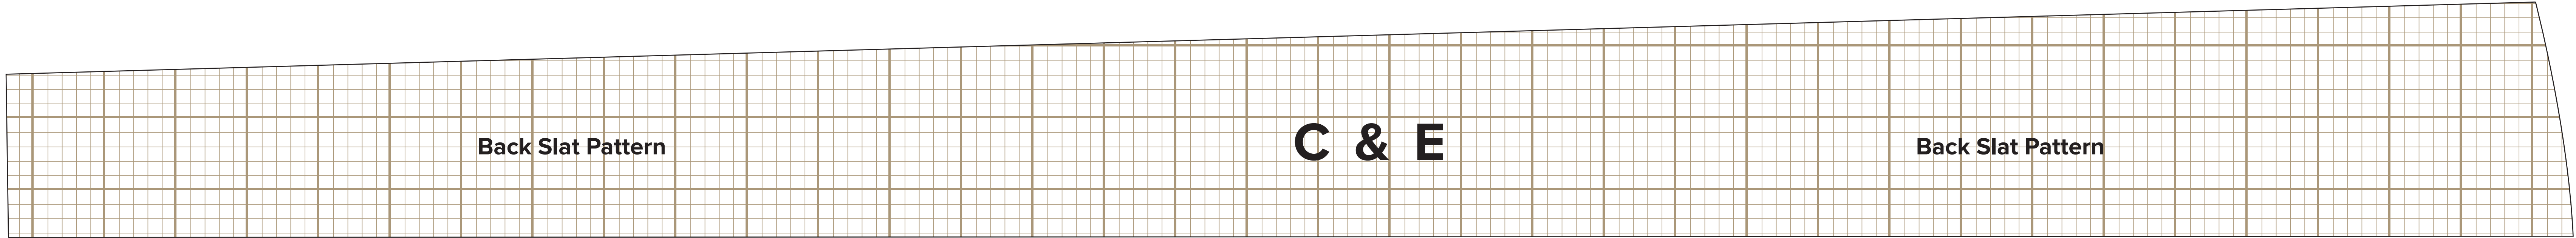

This template can help you position the seat slats
in the correct position. Cut it out and tape it to the Side Rail.

