
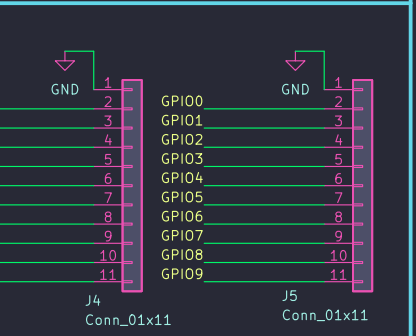
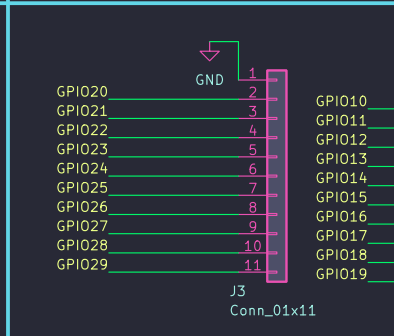
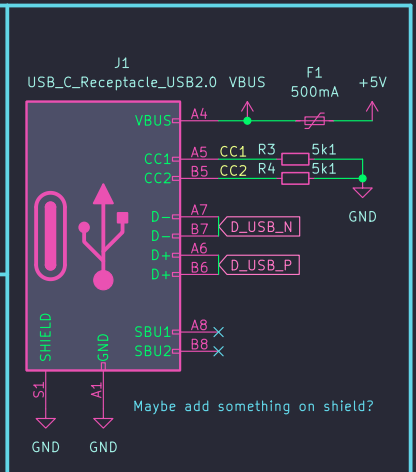
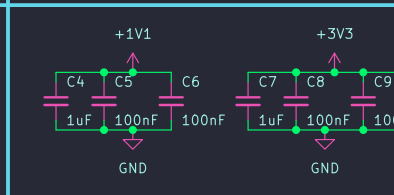
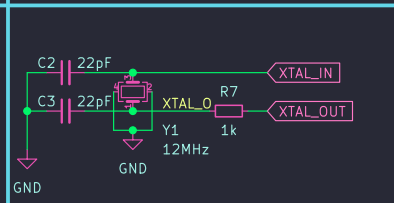
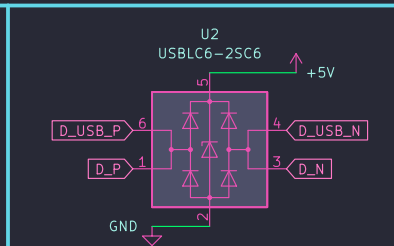
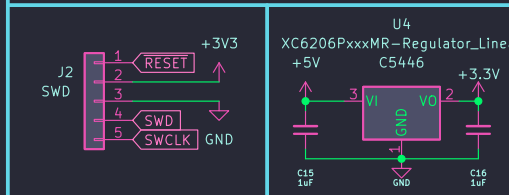
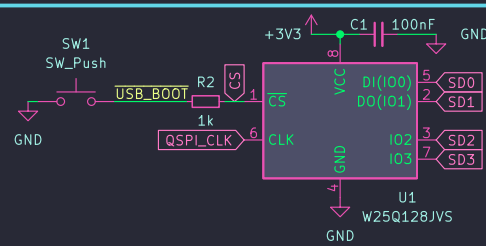


You can probalby replace R1 with a 1k resistor
to use simplify the BOM.
Not sure why I didn't do that

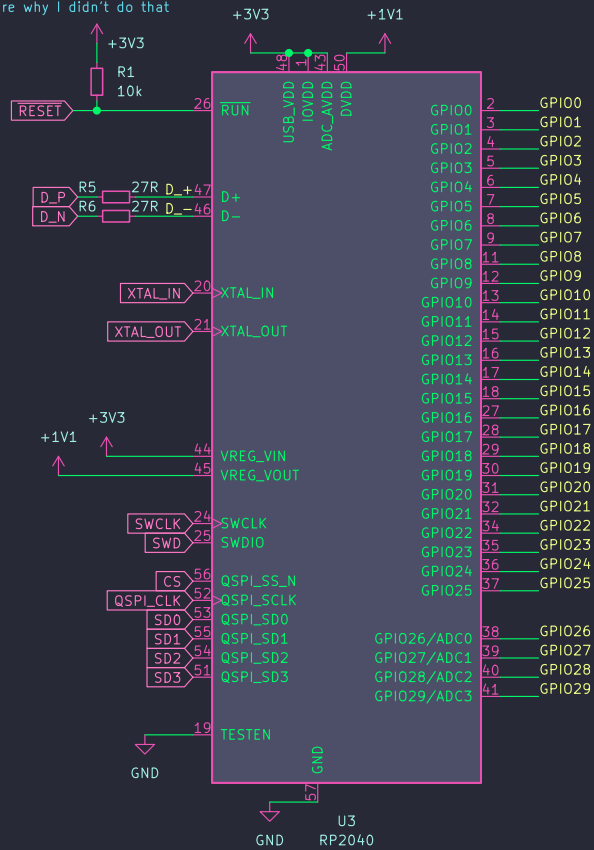

Sheet: /
File: RP2040-Guide.kicad_sch

Title:

Size: A4 Date:
KiCad E.D.A. kicad (6.0.0-rc1-63-g802cfc1a7d)

Rev:
Id: 1/1