


Load is typically nichrome wire.  
Choose length with required resistance to heat nichrome to ignition temperature.  
Add additional inline resistance to limit current.

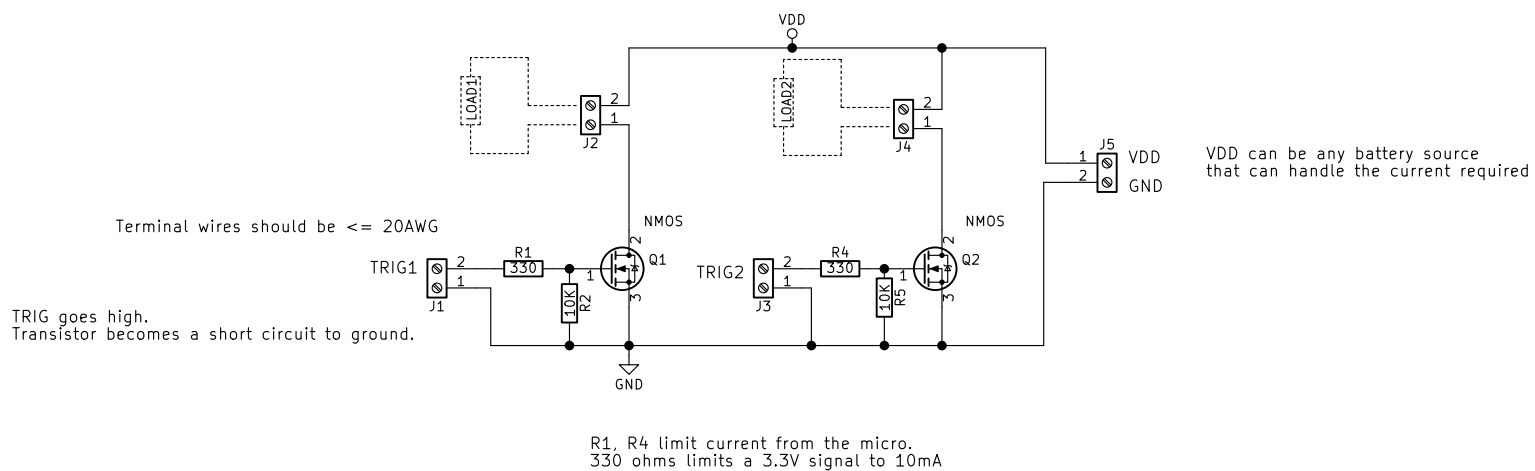

Garnet Tanner

**SOAR**

Sheet: /

File: IgnitionBoard.sch

**Title: Ignition Board**

Size: USLetter Date: 2018-02-23

KiCad E.D.A. kicad 4.0.7

**Rev: 1**

Id: 1/1