



SFH203 photodetector assembly notes


use M6 nylon washer
for insulation

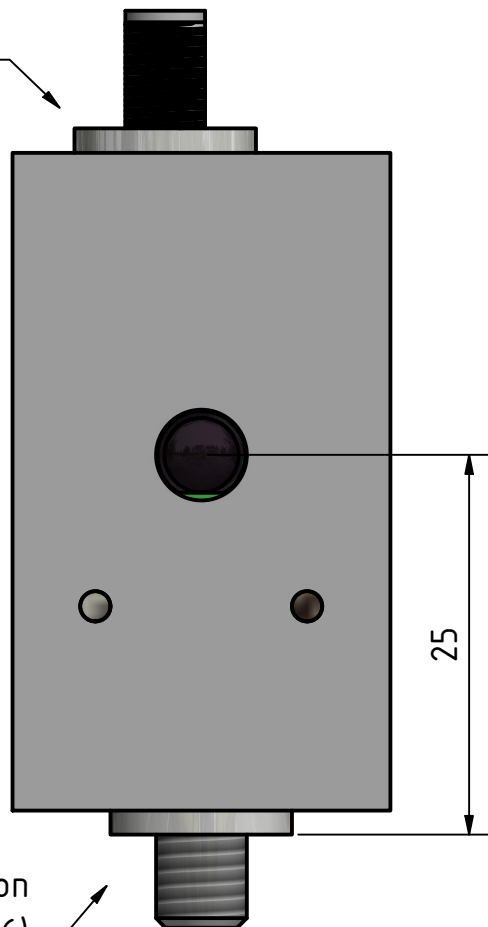

Mount with d=1.5 nylon
washer and nylon screw (M6)

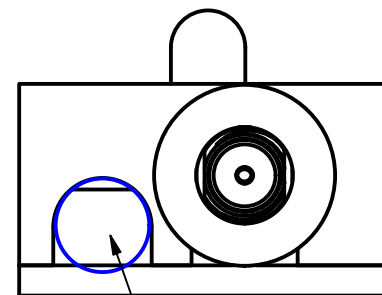

Use d=5mm wire
add standard tubing
(0.75mm wall max.)
for stress relief

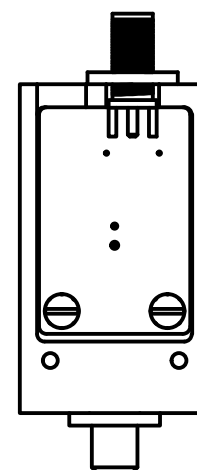

- SMA connector centered on footprint (+/-0.3mm)
- Mount PCB with M2.5x5 steel screws
- Fasten SMA connector first
- Assemble photodiode after mounting the PCB in the case