




SFH203 photodetector assembly notes

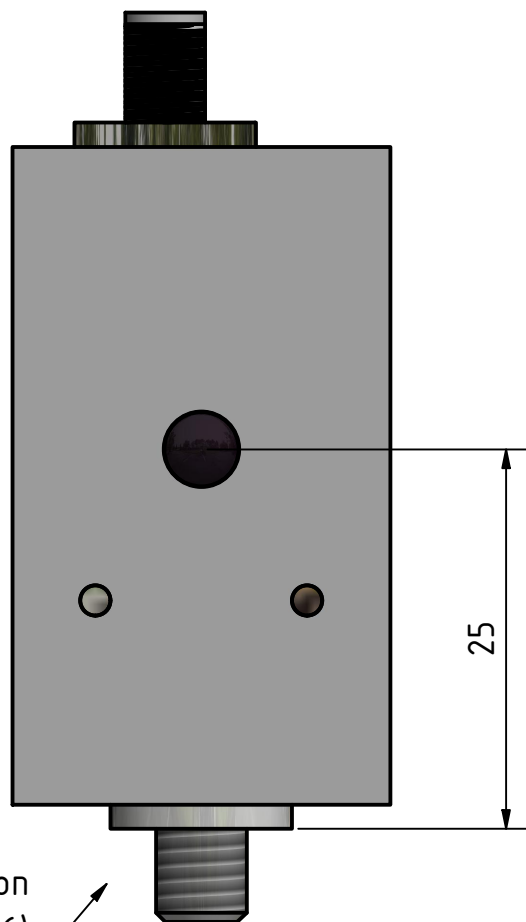

Mount with d=1.5 nylon washer and nylon screw (M6)

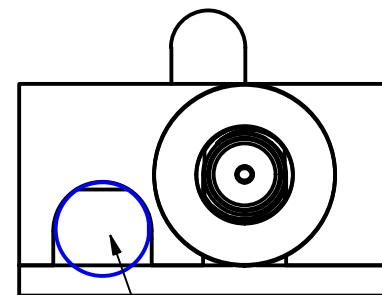

Use d=5mm wire
add standard tubing
(0.75mm wall max.)
for stress relief

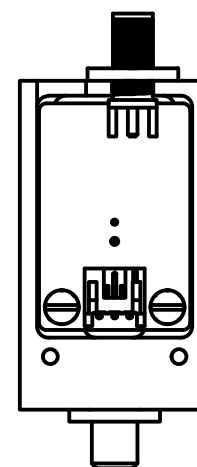

- SMA connector centered on footprint ($\pm 0.3\text{mm}$)
- Mount PCB with M2.5x5 steel screws
- Fasten SMA connector first
- Assemble photodiode after mounting the PCB in the case
- Make sure THT pins of the JST connector are sufficiently short