


## SFH203 photodetector assembly notes

Mount PCB via SMA  
connector using standard  
hex nut and washer


Clamping screw  
DIN913 M2.5x3

Mount with d=1.5 nylon  
washer and nylon screw (M6)

25

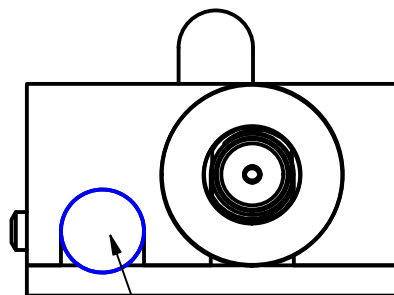

Use d=5mm wire  
add standard tubing  
for clamping

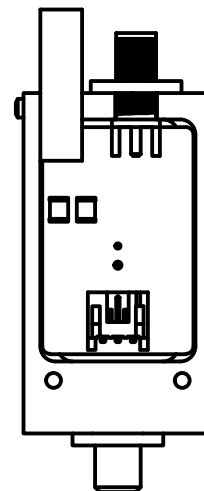

- SMA connector centered on footprint (+/-0.3mm)
- Make sure THT pins of the JST connector are sufficiently short