


Positive bending moment about the y-axis pulls on the surface in the left cut of the section and the normal stress has the same sense as the x-axis (out of the page)

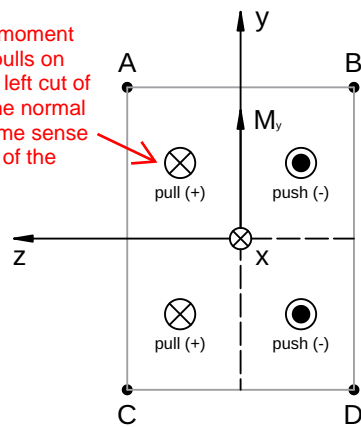

At the same location the same bending moment about the y-axis pushes on the surface in the right cut of the section and the normal stress has the same sense as the x-axis (into the page)

