

JeNo

Assembly - Step 1



**4 M3x22mm countersunk screws (or 20mm)
+ 4 M3 nuts**

JeNo

Assembly - Step 2



**4 M3x8mm screws
+ 4 M3 pressnuts (Flywoo or SourceOne alike)**

JeNo


Assembly - Step 3



**4 M3x14mm screws (or M3x15mm + washer)
+ 4 M3 pressnuts (Flywoo or SourceOne alike)**

JeNo


Assembly - Step 4

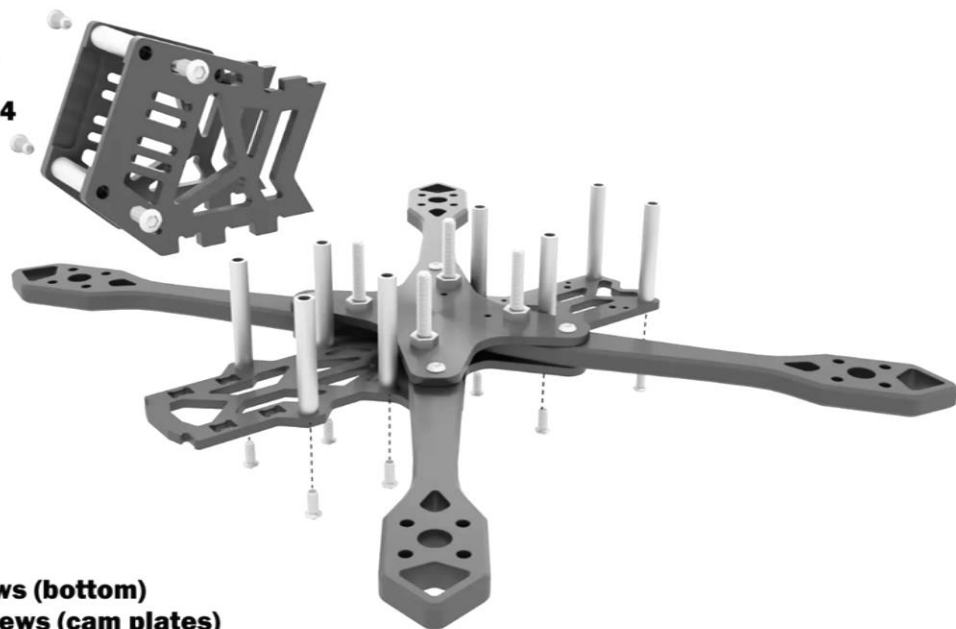

**8 M3x8mm screws (bottom)
+ 4 M3x6mm screws (cam plates)**

JeNo

Assembly - Step 5

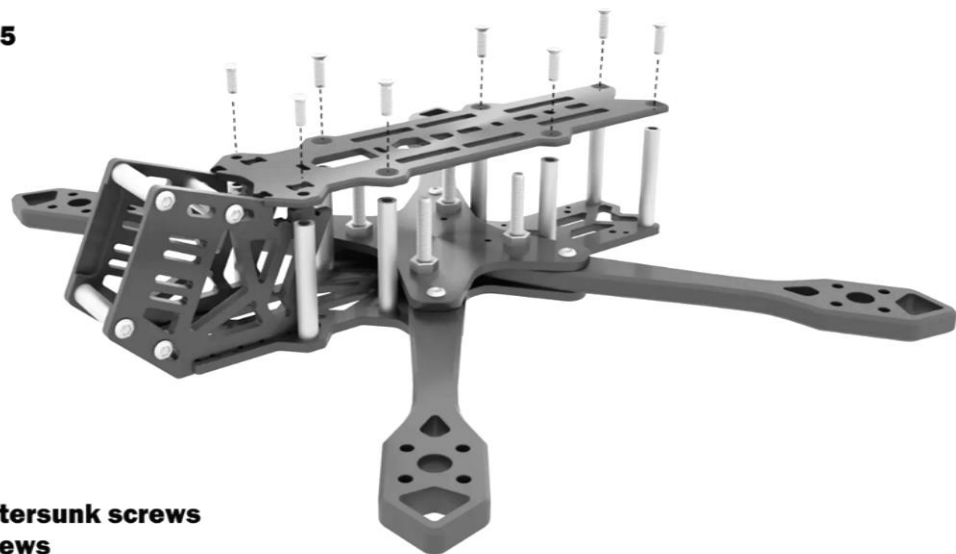

**6 M3x8mm countersunk screws
+ 2 M3x8mm screws**

JeNo

Assembly - Done !

