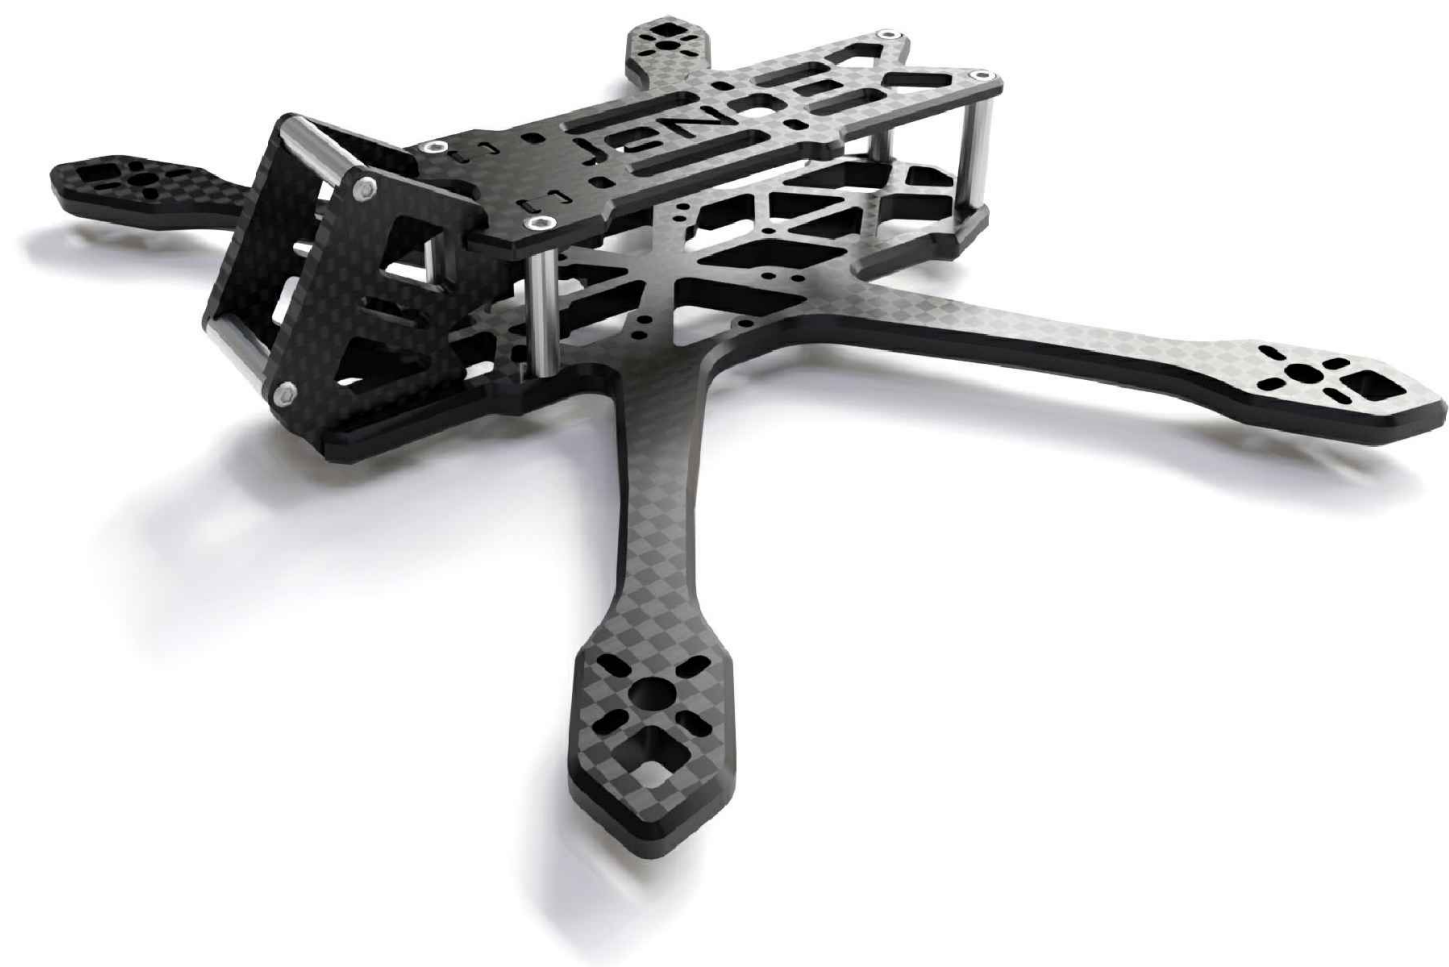


3" FIT

v1.0.0

WAF

-JeNo-

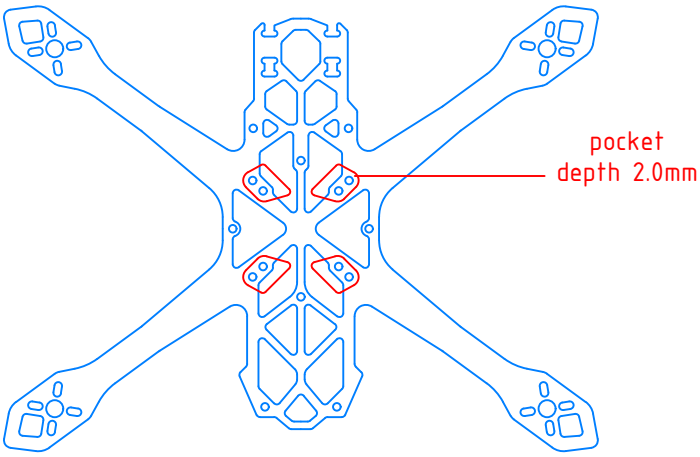
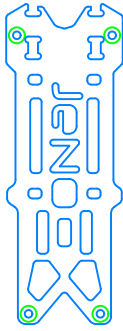
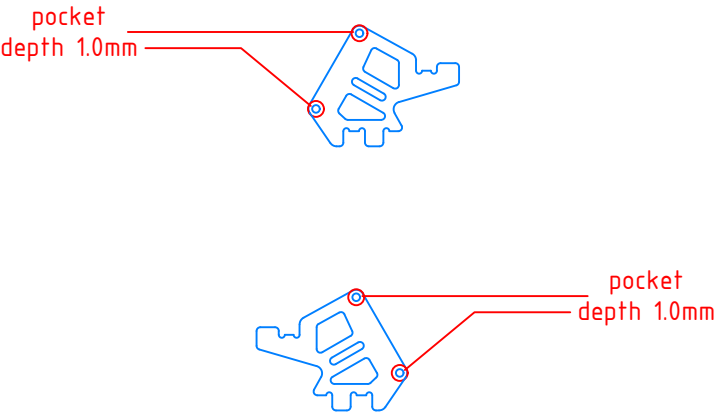
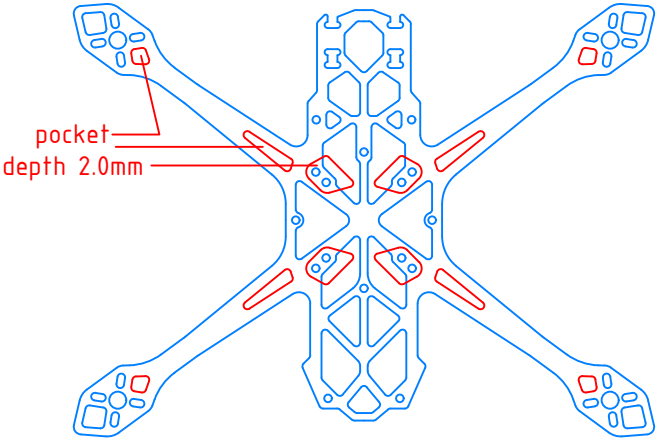
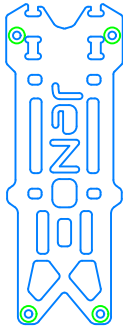
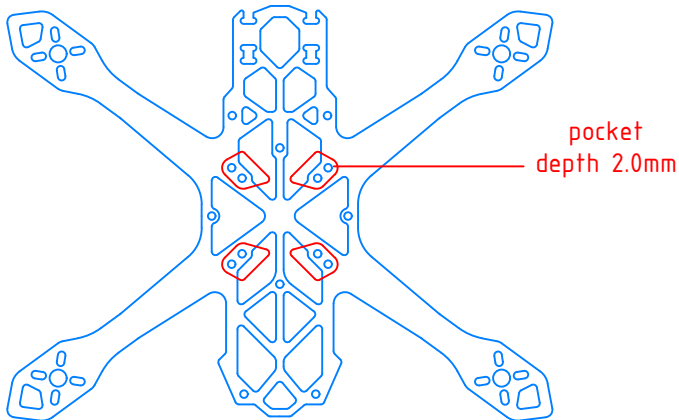
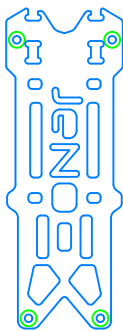


Step 1

Choose your version

Step 2

Choose your cam plates

JeNo 3 & 3.5" _FIT_ [M2 - 16mm]			<div>cut</div> <div>chamfer</div> <div>pocket</div> <div>countersunk</div>
	BOTTOM	TOP	CAM PLATES
3.5" 3.5" LIGHT 3"	<div>Bottom 4mm (x1) carbon fiber : 45°</div> <div></div> <div>chamfered (2 sides: 0.7mm) + 4 pockets (depth = 2mm)</div>	<div>Top 2mm (x1)</div> <div></div> <div>chamfered (top side: 0.7mm) +4 countersunk M2</div>	<div>Side plate 30° 2.5mm (x1)</div> <div></div> <div>2 pockets : depth 1 mm</div>
	<div>Bottom 4mm (x1) carbon fiber : 45°</div> <div></div> <div>chamfered (2 sides : 0.7mm) + 12 pockets (depth = 2mm)</div>	<div>Top 2mm (x1)</div> <div></div> <div>chamfered (top side : 0.7mm) +4 countersunk M2</div>	
	<div>Bottom 4mm (x1) carbon fiber : 45°</div> <div></div> <div>chamfered (2 sides : 0.7mm) + 4 pockets (depth = 2mm)</div>	<div>Top 2mm (x1)</div> <div></div> <div>chamfered (top side : 0.7mm) +4 countersunk M2</div>	<div>*chamfers are recommended everywhere except on camera plates</div> <div><div>Line type</div><div><div>cut</div><div>chamfer</div><div>pocket</div><div>countersunk</div></div></div>