



## Preparation

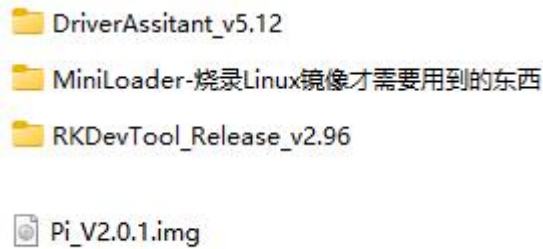

1. Install drivers (installed when first used) .



2. Open burn tool.



3. Click on the blank button behind the path to add a file, as shown in the following example.




The corresponding. Bin File: MiniLoaderAll.bin

Add Pi\_V2.0.1.img image, check the “Force write to address” box.

☒ 强制按地址写

Import the EMMC configuration when the second item is not displayed,

Right-click to import EMMC configuration:  rk3588\_linux\_emmc.cfg

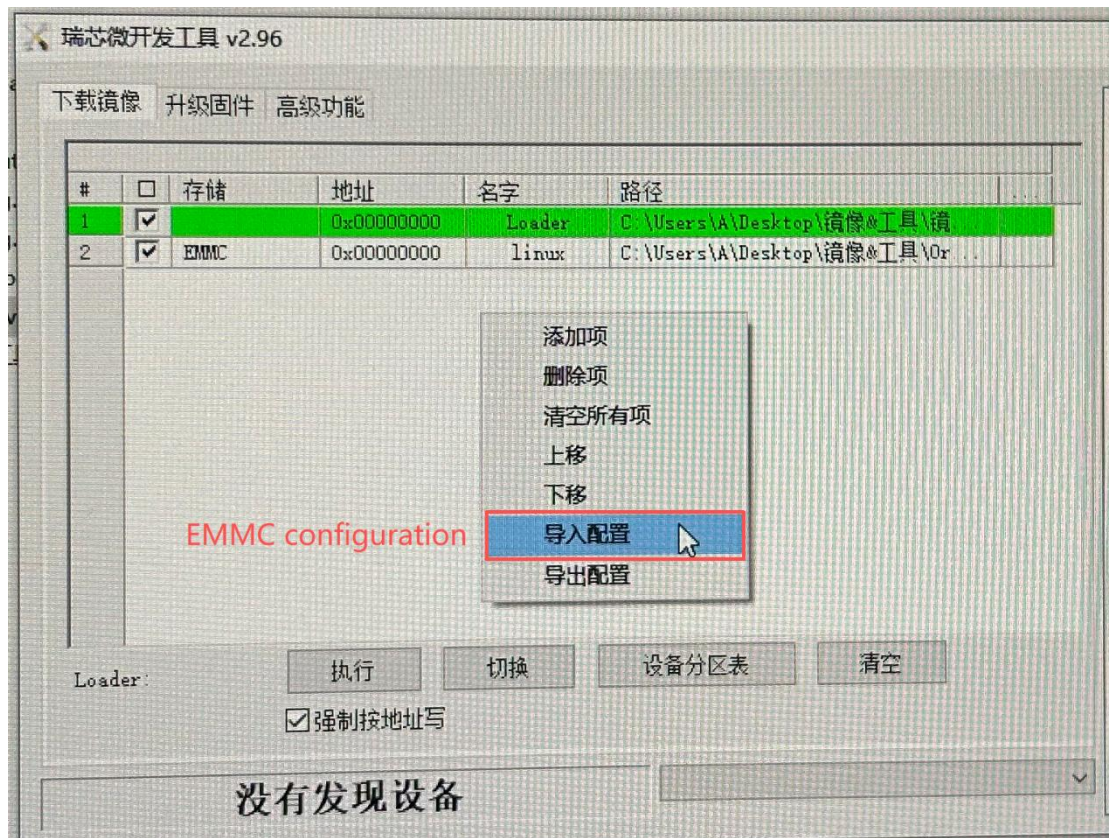

4. OTG data terminal is connected to the PC host computer, the MASKROM button is pressed and held, and the motherboard is powered on. When the lower left corner recognizes the device, release the MASKROM button, then click execute, and wait for the burn to complete.

