


### 3. UNSUPPORTED CONDITION

2#3 "CURVED" REBARS USED TO STABILIZE  
EMBED PLANT BEFORE CONCRETE POUR.

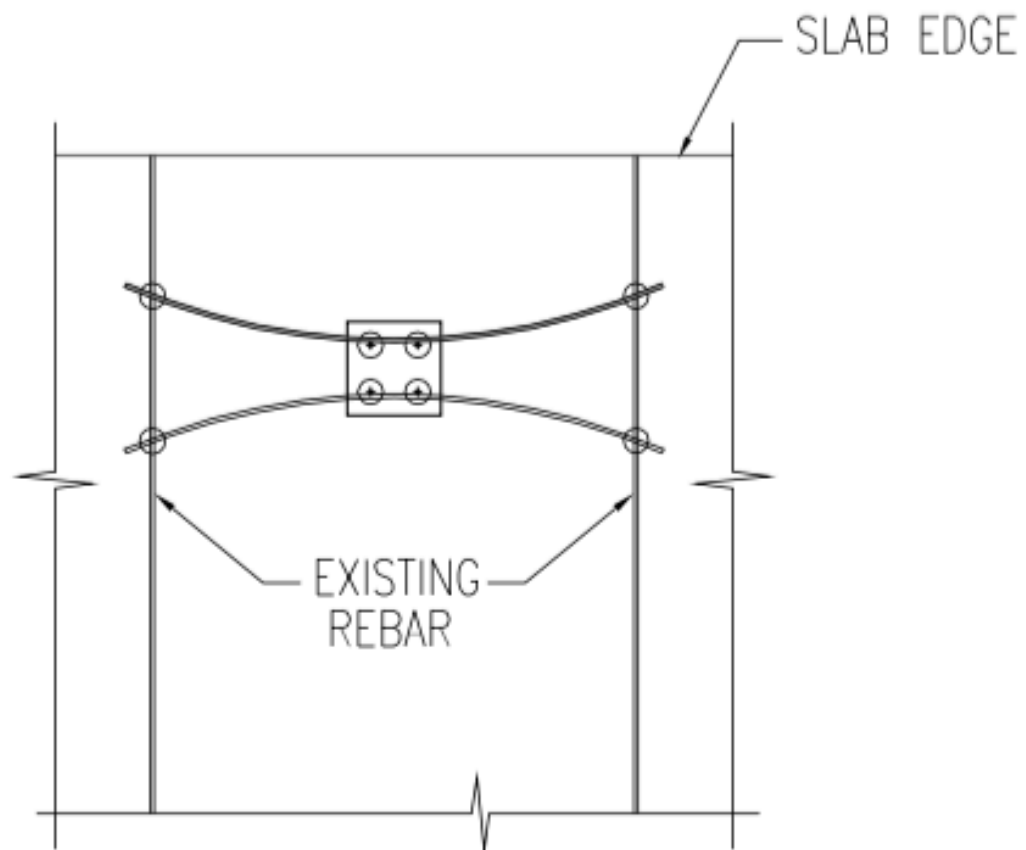

\*UNBENT LENGTH IN 5'-0"



INSTALLATION : (TOP VIEW)

- = "L" REBAR (1/2)
- = "L" REBAR (2/2)
- = TIE LOCATION