



How to install macOS Monterey Beta 4 on a MacBook Pro retina late 2013


Create install Media of Monterey put the EFI folder on EFI Partition of USB installer then boot from option select EFI USB install Media on the OpenCore menu Icons, select ClearNvram

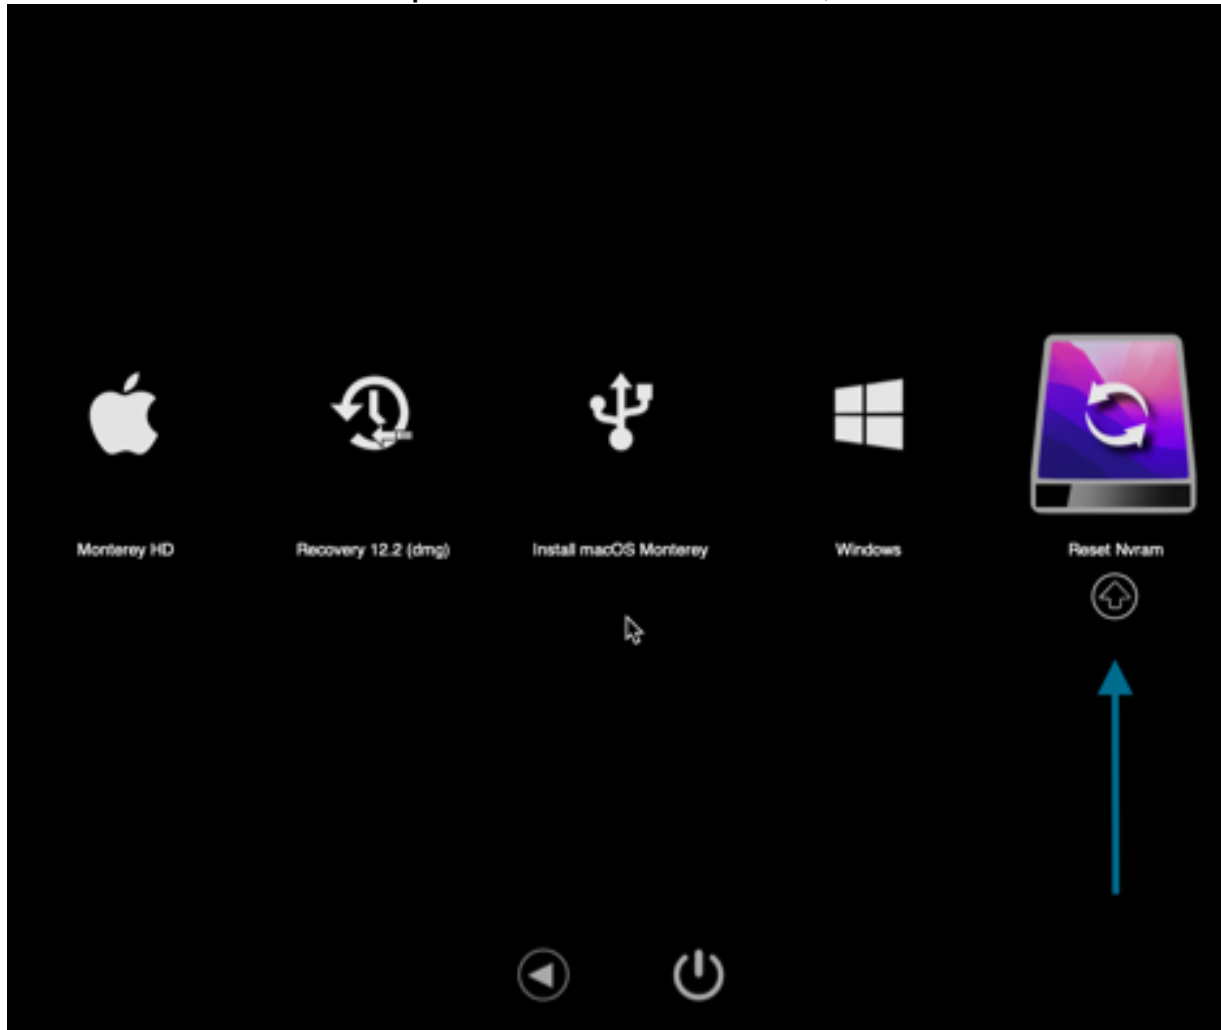

and Reboot the system ➤ TAB Reboot

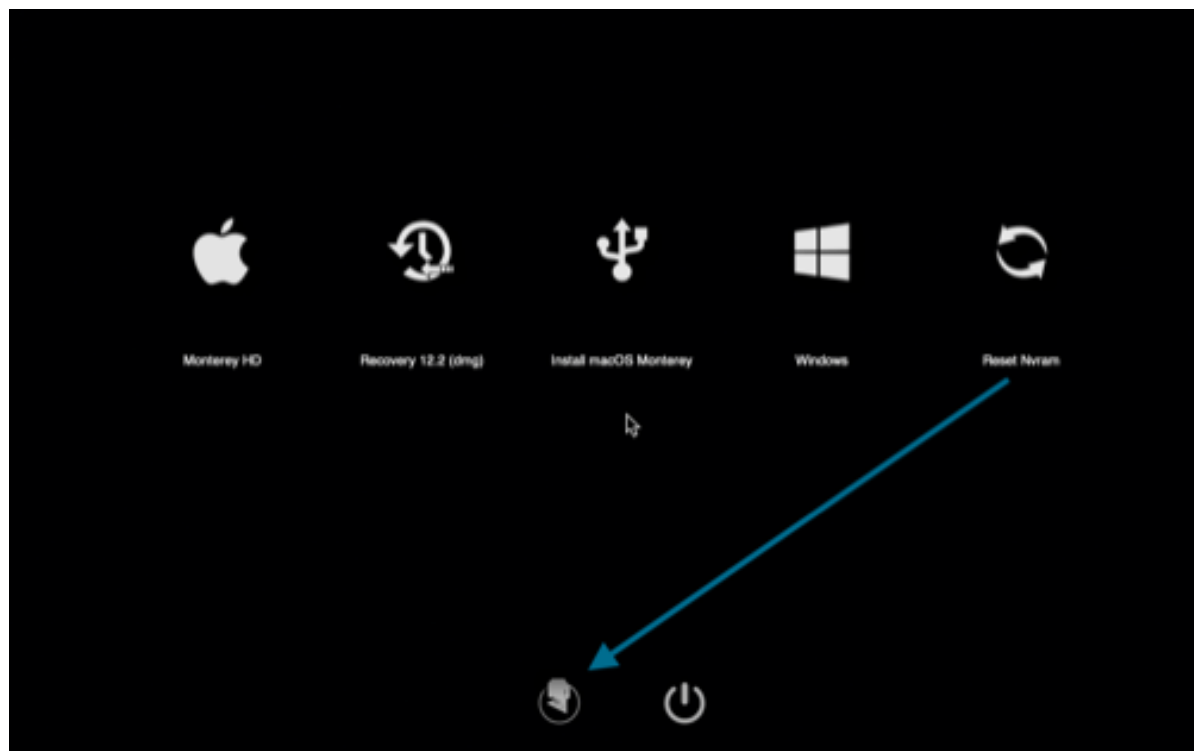

Reboot again Option EFI USB install Media select Install macOS Monterey

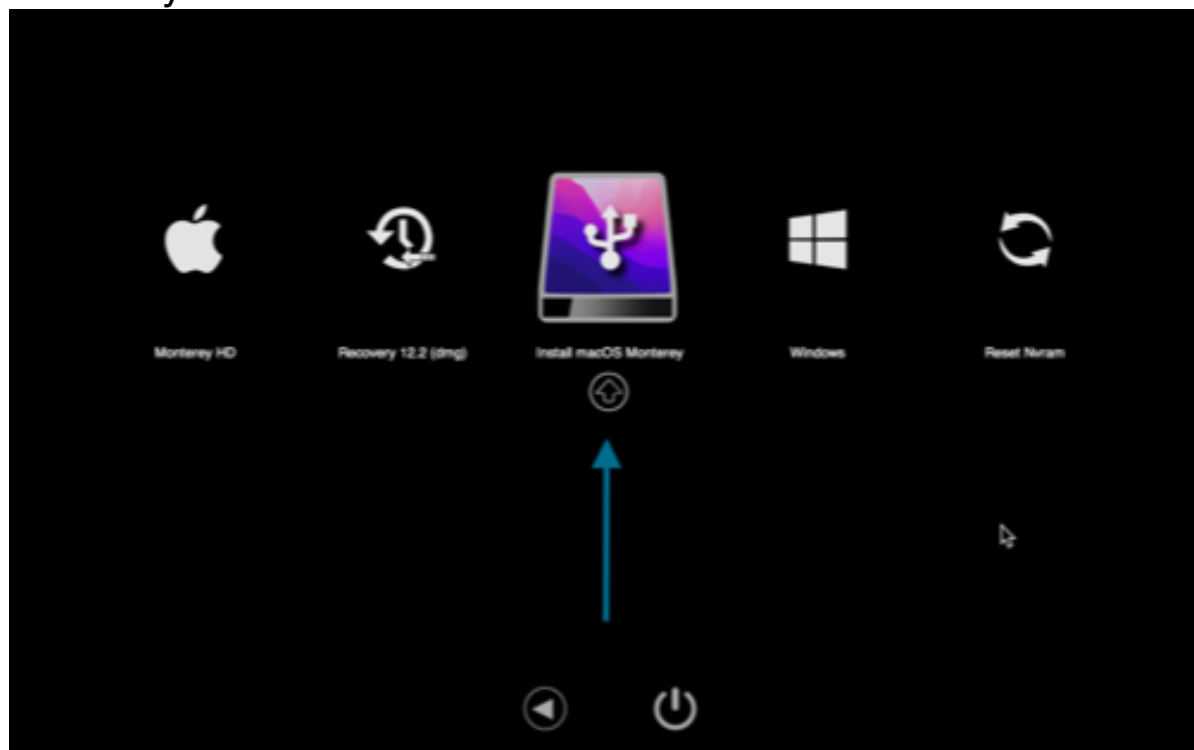


Formate the Disk then Install macOS

Reboot again Option EFI USB install Media, select macOS Installer then complet Installation

NOTE You have to boot multiple time on macOS Installer.
Reboot

Reboot again Option EFI USB install Media, select your Disk to complete installation You have to boot twice on the disk to complet

Mount the EFI Partition of the SSD then put the EFI Folder then unplug USB Install media then reboot from SSD

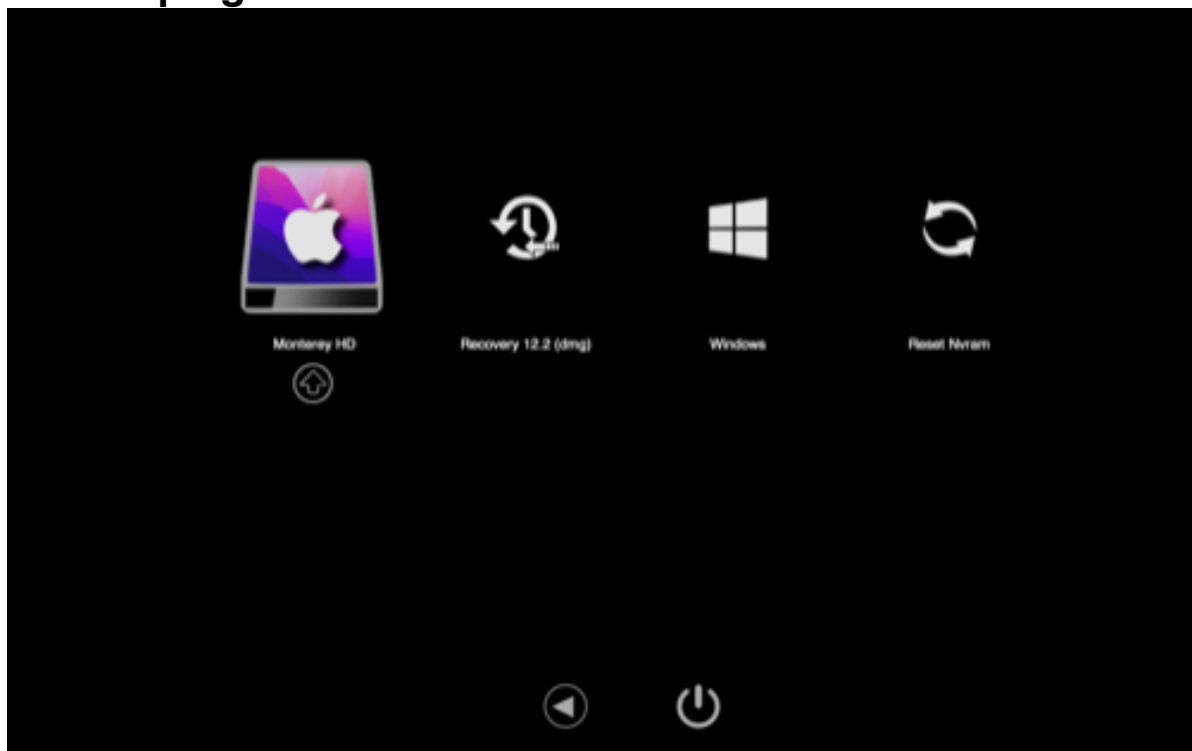

Done! Enjoy.

After everything is finished, you can remove the -v in the config.plist to have the apple at boot.