


Tools Required


- 2.5mm Allen key (also ; hex wrench, ; Allen key, ; Allen wrench)
- Philips head screwdriver (optional, if removing original case feet)

Installation

Step 1 - Remove side panel thumb screws.

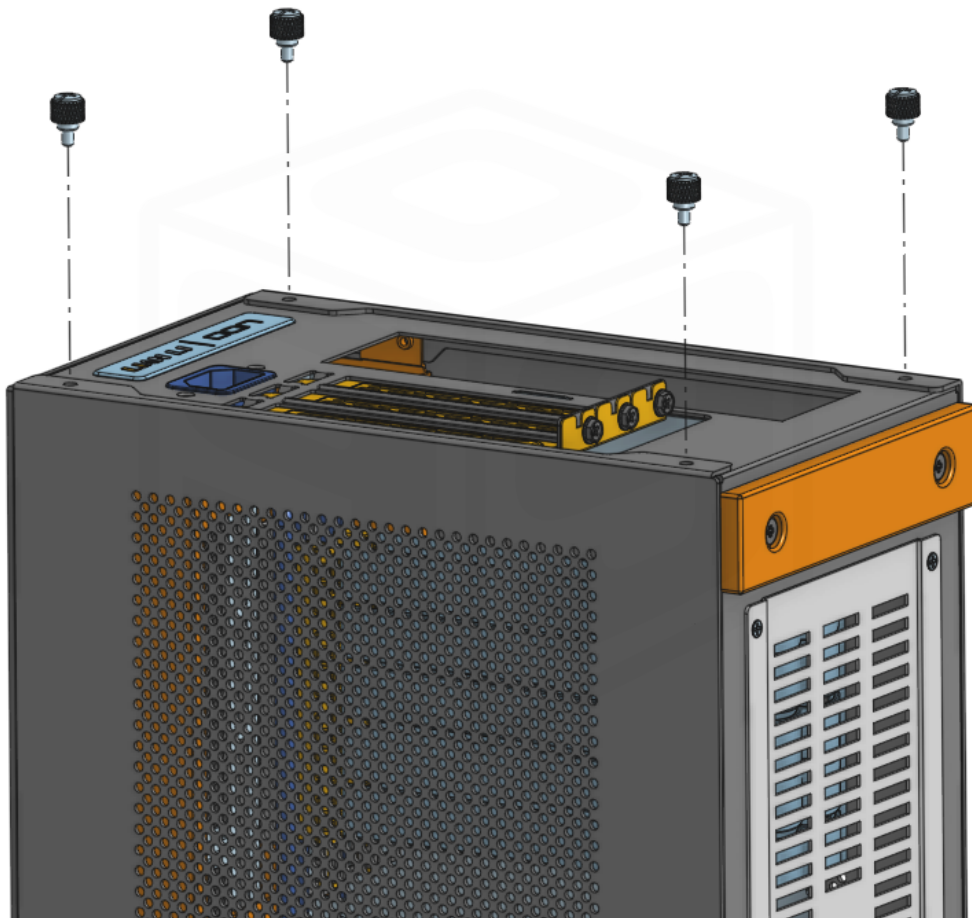


Step 2 - Align vertical stand screw holes with side panel thumb screw holes.

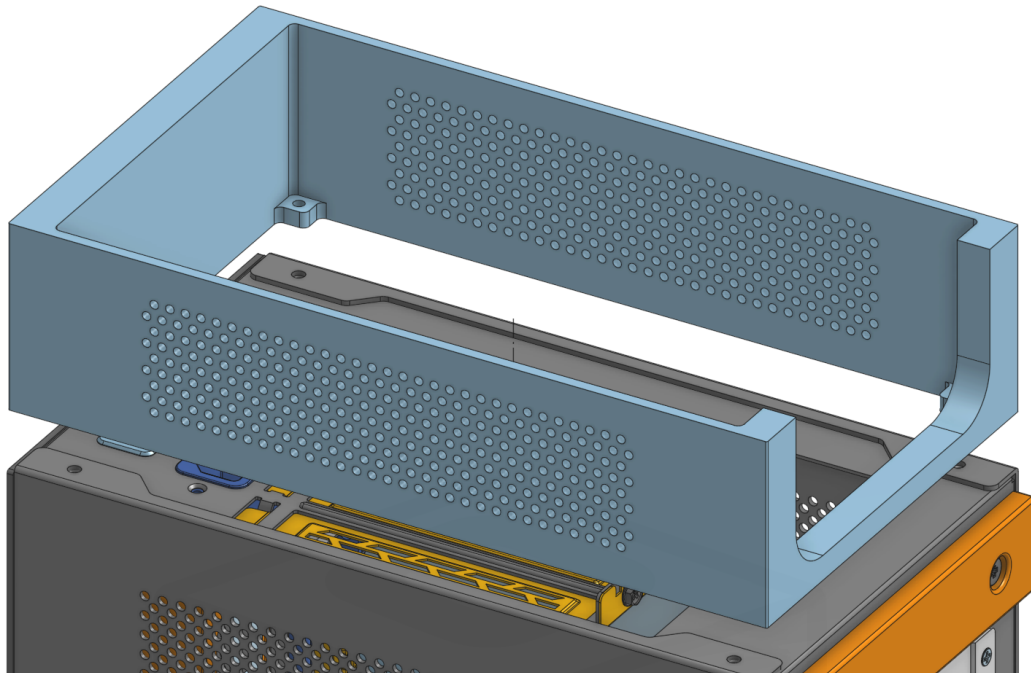

Step 3 - Install the vertical stand using the supplied screws and a 2.5mm Allen key, fastening them into the original thumb screw holes.

Please note: do not overtorque the screws as they may cause damage not only to the vertical stand, but to the threaded screw holes in the case.

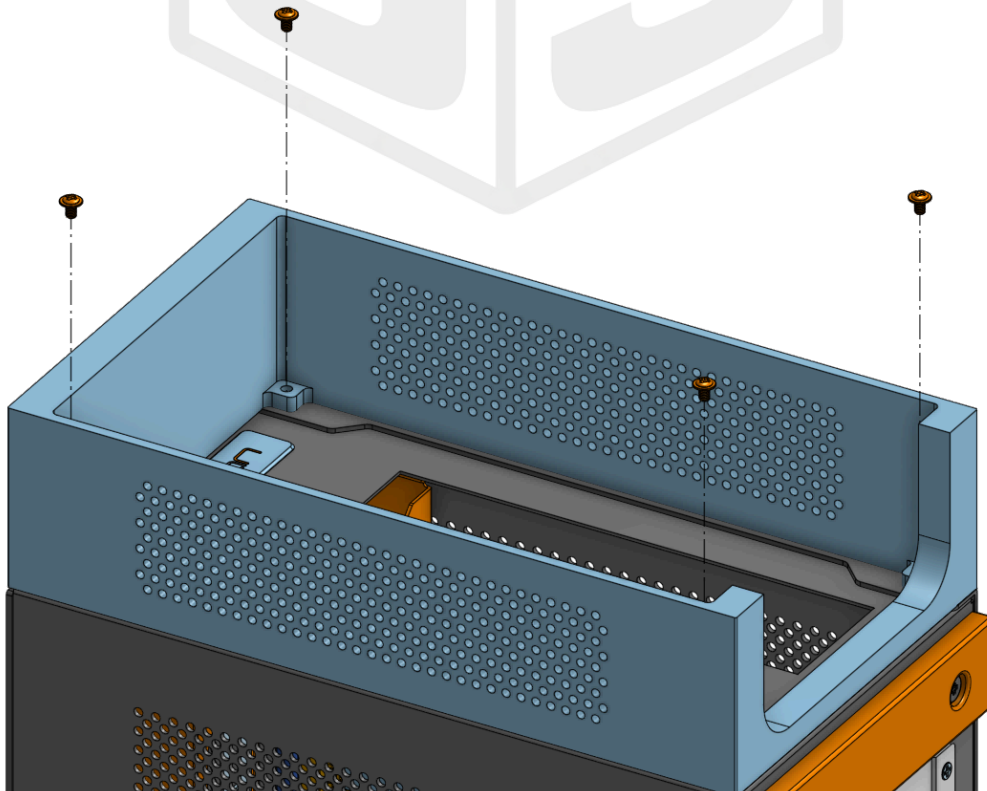

Step 4 (Optional) - Use philips head screwdriver to remove case feet.

