


Instead of any rotary a potentiometer can be placed and the ADC value read on ROT2A and ROT2B inputs.

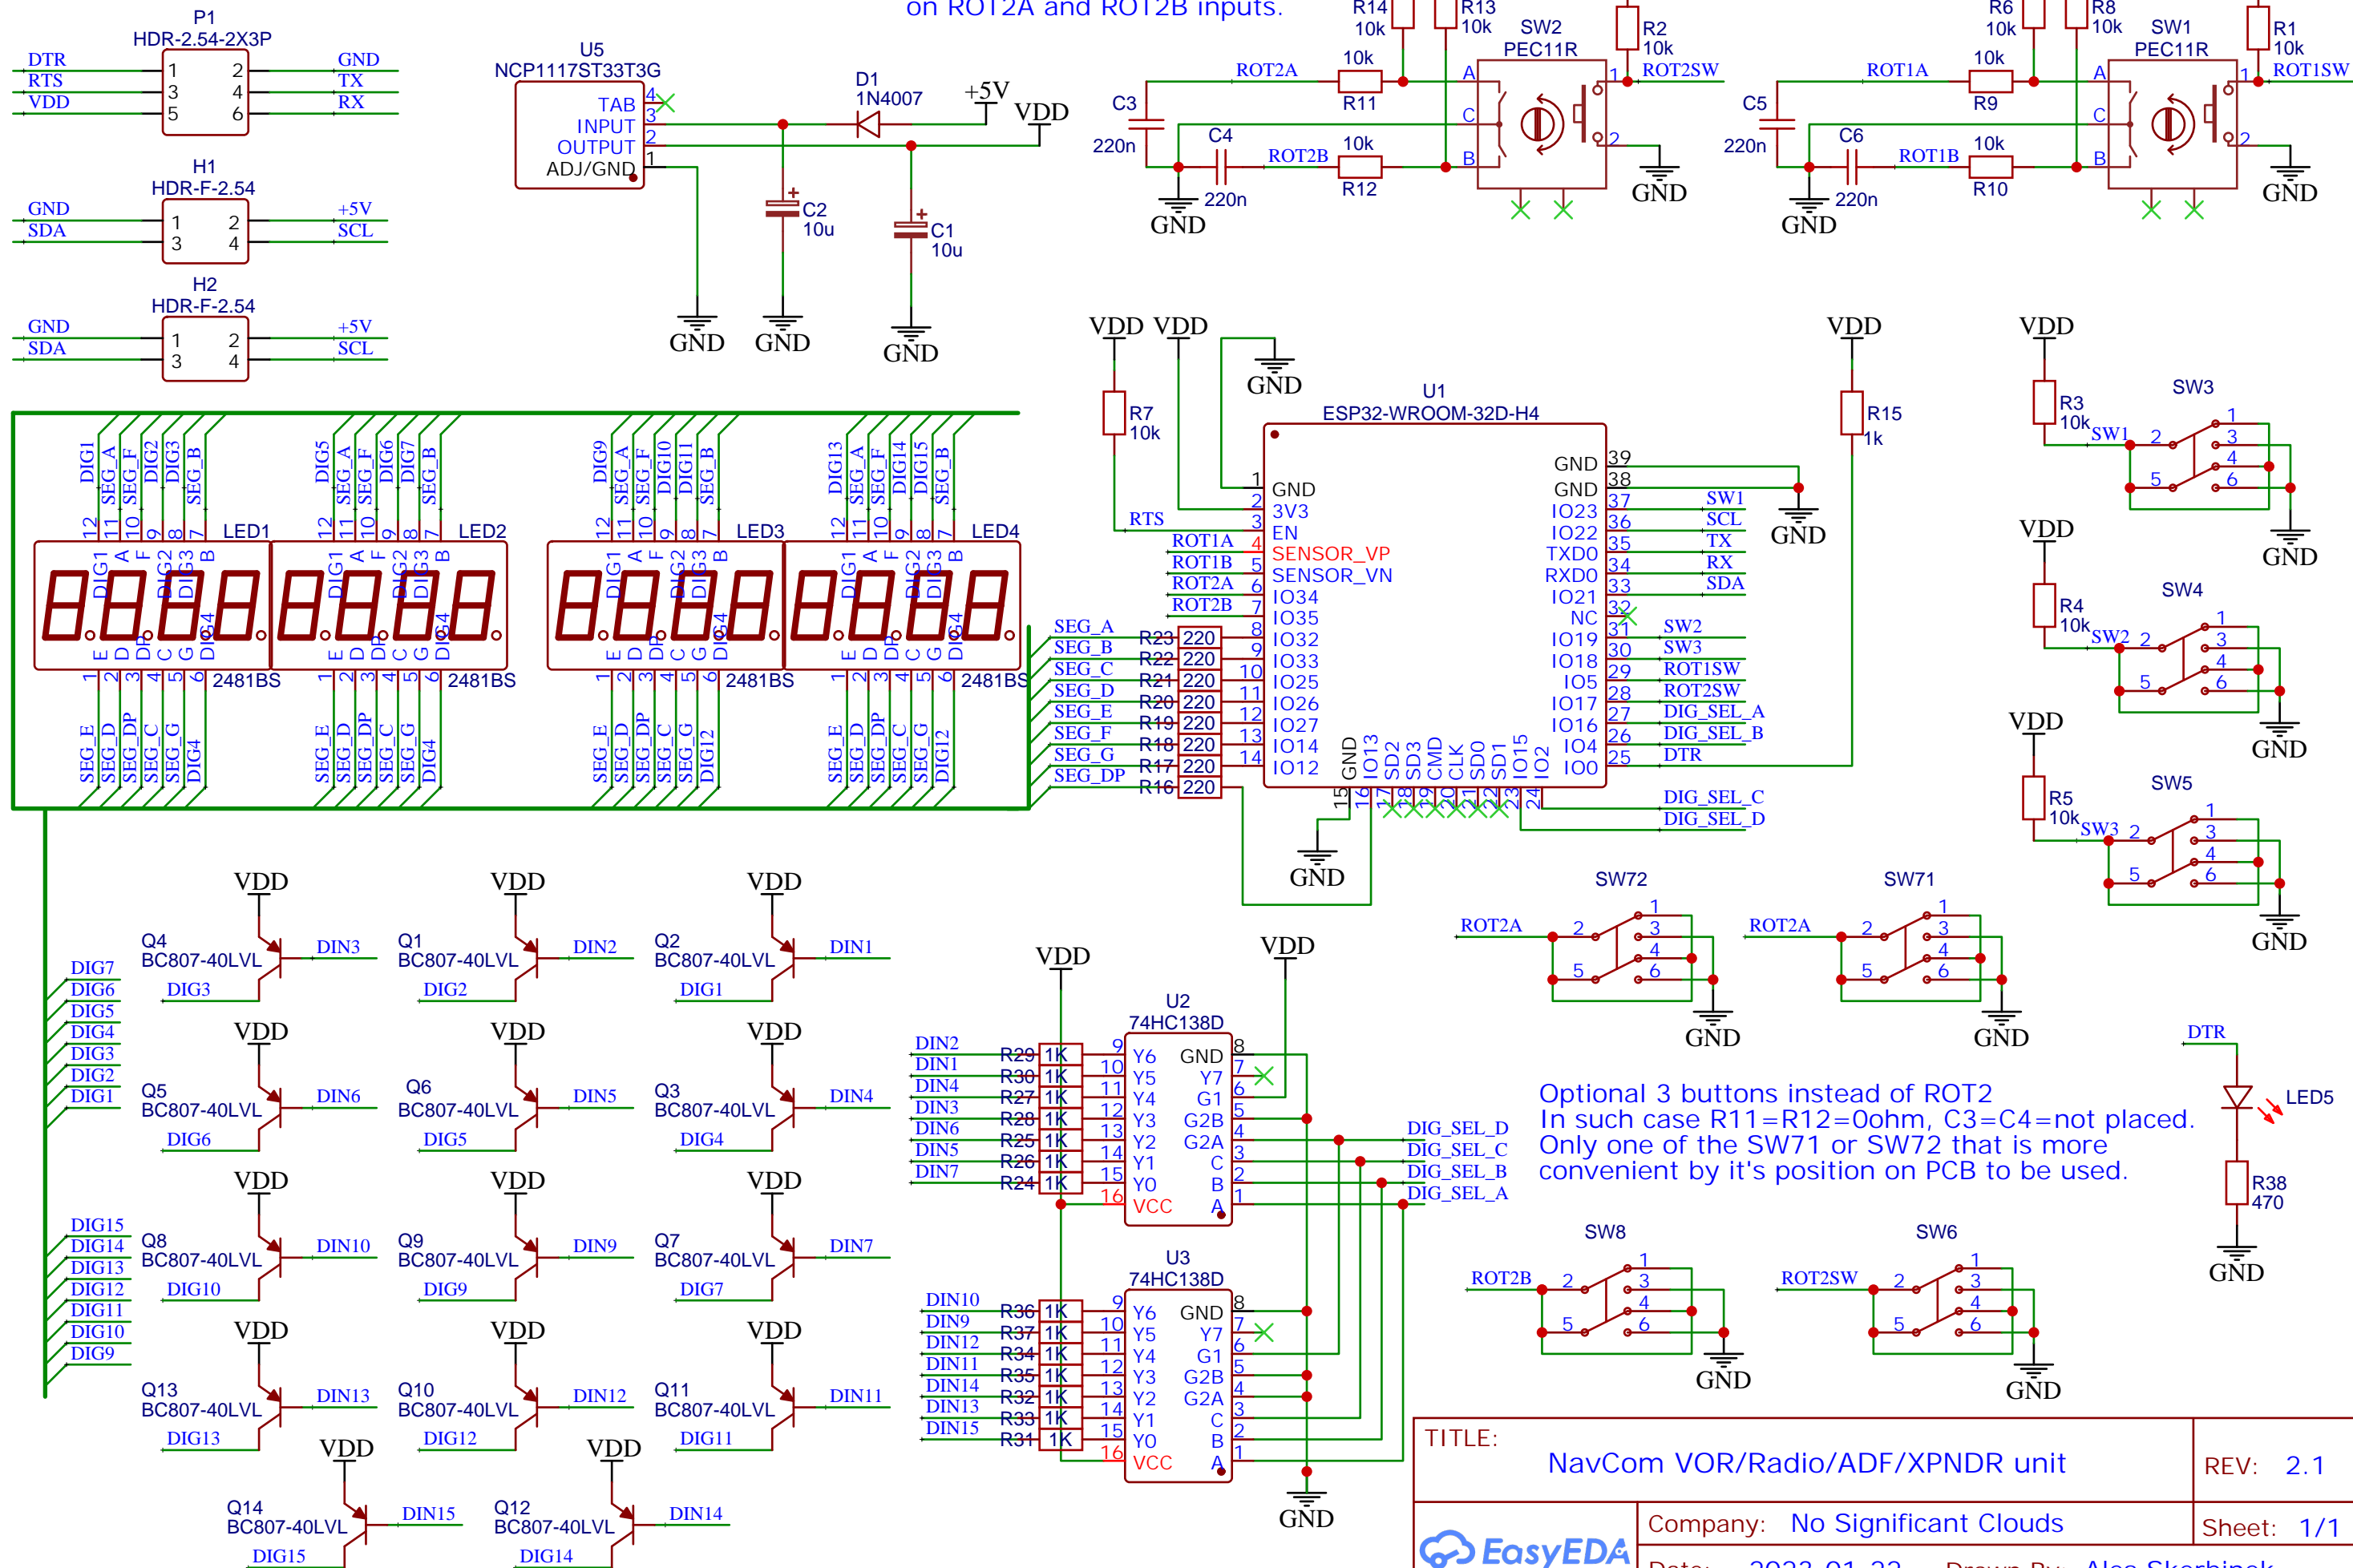

Optional 3 buttons instead of ROT2  
In such case R11=R12=0ohm, C3=C4=not placed.  
Only one of the SW71 or SW72 that is more convenient by it's position on PCB to be used.