
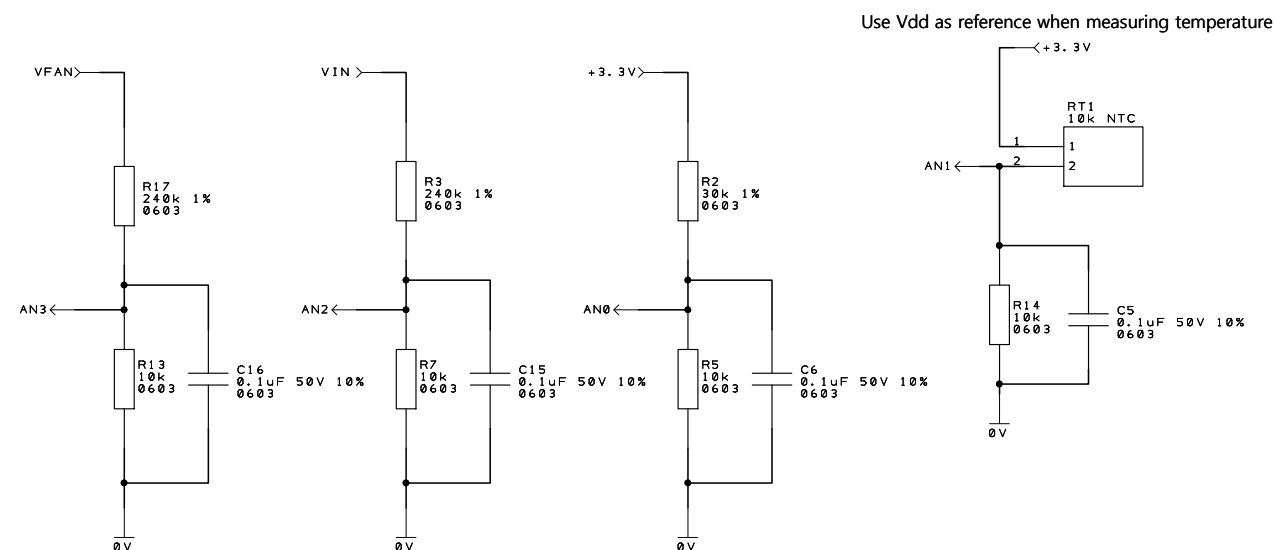




Use internal 1.024V ref for measurement of supply voltages.

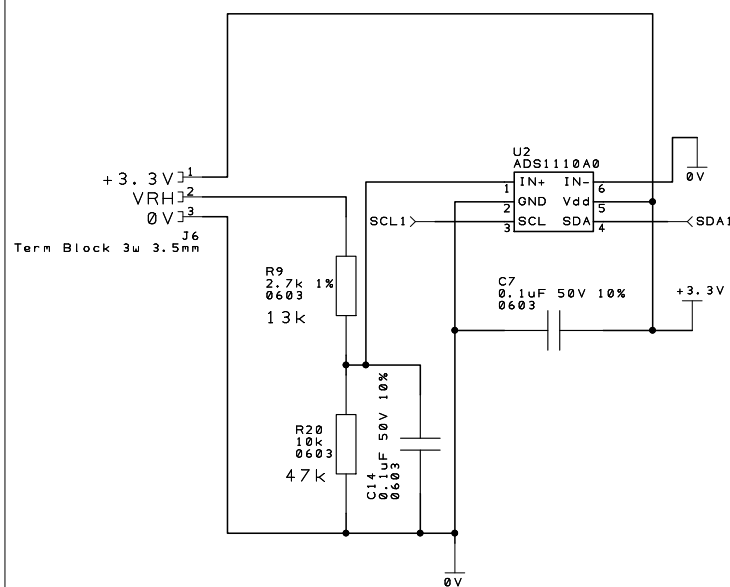

Use Vdd as reference when measuring temperature

E	D	C	B	A 25/05/2021	Drawn AMP	Check	Projection Do Not Scale			
Drn	Drn	Drn	Drn	Project LoRa Weather Station			Client			
Chk	Chk	Chk	Chk	Title LoRa Temperature & RH Sensor			Filename		Drawing No. SCH000042	Sheet 1 of 1