



## Arcade Button – Construction Manual




Feed the cable through the hole of the case.

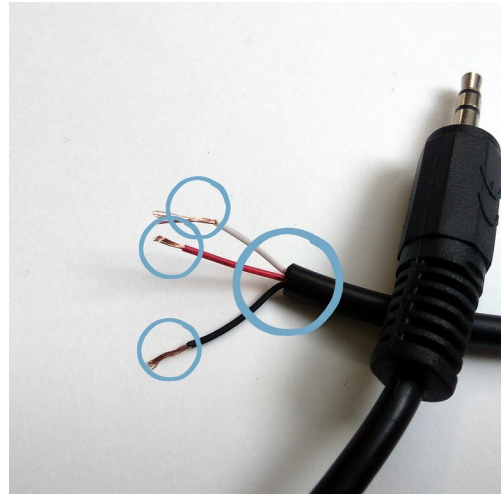


Remove the black insulation, ~3cm.  
Remove the coloured insulation of all 3 wires, ~4mm.

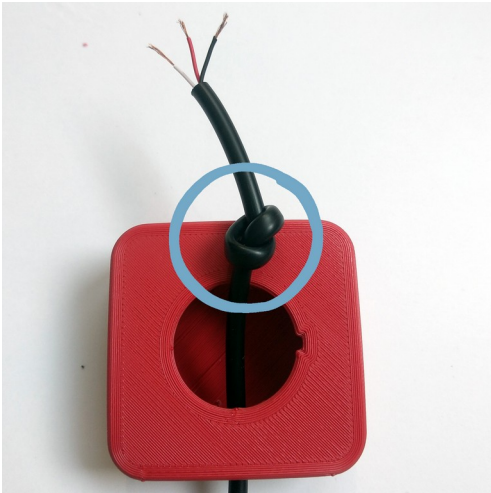


Knot the cable, ~5cm from the beginning

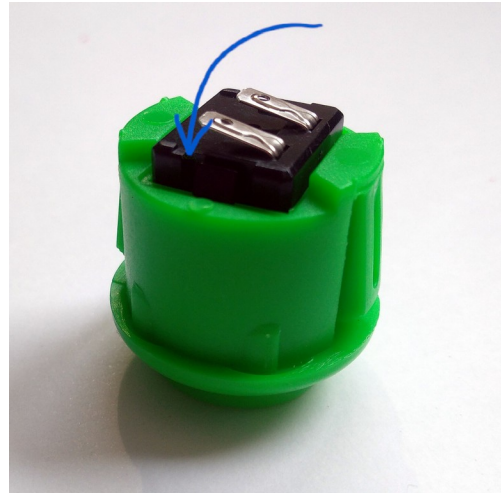

Bend both contacts of the button

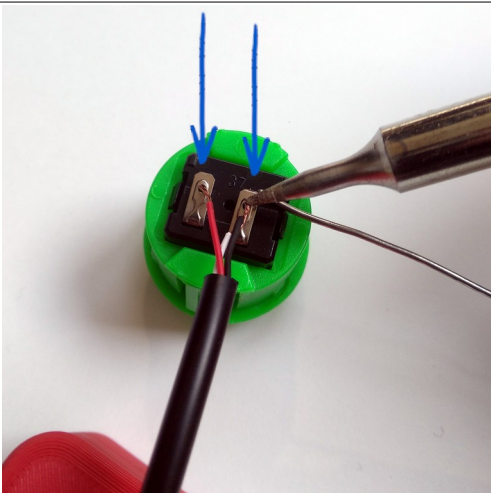

Solder the **red** wire on one contact,  
solder the **black & white** wire on the other contact.

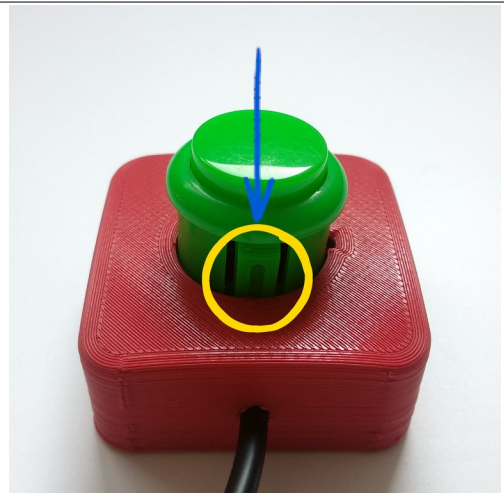

Push the button into the case. Please take care of the  
orientation, as shown in the picture.