


Put a frame on PCB.(Make sure that wall that has a depression become inside of PCB.)

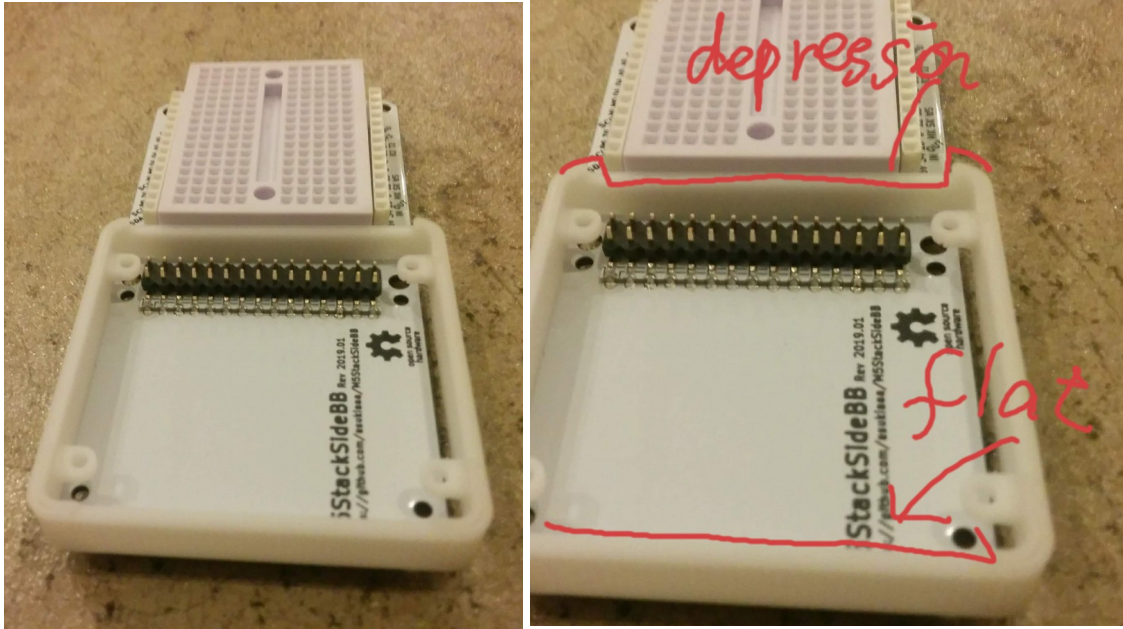

Put nuts(M3 \*2) and spacers(M3 5mm \* 2, M3 7mm \* 2) inside of a frame.



Put the pcb, frame, nuts and spacers into bag and bend with tape to reduce free space of bag.



Make sure tape is fixing the components in a bag and the thickness become less than 15mm.

