



Remove connectors on a bread board if it has hooks.

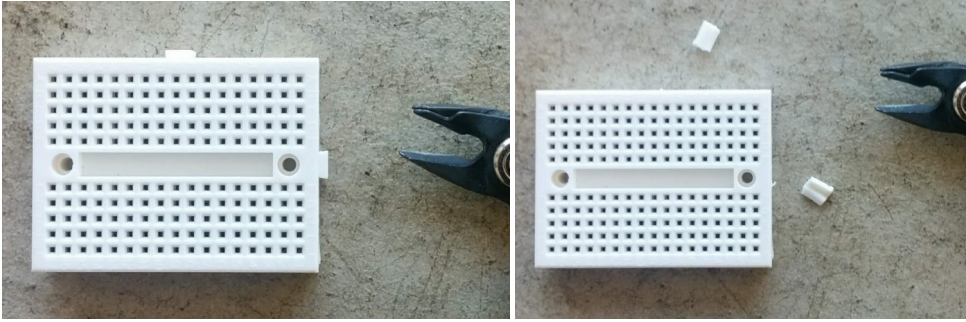

Put the bread board between pin sockets.

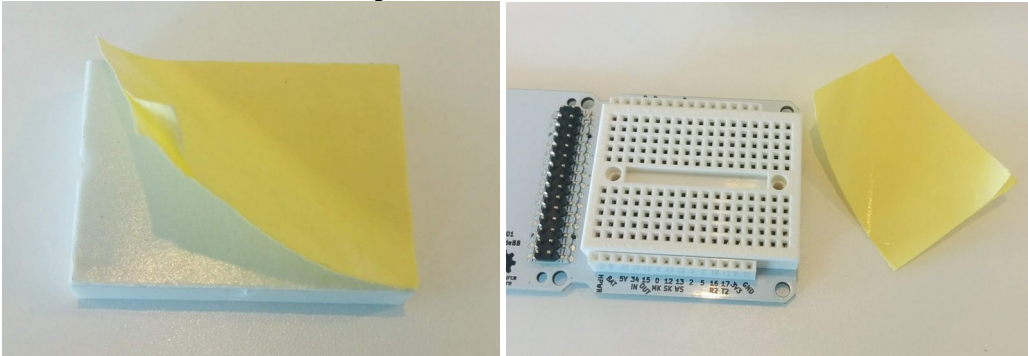

Make sure the hole position of pin sockets and bread board are parallel.  
Be careful not to shift over 0.7mm.

