


Raw Vbat Input




Stabilizing Headers




Bluetooth Connection




Voltage Sense

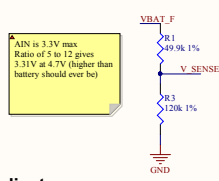


Current Sense

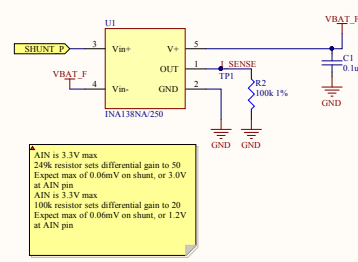


Teensy Headers

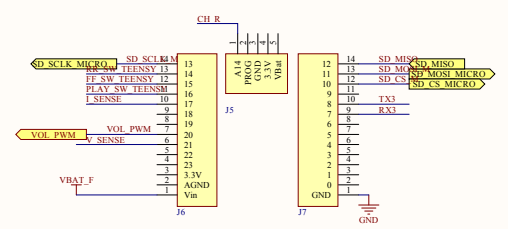

Vbat Fuse & Rev. Bias Protection

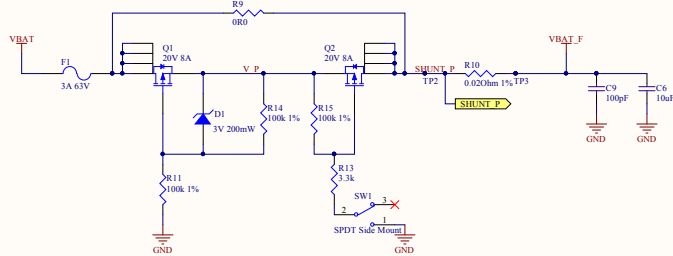


Pwr Indicator




Determine trace widths
Replace power switch with
side mounted version
Clean up schematic


Audio Amp

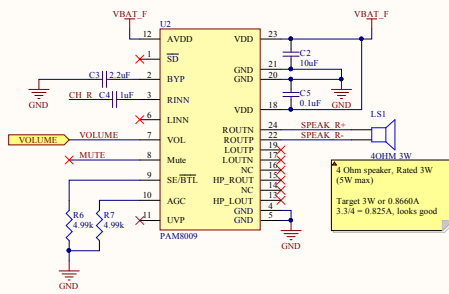


Volume Control

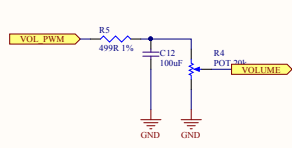

Micro SD Communication & Conn.

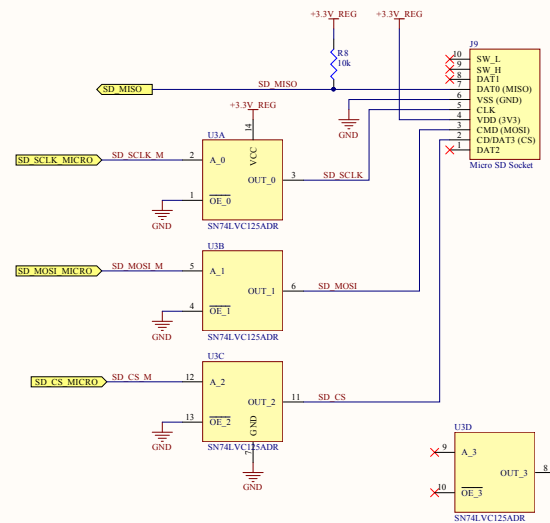

Micro SD - 3.3V Reg

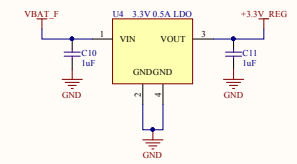

User Switches & Debouncing

