

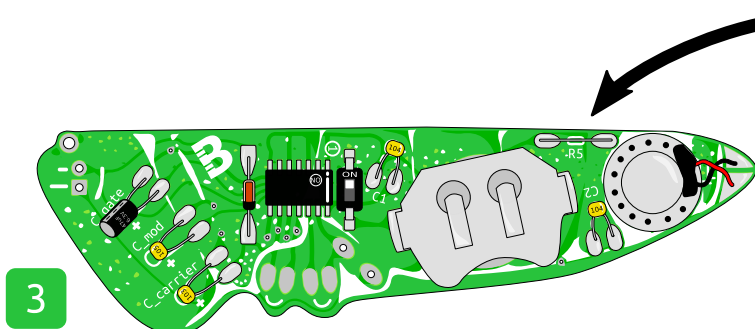
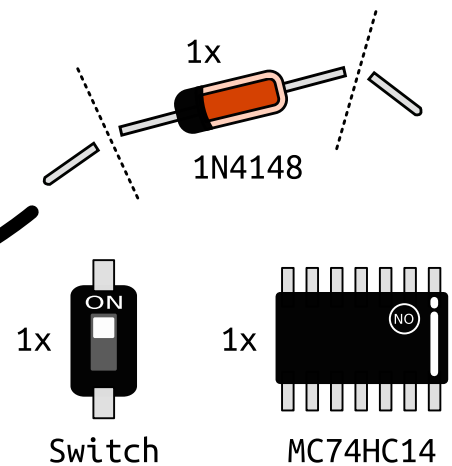
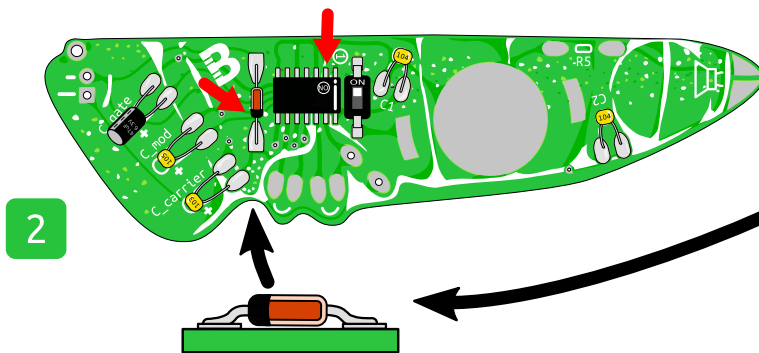
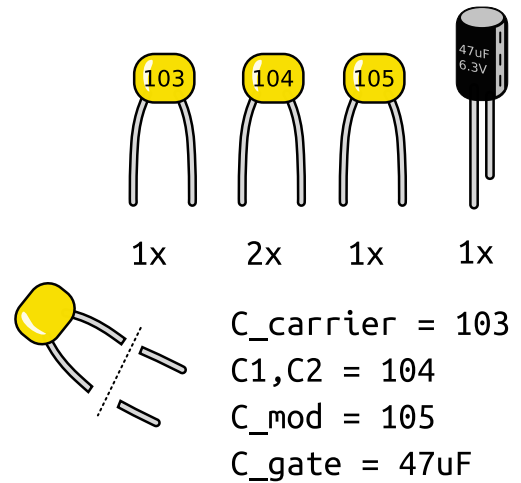
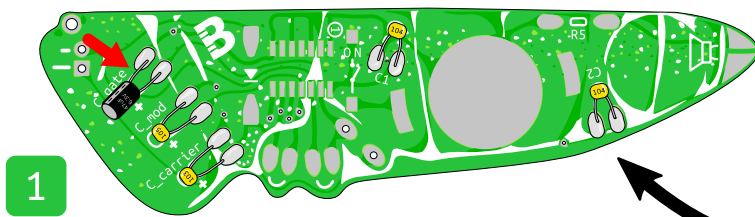
 A red arrow indicates that you should pay attention to polarity


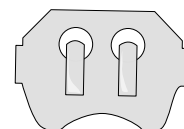
 Measure required length on the board  before cutting



wire offcut

CR2032 clip

Speaker



the CONEHEAD

Assembly Guide – Page 2

boldport.com/conehead

**BOLDPORT
CLUB**

