




Top

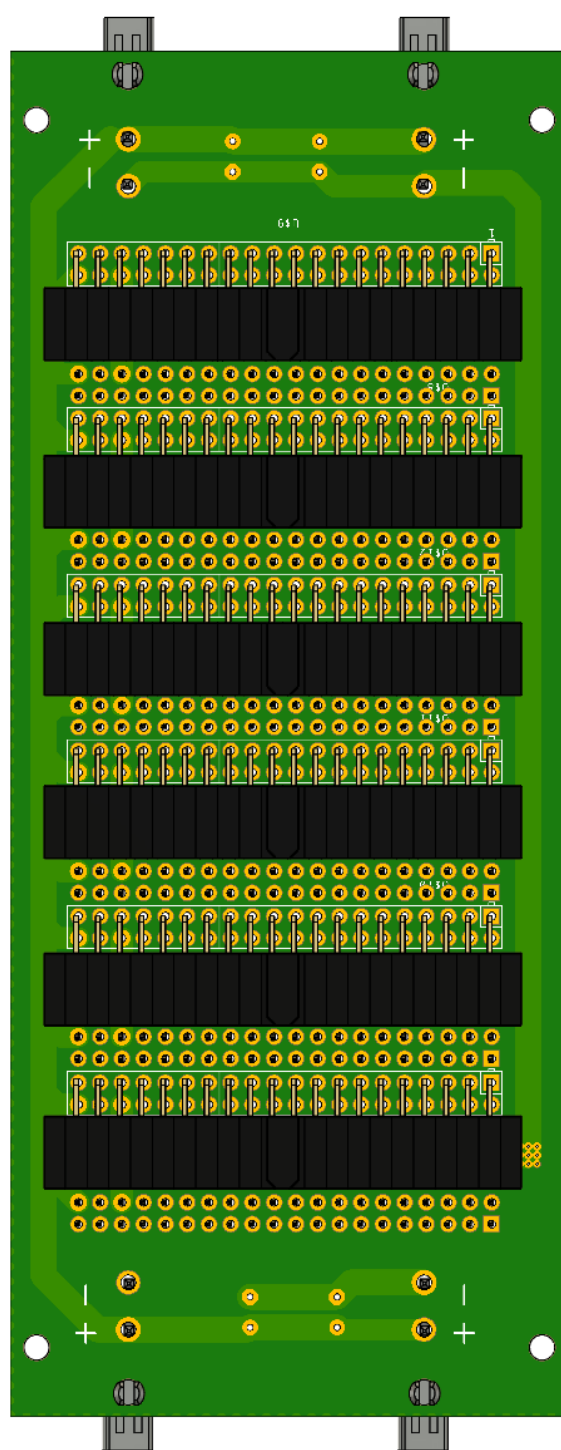

Bottom

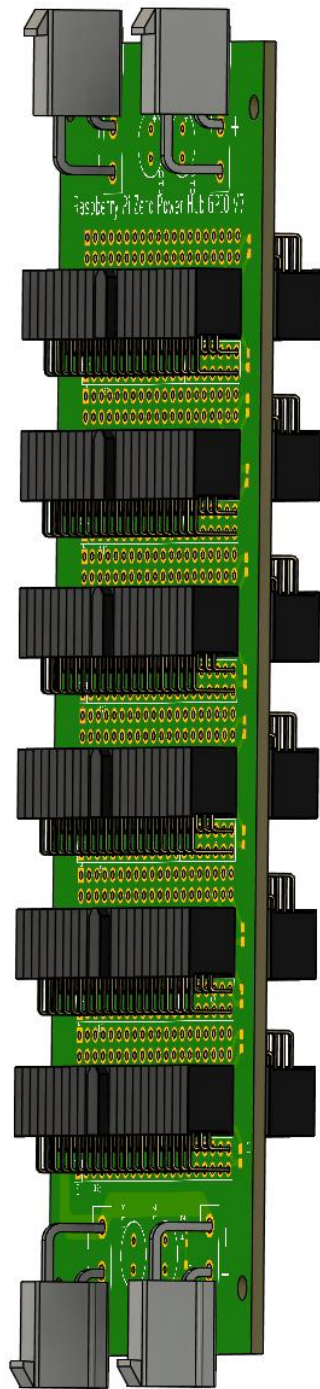

Side#2

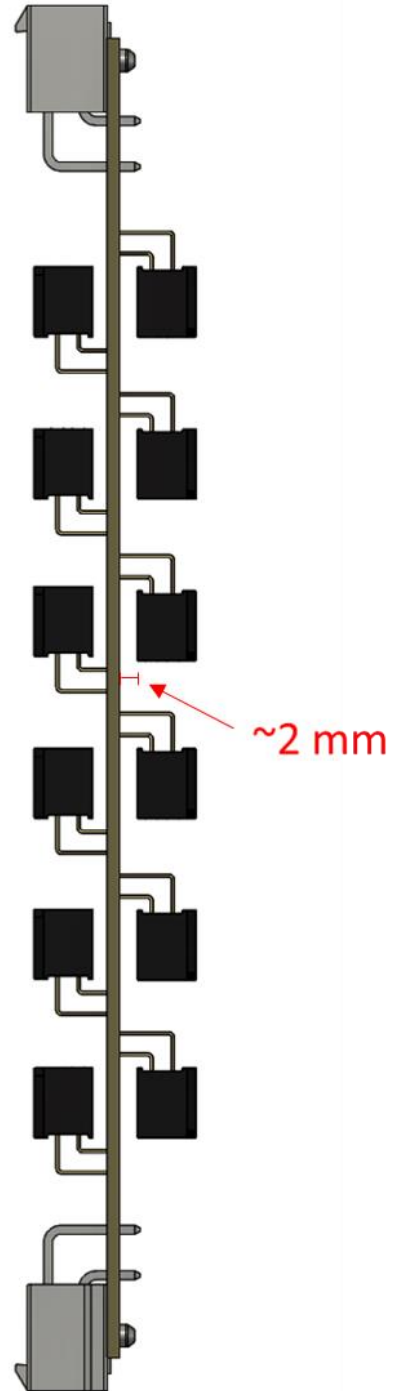

Side#1

Make sure that the connectors sit ~2mm above the surface of a PCB