


Use F342 To Fill In Along Bottom Of 36" Farm Sink Kit
Use F330 To Fill In Along Bottom Of 30" Farm Sink Kit

Build Up Floor Same Height As Filler For
Farm Sink To Rest On Using A 2x4

Build 4.5" Platform Using A 2x6 For
Cabinet To Rest On To Create Toe
Kit Base

Set Farm Sink On Filler
and Block Under For Support

Cut BEP3 To 12" Tall & 1.5" Wide
To Fill In Along Each Side Of Farm Sink
& Mount On The Top Sides Of RW3618BD
For FSK36 or RW3018BD For FSK36
To Box In Farm Sink Sides

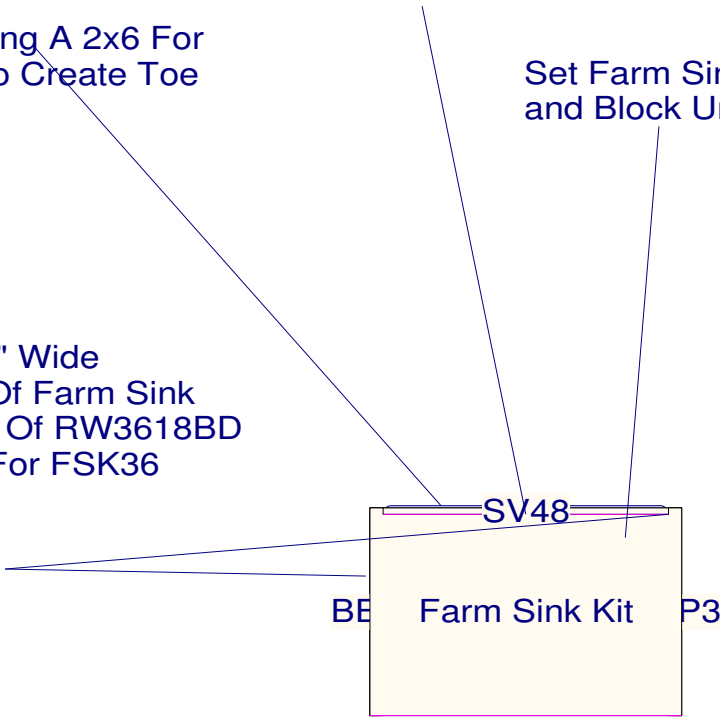

All dimensions _size designations given are subject to verification on job site and adjustment to fit job conditions.	Online Cabinets Direct 3515 Cleburne Road Spring Hill, TN 37174 Office: 615-828-8377	This is an original design and must not be released or copied unless applicable fee has been paid or job order placed.	Designed: 8/26/2014 Printed: 2/24/2015		
Farm Sink Design			All	Drawing #: 1	No Scale.