


Photogate for flight mill

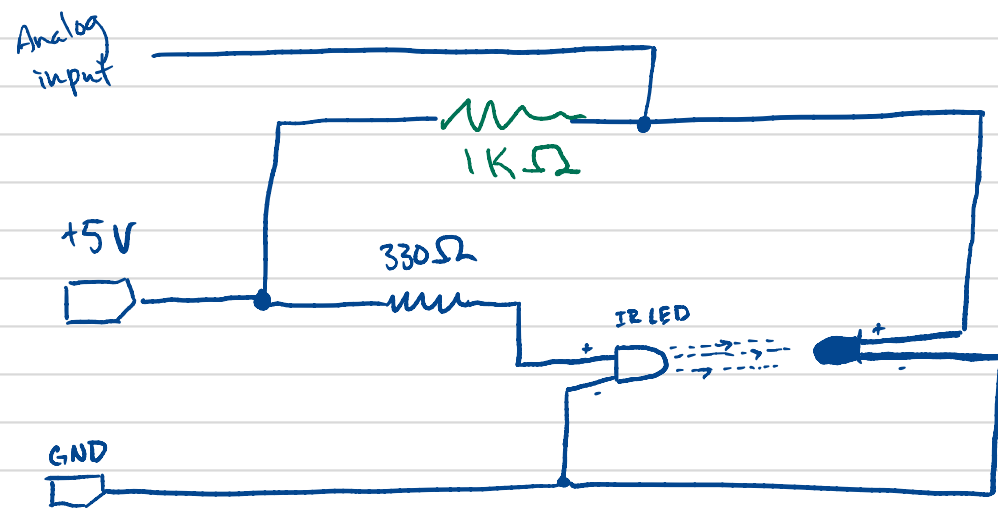

→ Break in beam
= \uparrow in Analog voltage