


Signal Path for Betacam/SP Transfer

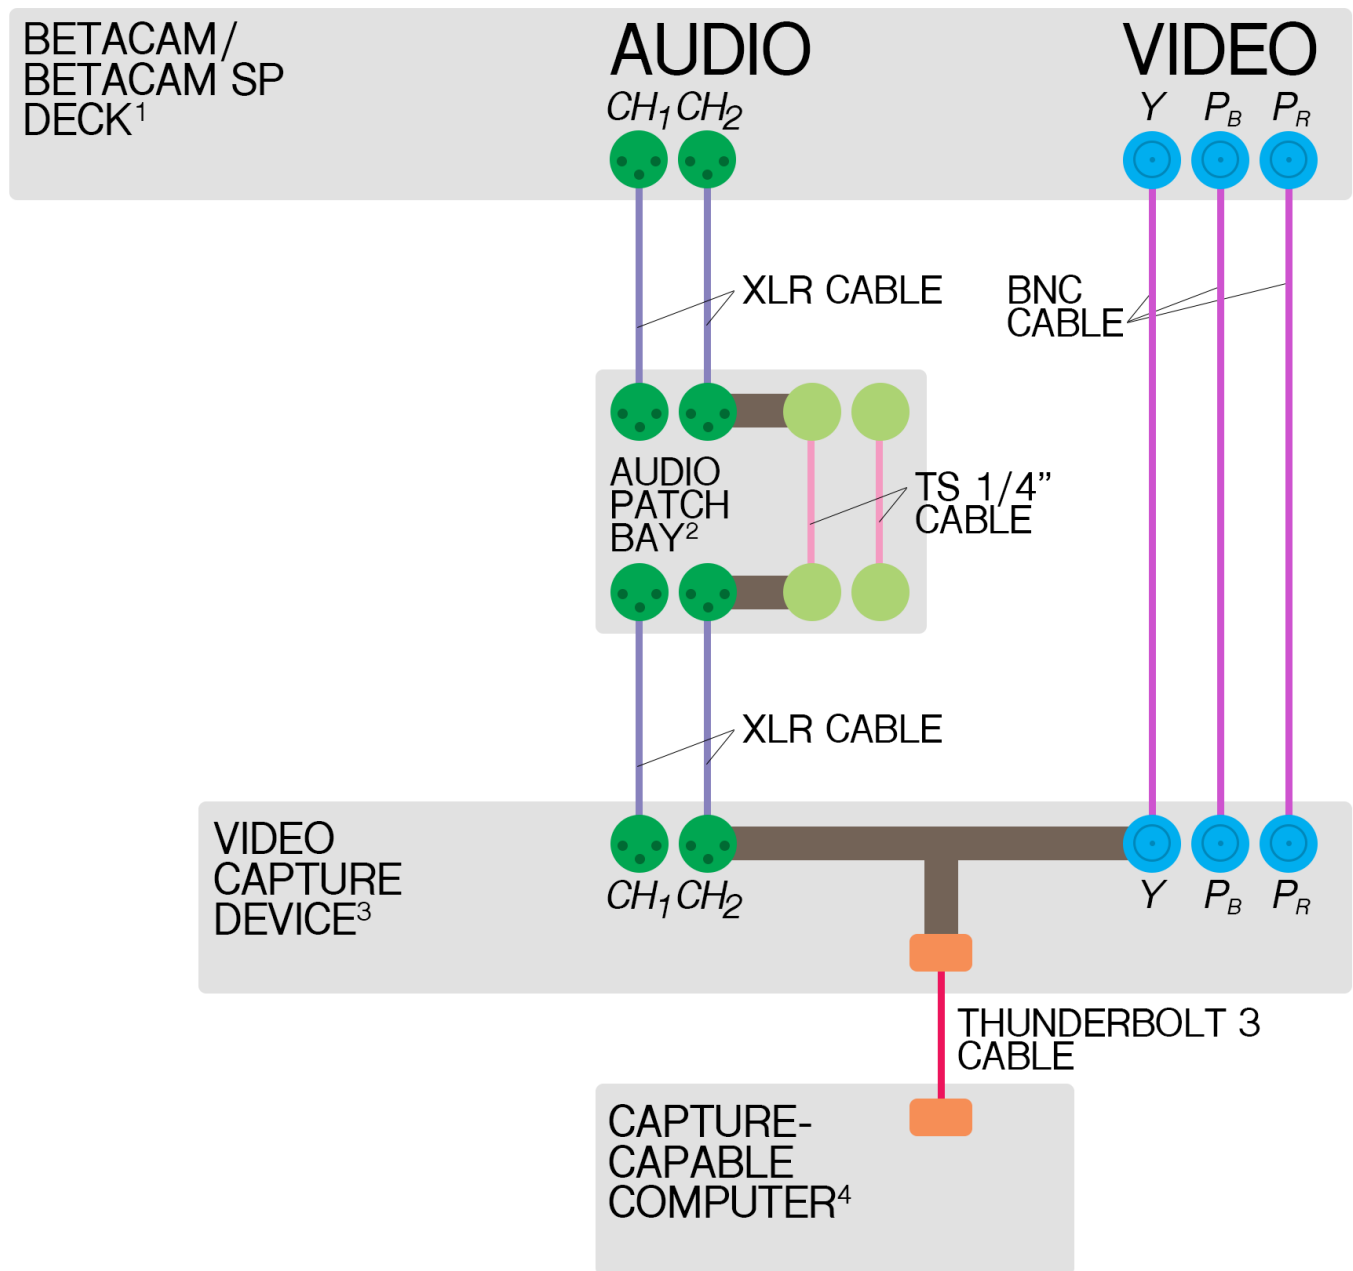

BMA Hardware

1. Sony PVW-2800 Deck
2. Neutrik NYS-SPP L1
3. Blackmagicdesign UltraStudio HD Mini
4. Mac with *vrecord* installed

Note: Patch bays are used at BMA to increase efficiency when moving between transfer workflows, but are not necessary for this setup.