


Signal Path for Digibeta Transfer

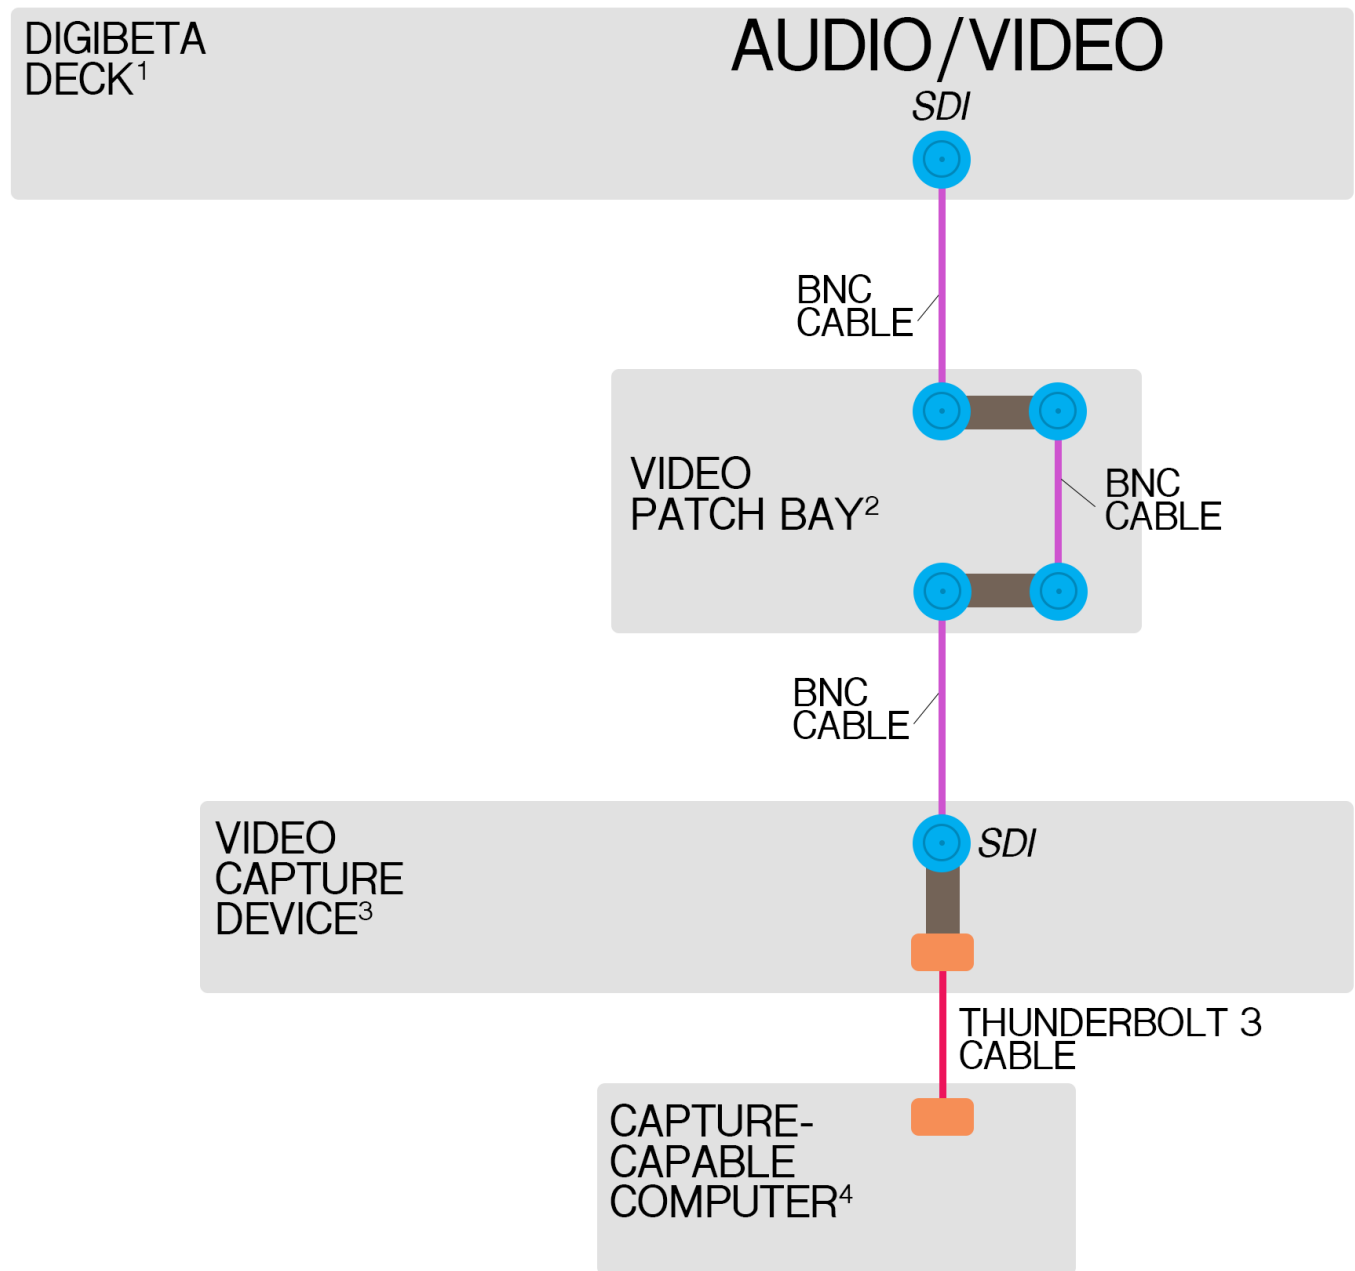

BMA Hardware

1. Sony DVW-A500
2. [any patch bay with appropriate ports]
3. Blackmagicdesign UltraStudio HD Mini
4. Mac with *vrecord* installed

Note: Patch bays are used at BMA to increase efficiency when moving between transfer workflows, but are not necessary for this setup.