


# SSH-E3

Smart Swappable Hotend

Rev 0.1

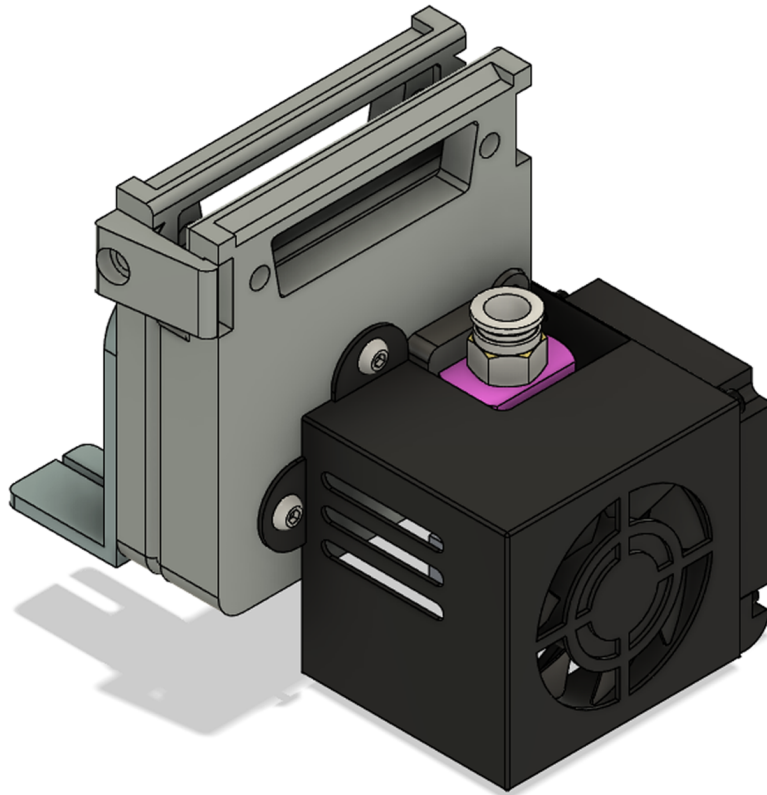


# BACK PLATE ASSEMBLY



The use of M3 threaded inserts is required for assembly of the SSH-E3  
you can buy them at this link <https://amzn.to/3aiQ5k4>




install snapfit with M3x6 screw

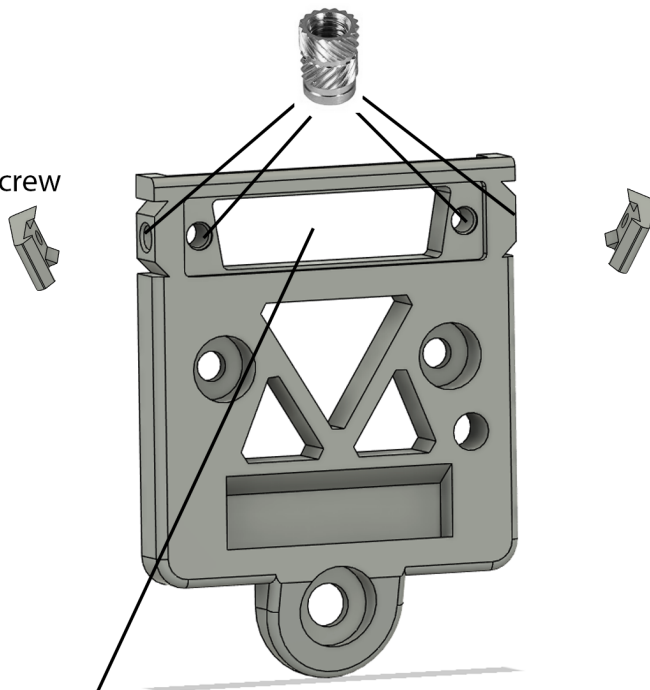


install a 25-pole female D-SUB connector with two M3x6 screws




# FRONT PLATE ASSEMBLY

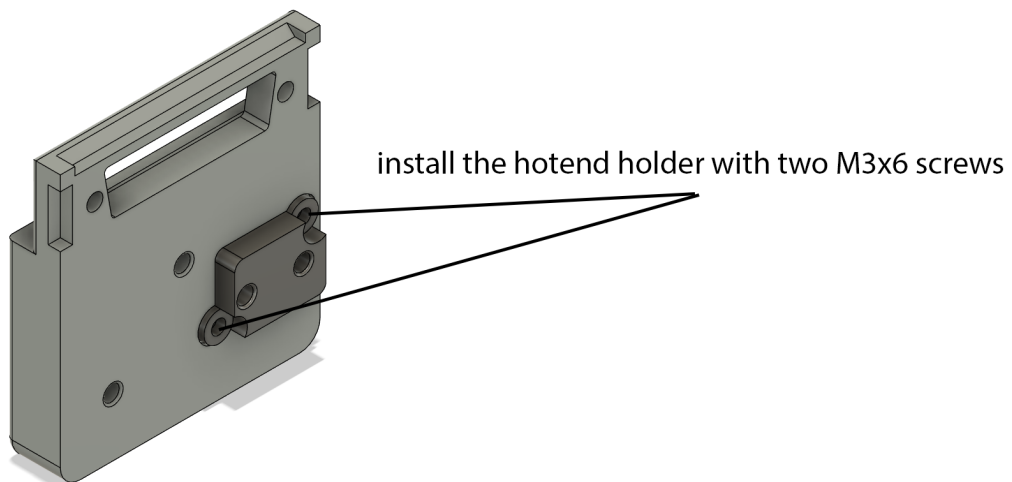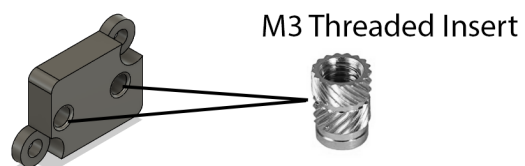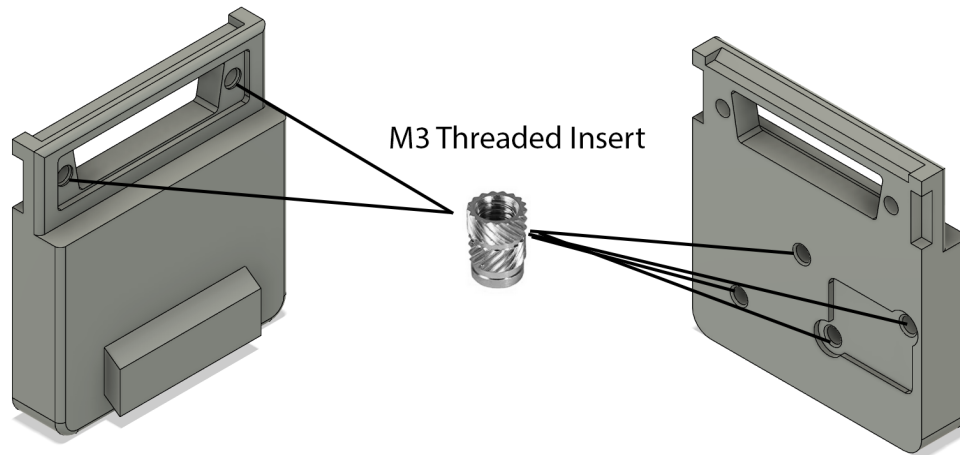


# FRONT PLATE ASSEMBLY

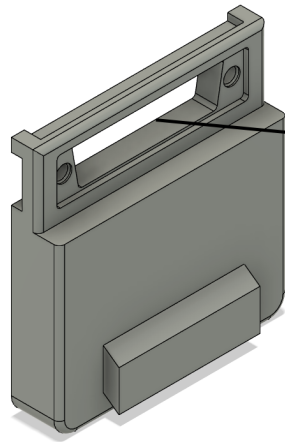

Install the male 25-pole d-sub connector with two M3x6 screws

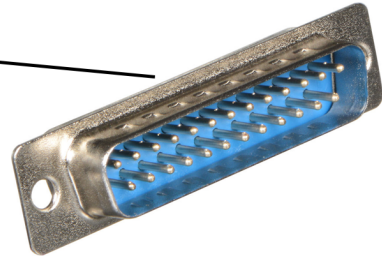


# HOTEND ASSEMBLY

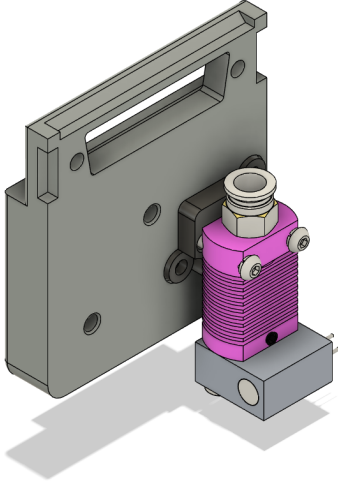

Install the hotend with the original screws

Install the cover with the fans with the original screws

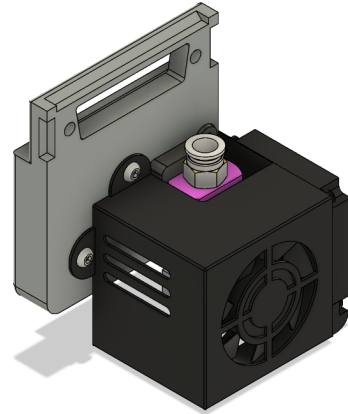

Wiring the D-Sub connectors via the pcb board (optional) or directly with the wires.  
Refer to the connection diagram