
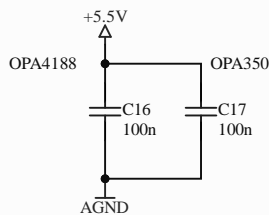





Title		
Size	Number	Revision
A4		
Date:	10/11/2020	Sheet of
File:	C:\Users\...\Analog_Frontend01.SchDoc	Drawn By:

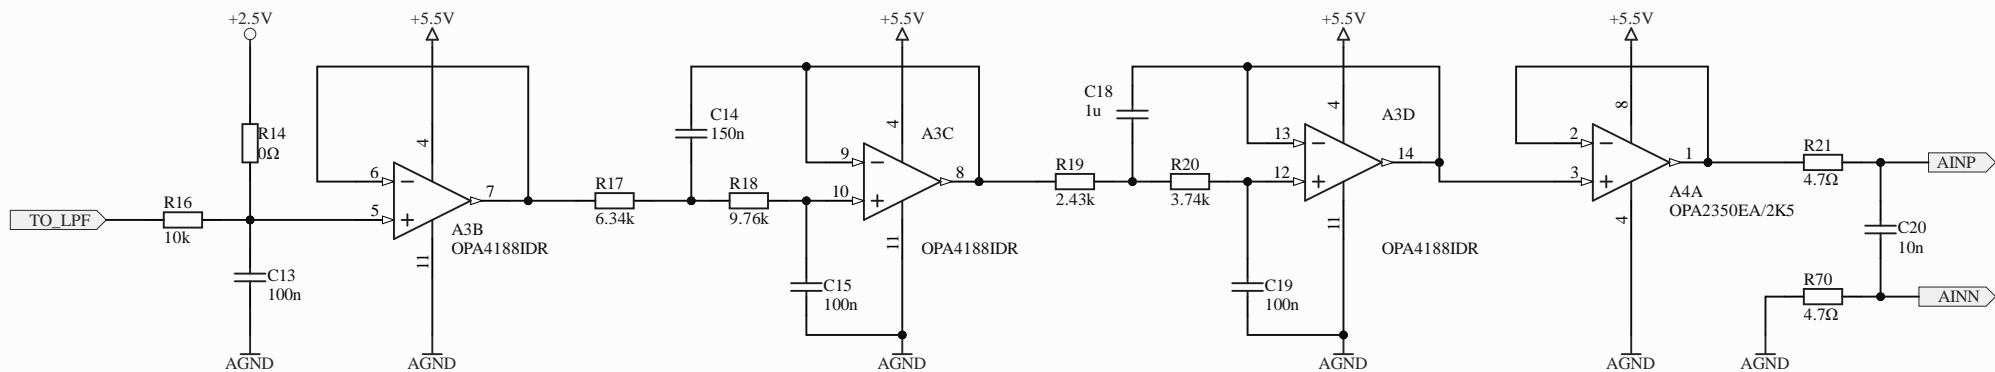


Title		
Size	Number	Revision
A4		
Date:	10/11/2020	Sheet of
File:	C:\Users\...\Analog_Frontend02.SchDoc	Drawn By:

When programming MCU with SWD using STLINK programmer, BOOT0 is pulled low (switch in position 2-3). When programming with USB, pull BOOT0 high.


Title		
Size	Number	Revision
A4		
Date:	10/11/2020	Sheet of
File:	C:\Users\...\MCU.SchDoc	Drawn By:

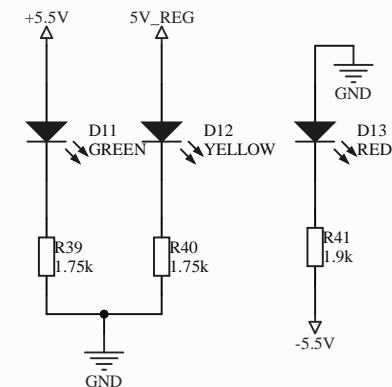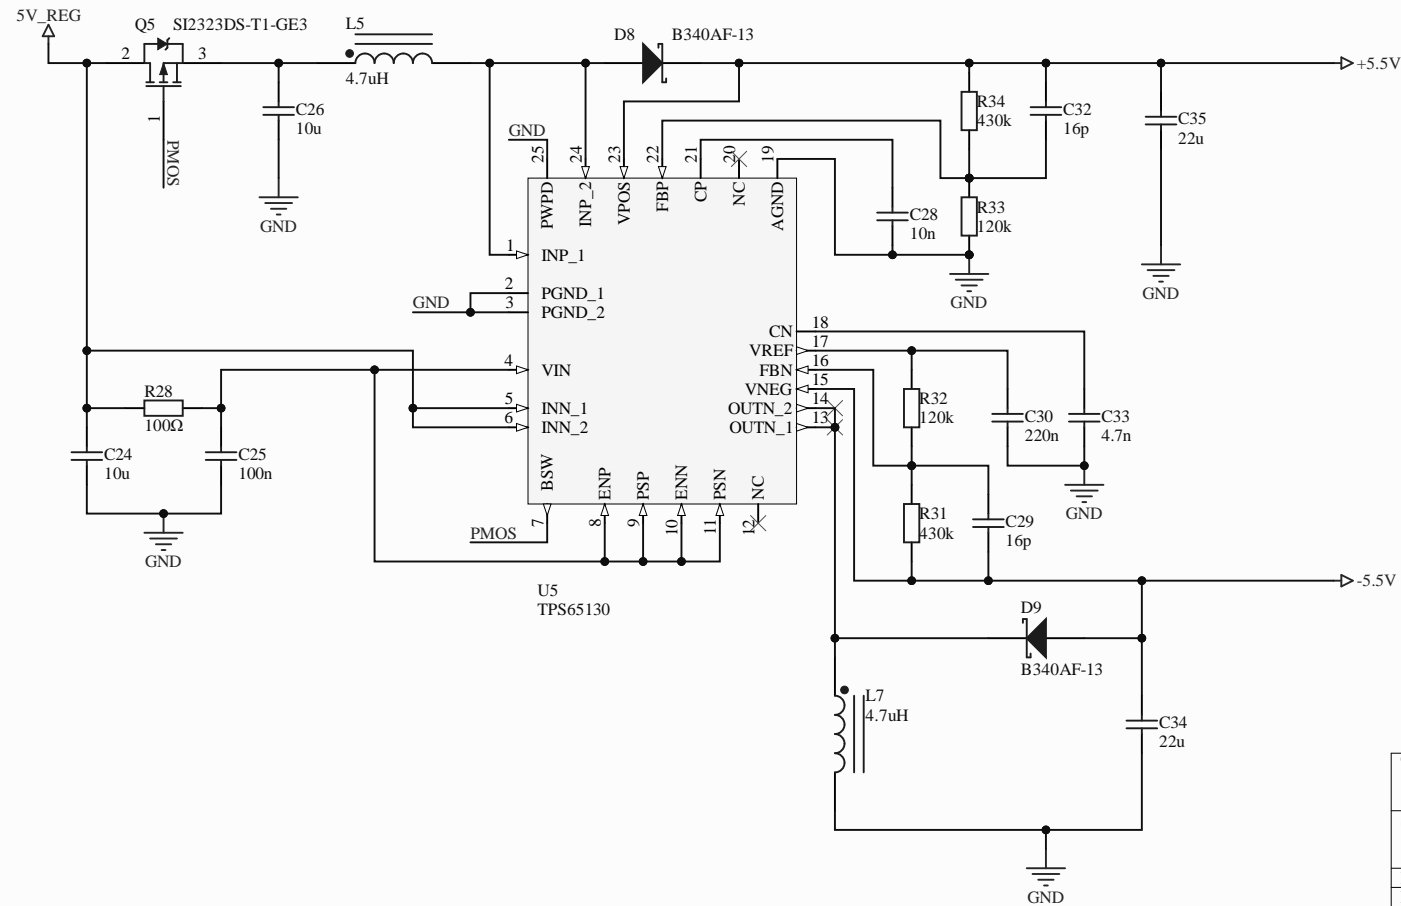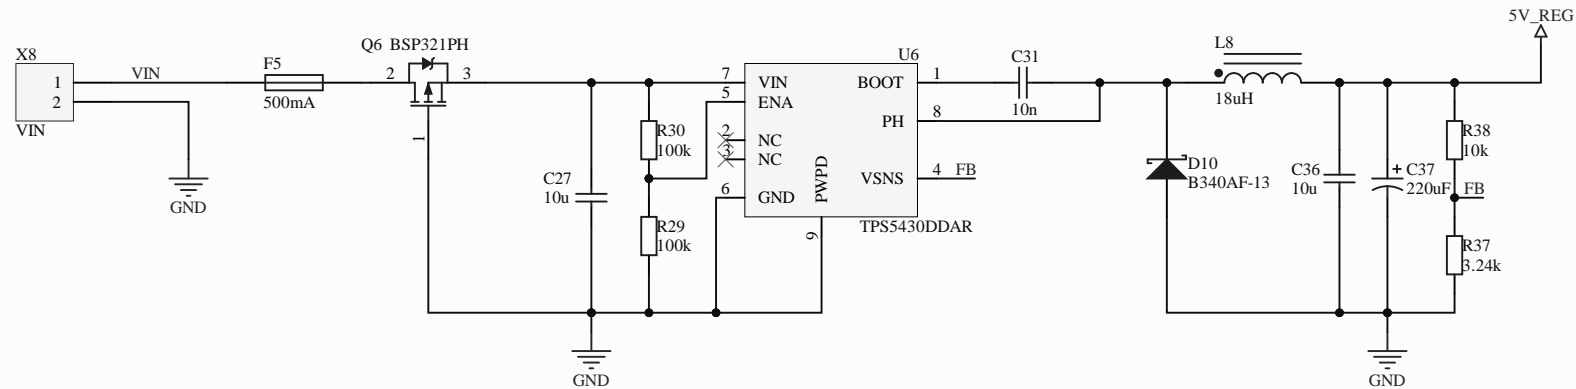

Title		
Size	Number	Revision
A4		
Date:	10/11/2020	Sheet of
File:	C:\Users\...\Power supply.SchDoc	Drawn By:

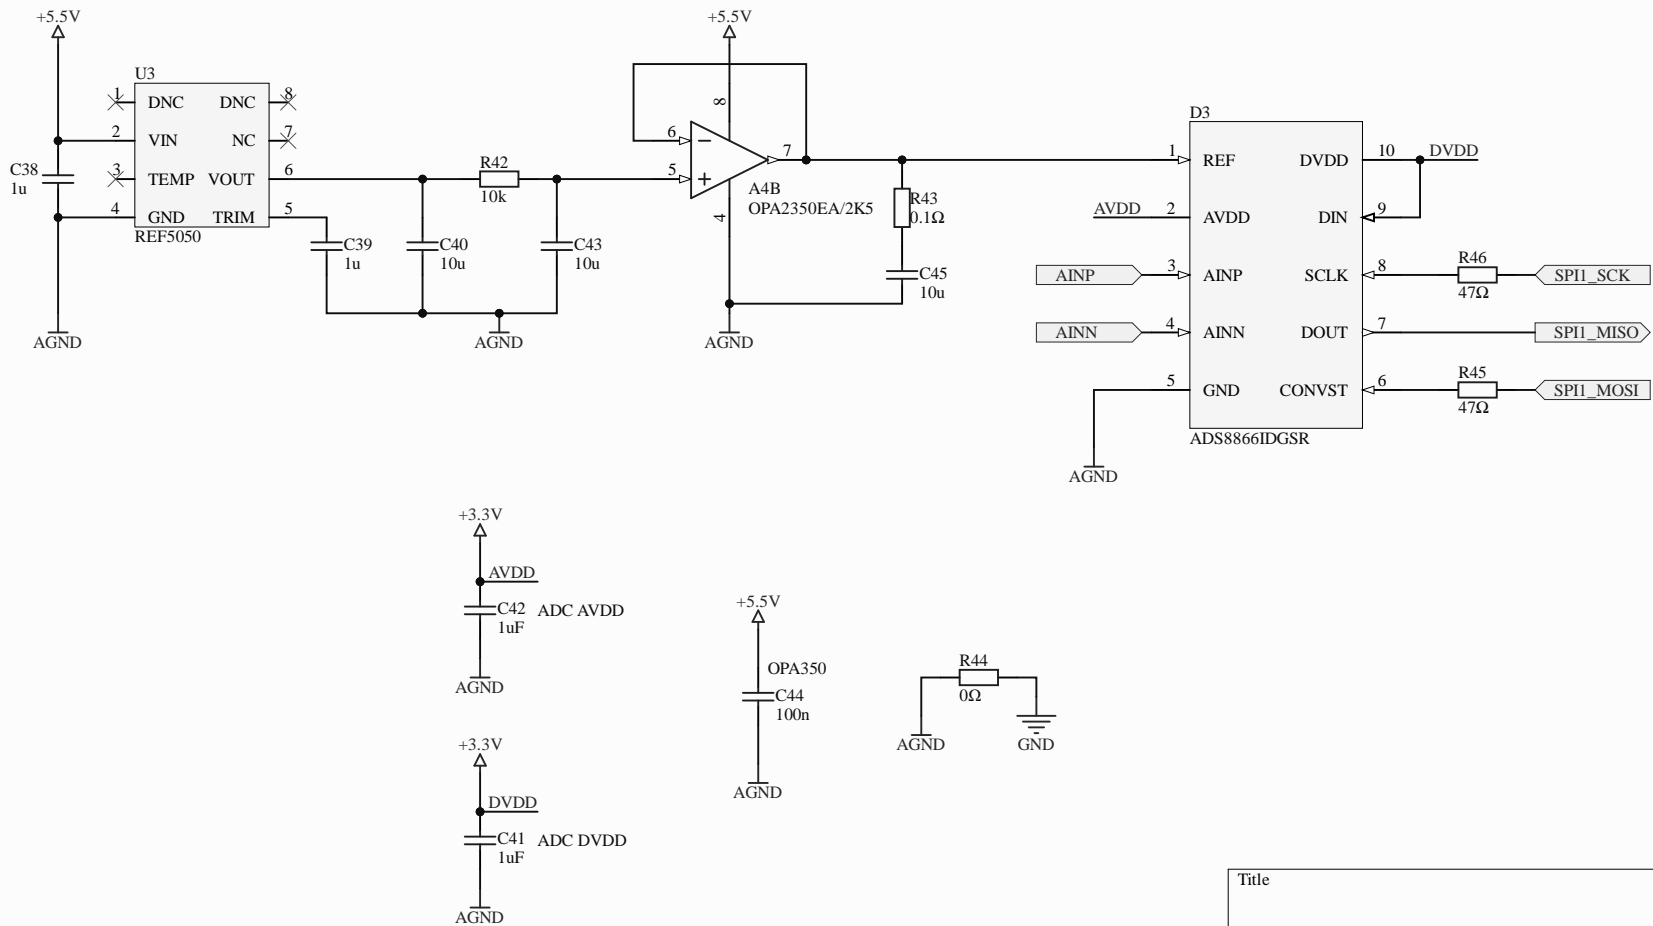

Title		
Size	Number	Revision
A4		
Date:	10/11/2020	Sheet of
File:	C:\Users\...\ADC.SchDoc	Drawn By:

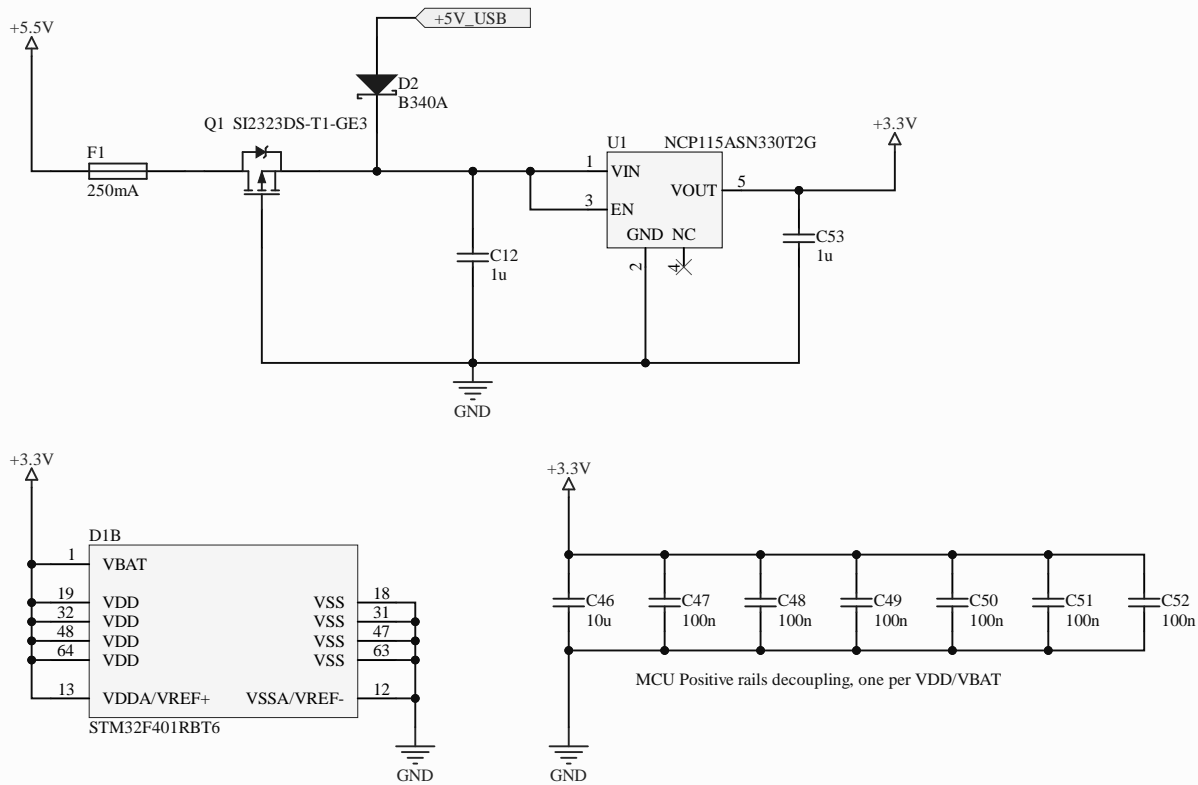

Title		
Size	Number	Revision
A4		
Date:	10/11/2020	Sheet of
File:	C:\Users\...\MCU_Supply.SchDoc	Drawn By: