
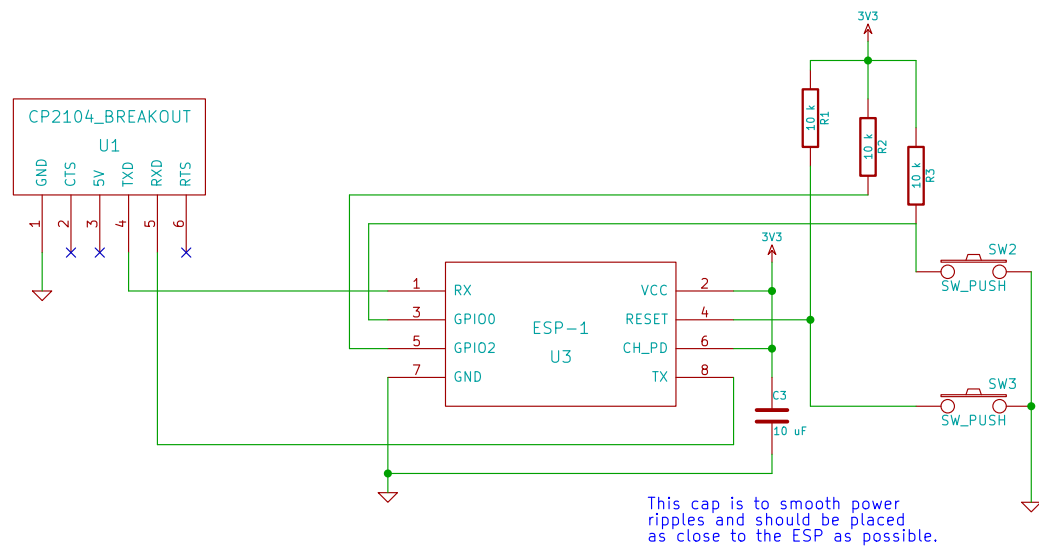


Use a 5V supply capable of sourcing at least 500mA.
The current from the FTDI will likely be insufficient.

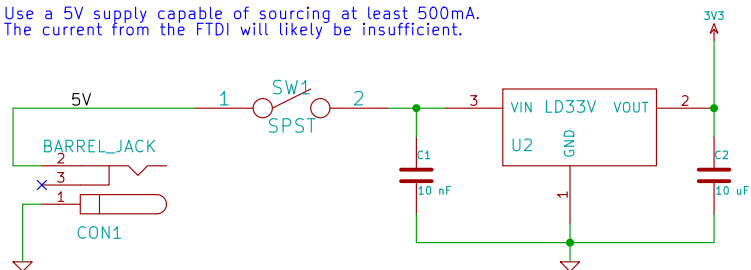

File: dev.sch		
Sheet: /		
Title:		
Size: A4	Date: 20 jul 2017	Rev:
KiCad E.D.A.		Id: 1/1