
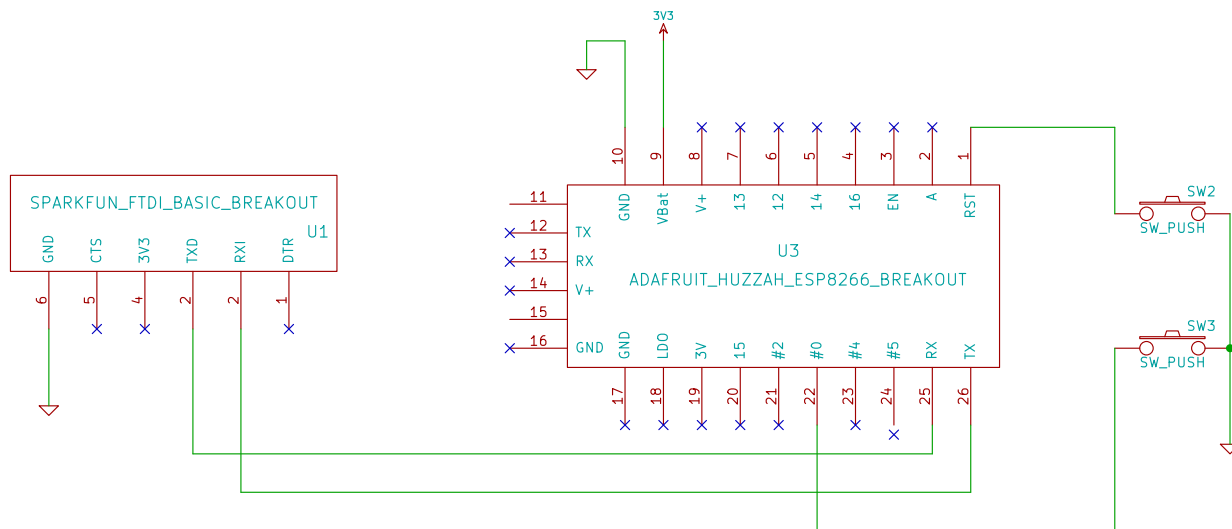


Use a 5V supply capable of sourcing at least 500mA.  
The current from the FTDI will likely be insufficient.

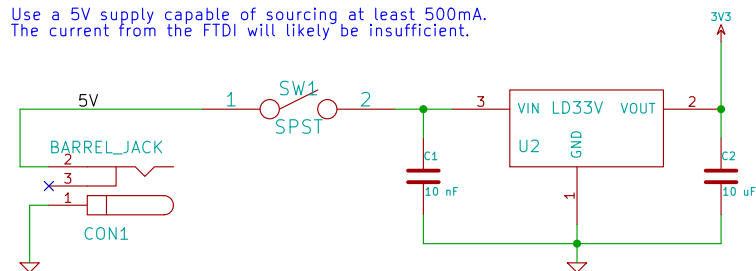

These switches are just a convenience,  
since the switches on the breakout are small.  
Appropriate pullups already exist on the breakout.

File: dev.sch		
Sheet: /		
Title:		
Size: A4	Date: 12 jul 2017	Rev:
KiCad E.D.A.		Id: 1/1