

Screwless Raised Wooden Garden Bed


by @doublecompile

Required Tools


- Drill
- Hammer
- Jig saw
- $\frac{3}{4}$ " drill bit

- A circular saw makes short work of cutting the ends of the 6' board.

- A $1\frac{5}{8}$ " woodworking bit makes short work of cutting the key holes in the 4' board.

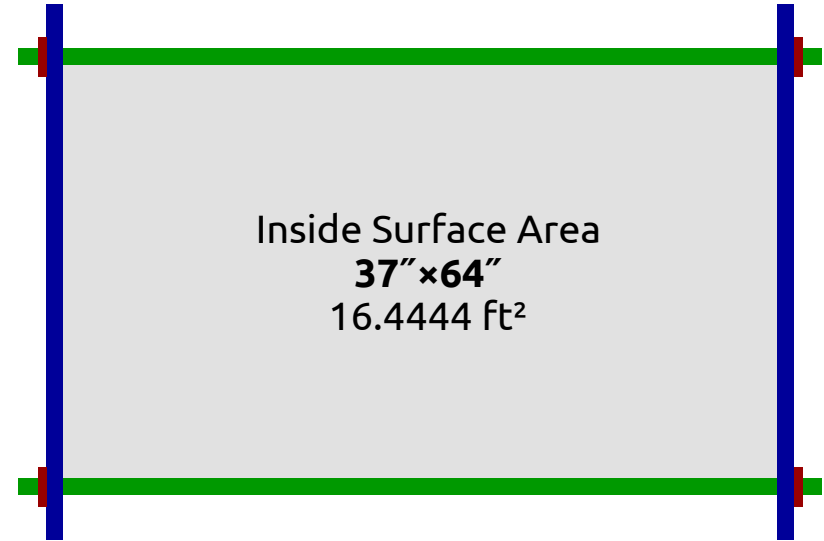


2 × 6 ft 2"×8"s (actual dimensions $1\frac{1}{2}$ "× $7\frac{1}{4}$ "×6')

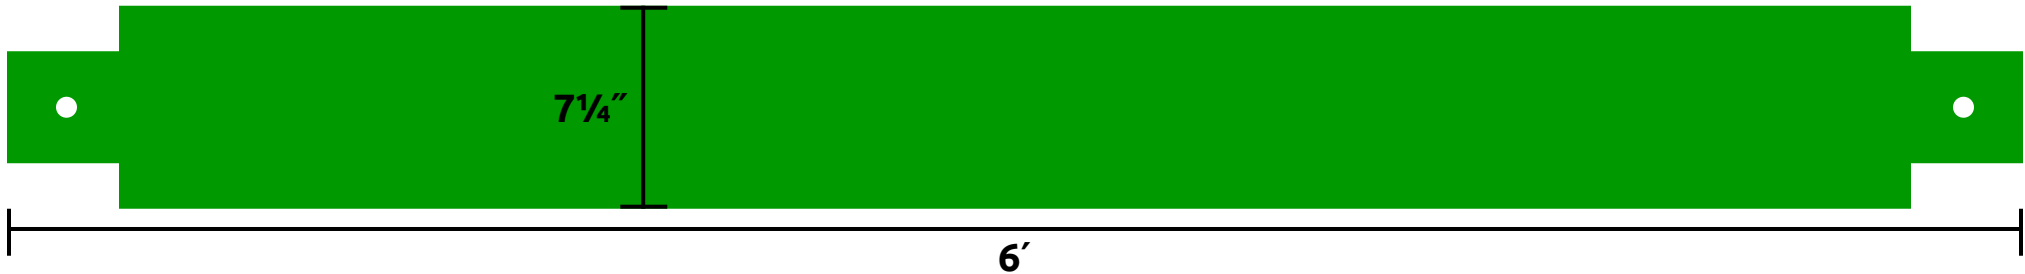

4 × $\frac{3}{4}$ " radius dowel




2 × 4 ft 2"×8"s (actual dimensions $1\frac{1}{2}$ "× $7\frac{1}{4}$ "×4')

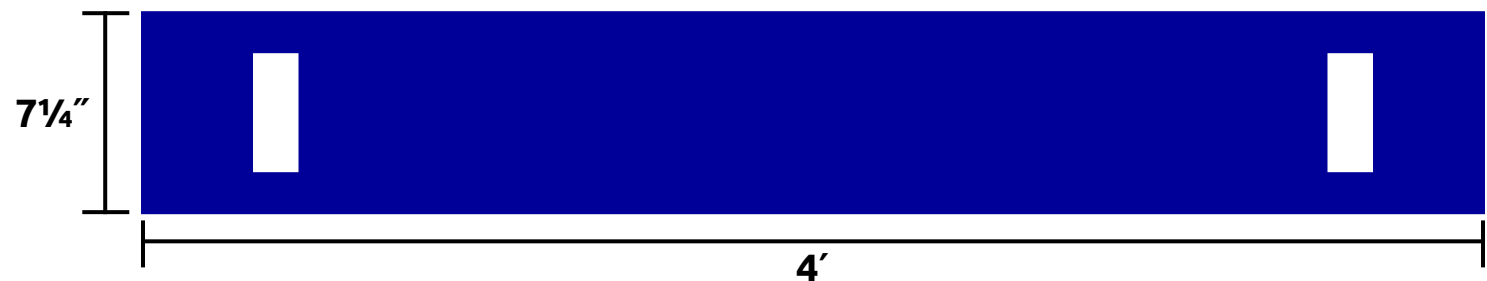

This work is licensed under a Creative Commons Attribution-ShareAlike 4.0 International License.

6' Board End Template


by @doublecompile

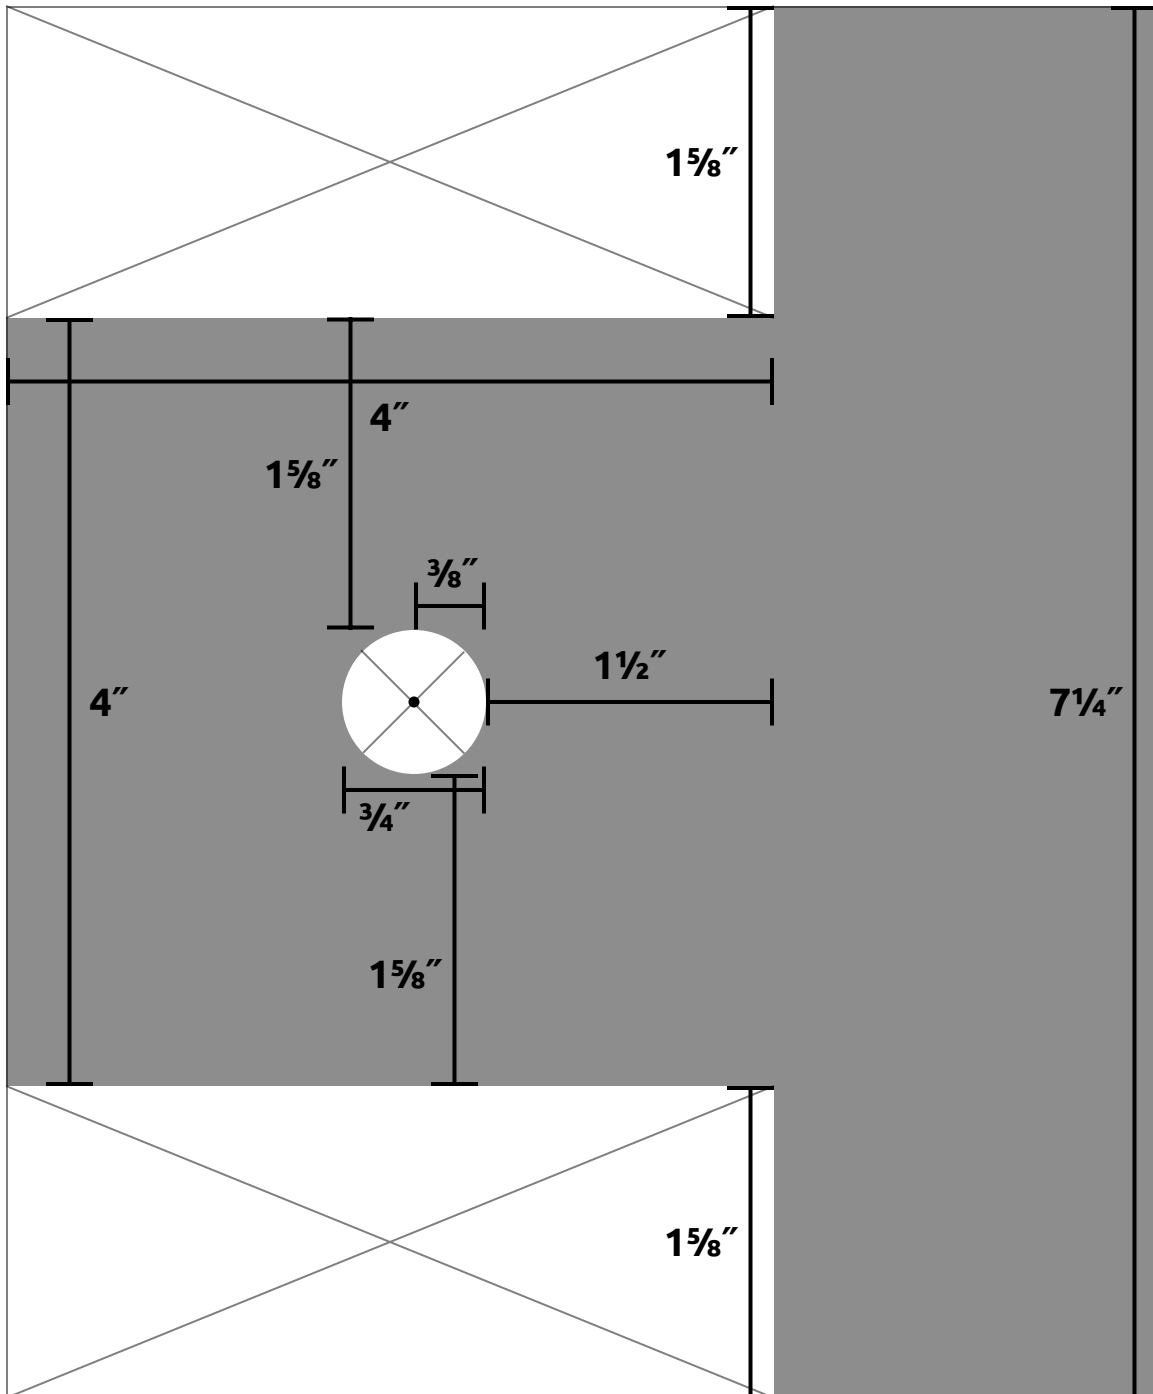

This work is licensed under a Creative Commons Attribution-ShareAlike 4.0 International License.

4' Board End Template

by @doublecompile

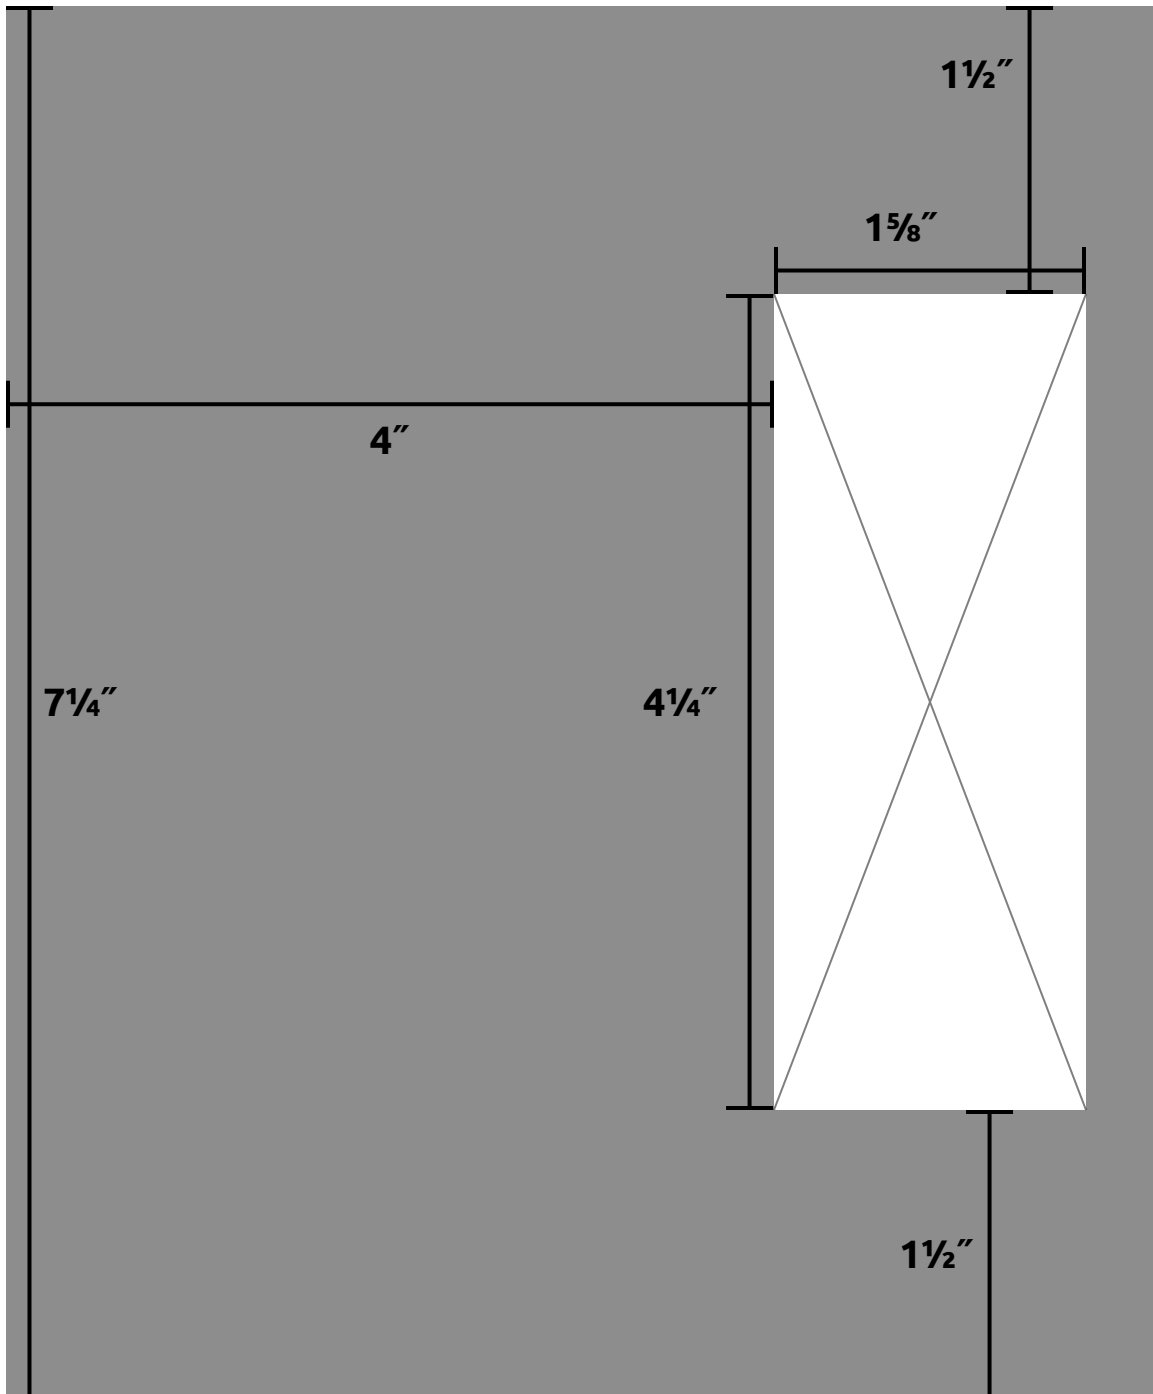

This work is licensed under a Creative Commons Attribution-ShareAlike 4.0 International License.