


I concreted my post. You may need to lengthen/shorten this overall height for your area!

Notes:


1. Mailbox is a ModBox. check out www.modboxusa.com f or more information. I'm not affiliated!
2. Use a wood type suitable f or outdoor enviornments. Some suggestions are cedar, redwood, and pressure-treated pine.
3. No fancy joinery explained or implied. Follow your heart on this, I'm perfectly happy wth screws showing in my mailbox post!
4. The Modbox will require a filler piece between it and the post. I cut down a scrap piece of pressure-treated wood I had lying around, screwed it to the post, then pre-drilled the mounting holes for the box. I installed the box with a stubby screwdriver.
5. Mailbox standards that I found require a 41-45" height above the curb level to the BOTTOM of the box, with 6-8" distance from the curb edge.

These plans are for NON COMMERCIAL PURPOSES ONLY. Do not reproduce these plans without expressed permission from Dustin at thedustytone@gmail.com. Any and all builds coming from these plans are highly encouraged, I only ask that you don't make money off this, and that you send me a picture when you're done!


Part 1: Front Post

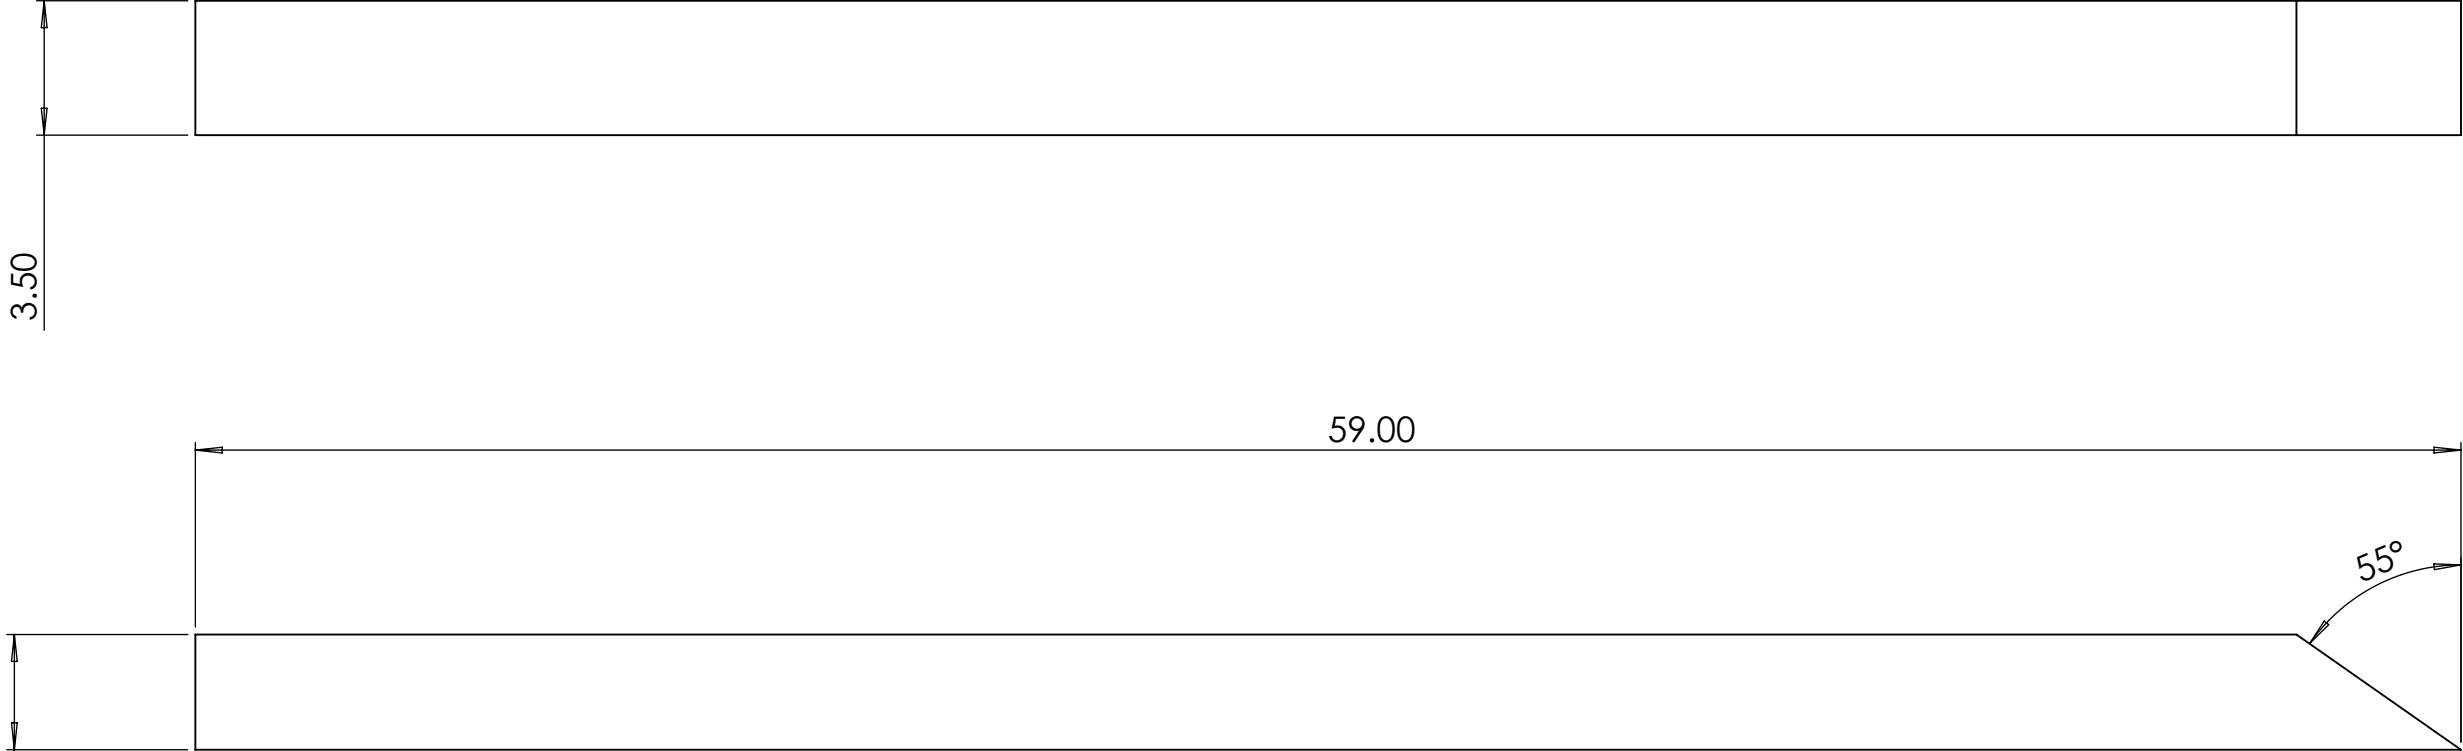

Part 2: Top Post

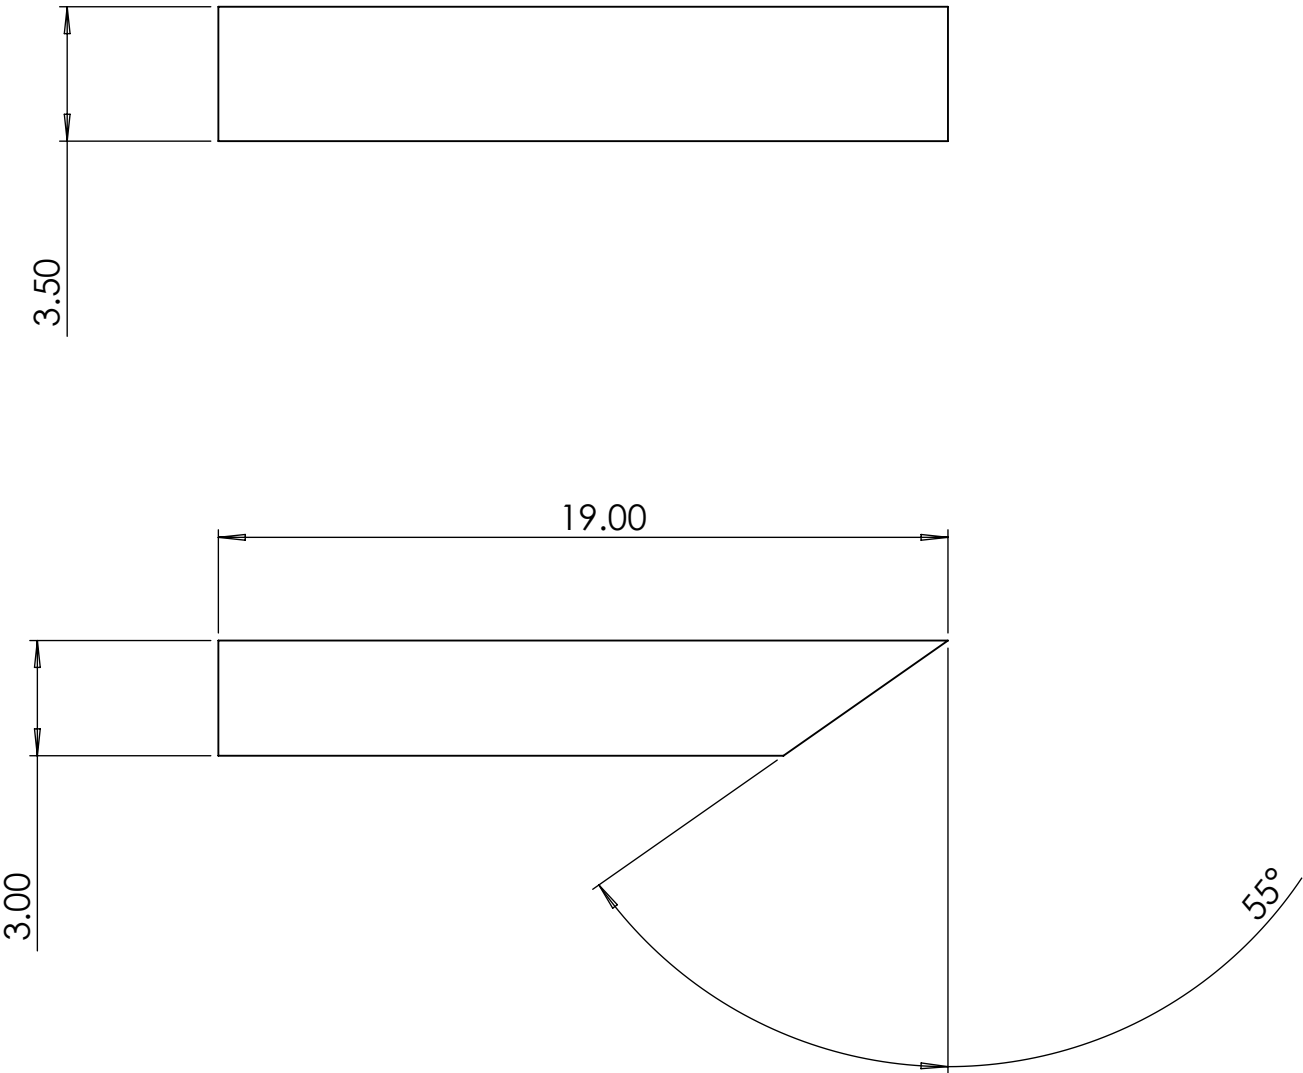

Part 3: Rear Upper Post

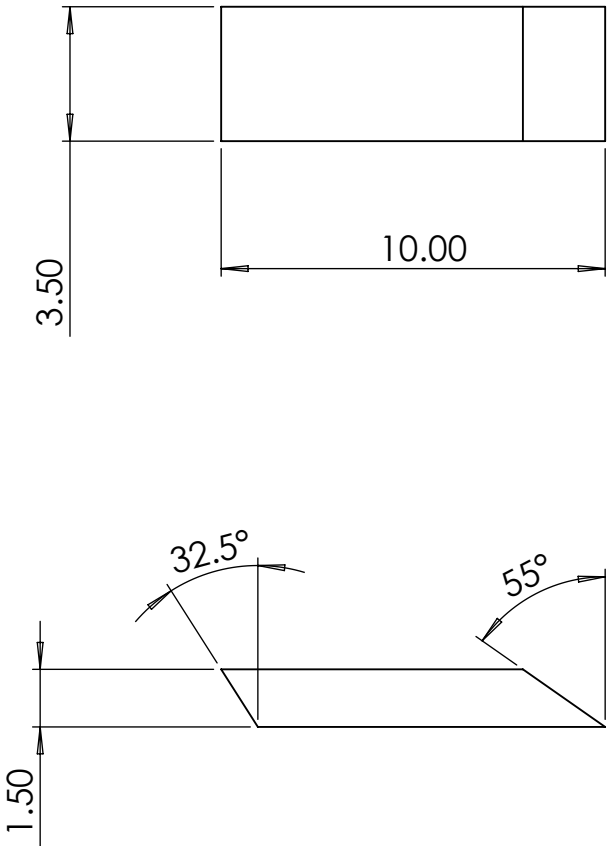

Part 4: Rear Lower Post

