


### Step 13

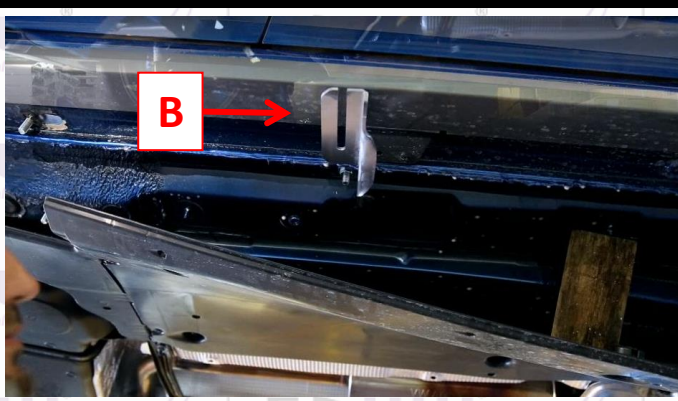


RIGHT/LEFT



### Step 14



RIGHT/LEFT

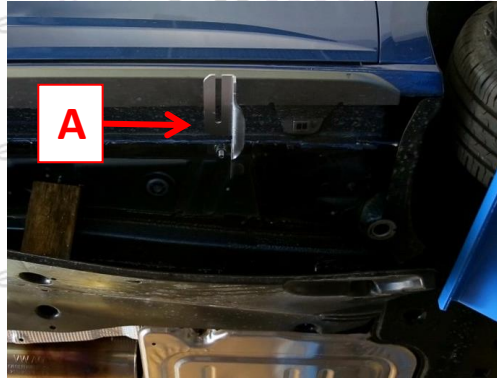

### Step 15




RIGHT/LEFT



### Step 16



RIGHT/LEFT

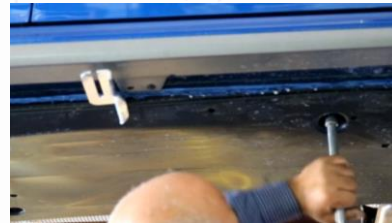

**ERKUL**<sup>®</sup>  
Products & Quality



## SKODA KAMIQ 2018 → RUNNING BOARD

Montaj talimatı:

Fitting Instructions:

Montageanleitung:

Montagevoorschrift:

Instructions de montage:

Instrucciones de montaje:

Schema di montaggio:

Manual:

РУКОВОДСТВО ПО МОНТАЖУ: ПОРОГИ ТРУБООБРАЗНЫЕ

YAN BASAMAK

SIDE BAR

SCHWELLERROHR

SIDE BAR

MARCHE-PIEDS

JUEGO PROT. DE PARA. TRASERA

PEDANE LATERALI

SIDOFOTSTEG

# instructions

detaylar için



for details

detaylar için



Gerekli ekipmanlar / Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis Herramientas necesarias / Utensile necessarie / Verkttyg somsomkrävs / Необходимые инструменты



13



17

Parça listesi / Parts list / Teileliste / Onderdelenlijst / Liste de pièces Lista de accesorios / Lista di pezzi / Artikel lista / Список частей

**FRONT RIGHT**

**AR**

**FRONT LEFT**

**AL**

**MIDDLE RIGHT**

**BR**

**MIDDLE LEFT**

**BL**

**REAR RIGHT**

**CR**

**REAR LEFT**

**CL**

**Step 10**



**RIGHT/LEFT**



**Step 11**




**RIGHT/LEFT**



**Step 12**



**RIGHT/LEFT**

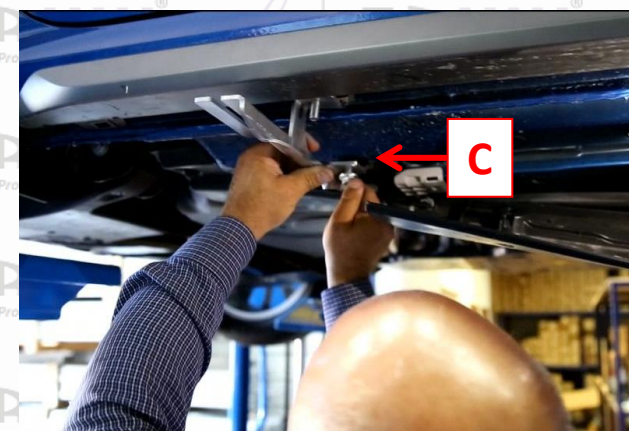





## Step 7



RIGHT/LEFT

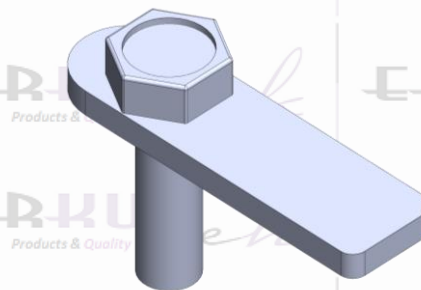

D (x8) **M10**

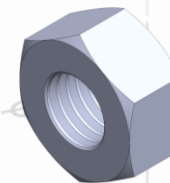


**M10 (x8)**



## Step 8



RIGHT/LEFT

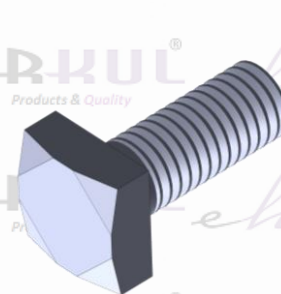

**M8 (x12)**

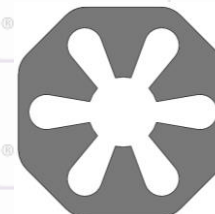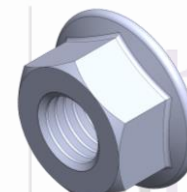

## Step 9



RIGHT/LEFT





## Step 1



RIGHT/LEFT



## Step 4



RIGHT/LEFT



## Step 2



RIGHT/LEFT



## Step 5



RIGHT/LEFT



## Step 3



RIGHT/LEFT



## Step 6



RIGHT/LEFT

