




EKUL[®]
Products & Quality



FORD COURIER 2014-2023 RUNNING BOARD

Montaj talimatı:	YAN BASAMAK
Fitting Instructions:	SIDE BAR
Montageanleitung:	SCHWELLERROHR
Montagevoorschrift:	SIDE BAR
Instructions de montage:	MARCHE-PIEDS
Instrucciones de montaje:	JUEGO PROT. DE PARA. TRASERA
Schema di montaggio:	PEDANE LATERALI
Manual:	SIDOFOTSTEG
РУКОВОДСТВО ПО МОНТАЖУ:	ПОРОГИ ТРУБООБРАЗНЫЕ

instructions

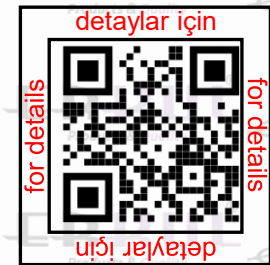

Gerekli ekipmanlar / Required tools / Benötigte Werkzeuge / Benodigde
werktuigen / Outillage requis Herramientas necesarias / Utensile necessarie /
Verktyg somsomkrävs / Необходимые инструменты



13



17

Parça listesi / Parts list / Teileliste / Onderdelenlijst / Liste de pièces Lista de
accesorios / Lista di pezzi / Artikel lista / Список частей

FOR
FRONT RIGHT

FOR
REAR **LEFT**

A (x2)


B (x1)

FOR
REAR **RIGHT**






B (x1)

C (x4)

M10

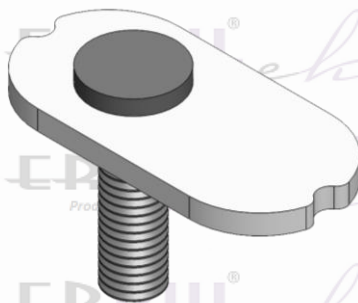


Step 7

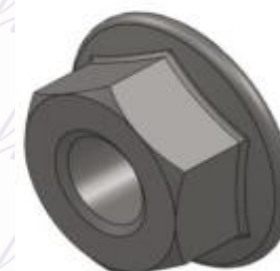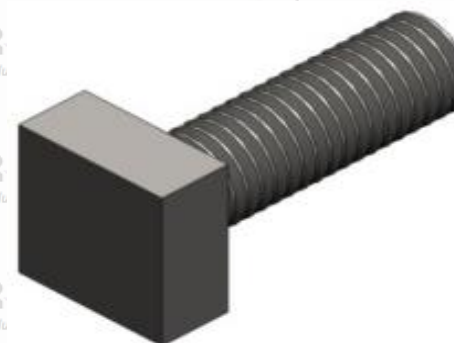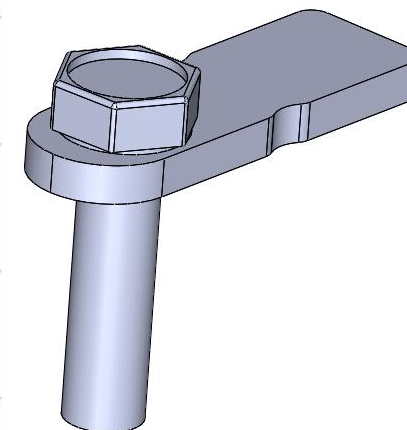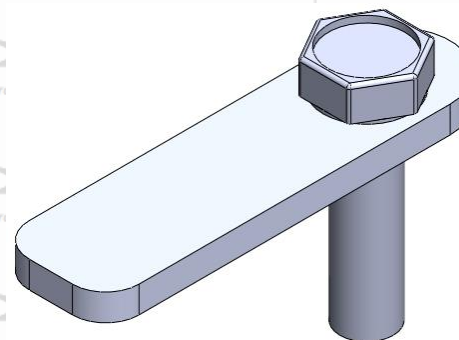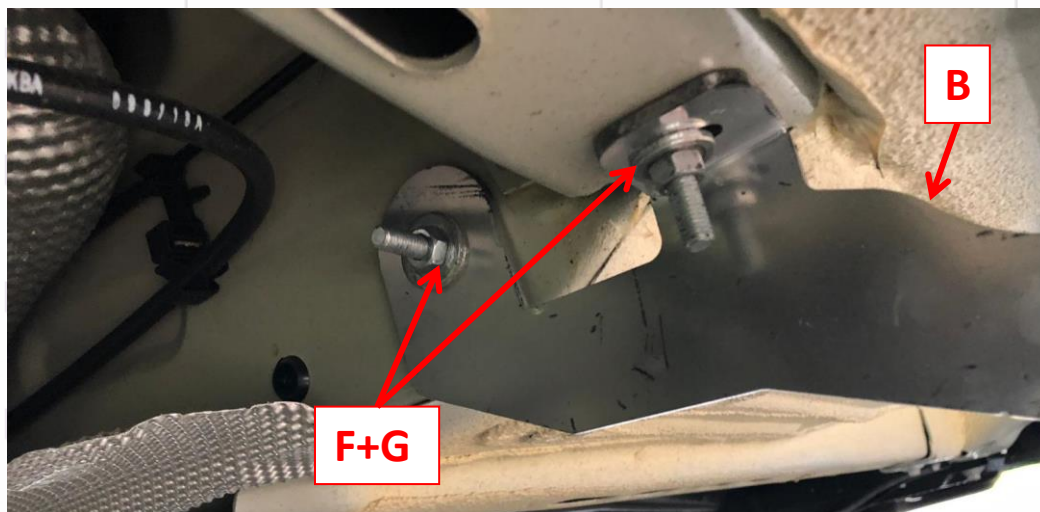

Step 1




Step 4

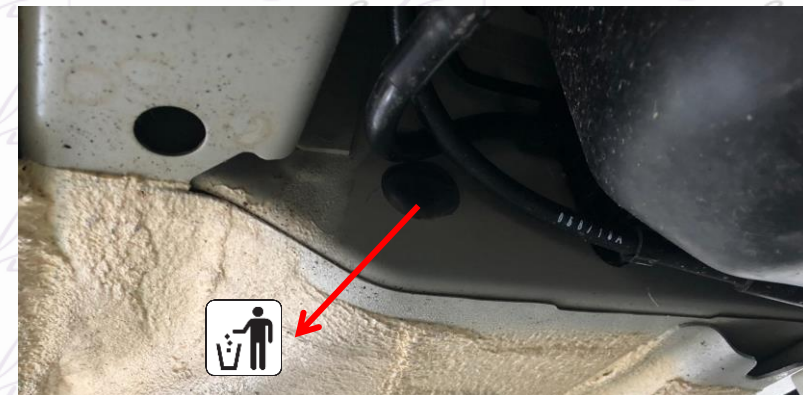

Step 2



Step 5

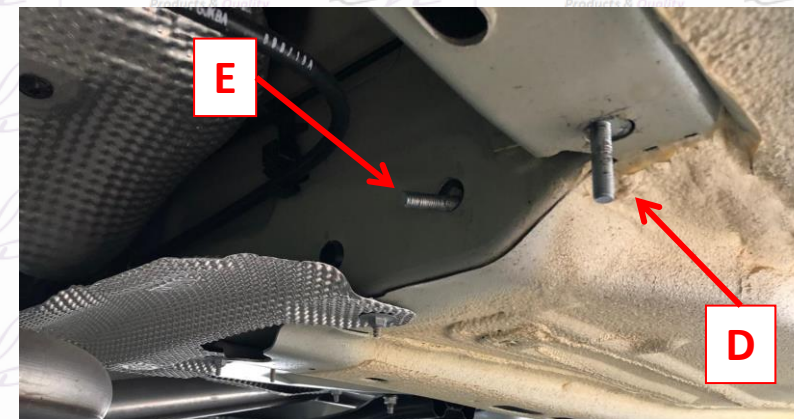

Step 3



Step 6

