




# RENAULT CAPTUR 2013-2019 RUNNING BOARD

Montaj talimatı:	YAN BASAMAK
Fitting Instructions:	SIDE BAR
Montageanleitung:	SCHWELLERROHR
Montagevoorschrift:	SIDE BAR
Instructions de montage:	MARCHE-PIEDS
Instrucciones de montaje:	JUEGO PROT. DE PARA. TRASERA
Schema di montaggio:	PEDANE LATERALI
Manual:	SIDOFOTSTEG
РУКОВОДСТВО ПО МОНТАЖУ:	ПОРОГИ ТРУБООБРАЗНЫЕ

# instructions

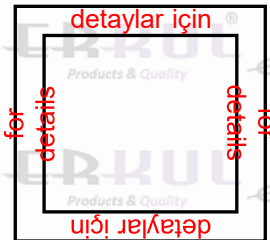

Gerekli ekipmanlar / Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis Herramientas necesarias / Utensile necessarie / Verktøy somsomkrävs / Необходимые инструменты




13



17


Parça listesi / Parts list / Teileliste / Onderdelenlijst / Liste de pièces Lista de accesorios / Lista di pezzi / Artikel lista / Список частей

FOR  
FRONT RIGHT

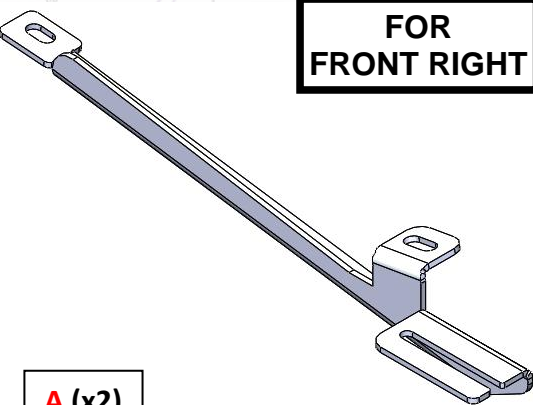


A (x2)

FOR  
REAR RIGHT

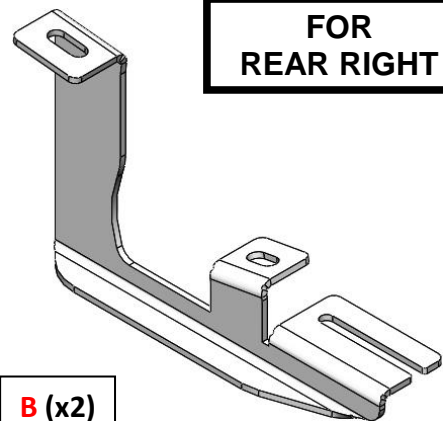


B (x2)

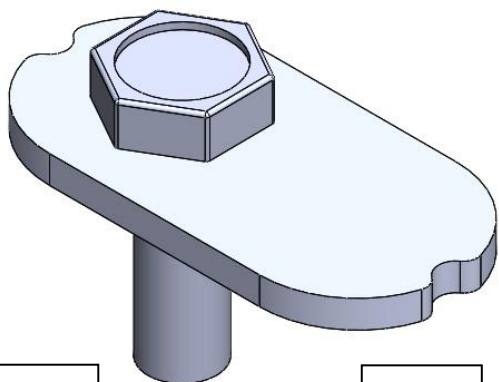

C (x6)

M10

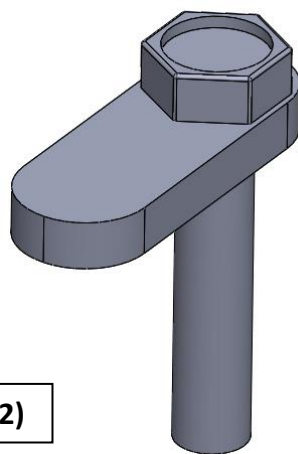


D (x2)

M8

Step 7



RIGT/LEFT

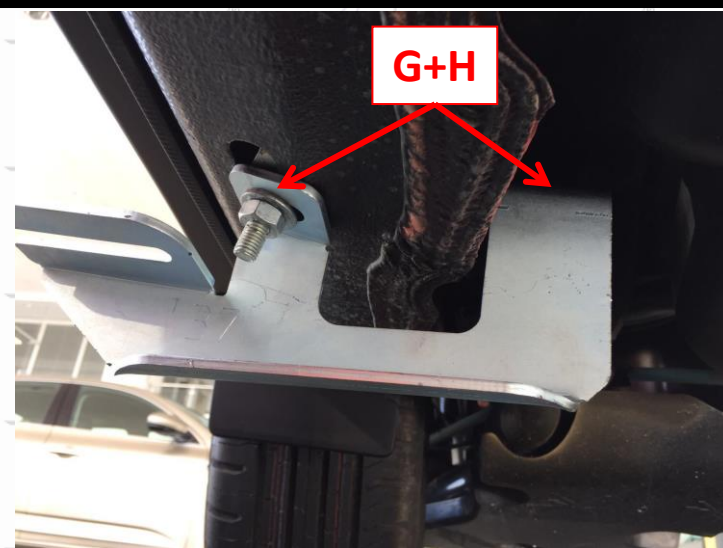

Step 8



RIGT/LEFT



Step 9



RIGT/LEFT



# Step 7




RIGT/LEFT



M8: **E** (x2)  
M10: **G** (x6)



M8: **F** (x2)  
M10: **H** (x6)

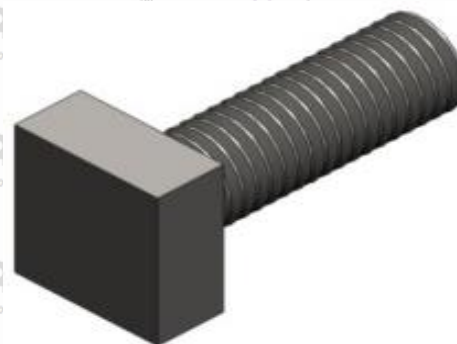

**I** (x8)

M8




**J** (x8)

M8



**K** (x8)

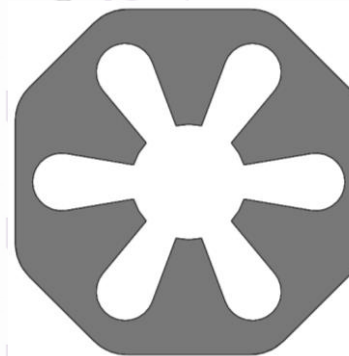




### Step 1




RIGT/LEFT

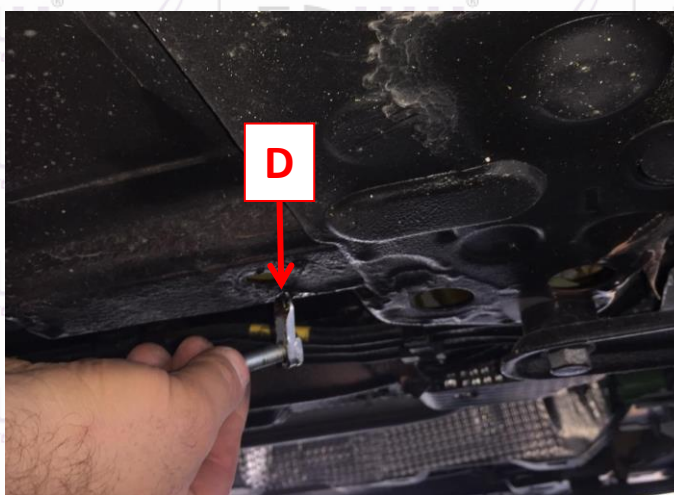

### Step 4




RIGT/LEFT

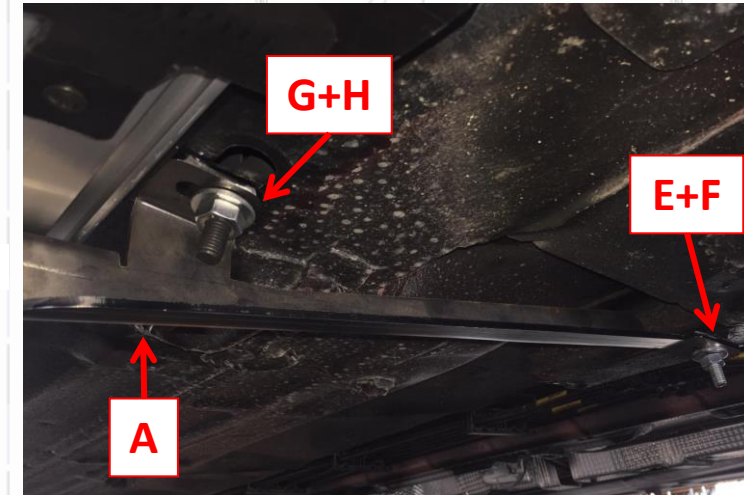

### Step 2



RIGT/LEFT

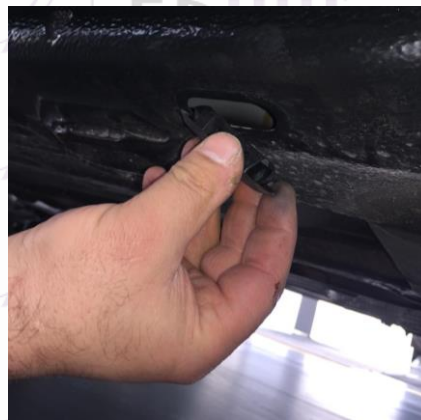

### Step 5



RIGT/LEFT



### Step 3



RIGT/LEFT



### Step 6



RIGT/LEFT

