



Step 10

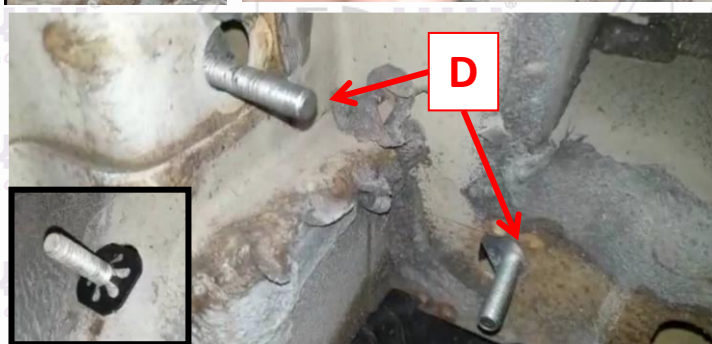

Step 11



Step 12

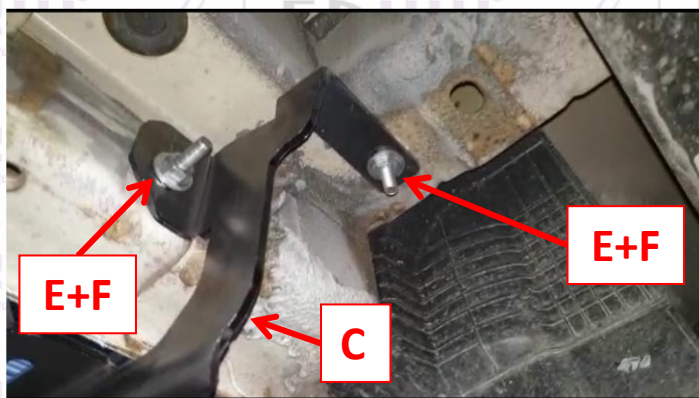

eh

ERKUL[®]
Products & Quality



FORD CUSTOM 2013 → RUNNING BOARD

Montaj talimatı:

Fitting Instructions:

Montageanleitung:

Montagevoorschrift:

Instructions de montage:

Instrucciones de montaje:

Schema di montaggio:

Manual:

РУКОВОДСТВО ПО МОНТАЖУ: ПОРОГИ ТРУБООБРАЗНЫЕ

YAN BASAMAK

SIDE BAR

SCHWELLERROHR

SIDE BAR

MARCHE-PIEDS

JUEGO PROT. DE PARA. TRASERA

PEDANE LATERALI

SIDOFOTSTEG

instructions



Gerekli ekipmanlar / Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis Herramientas necesarias / Utensile necessarie / Verkttyg somsomkrävs / Необходимые инструменты




10




13

Parça listesi / Parts list / Teileliste / Onderdelenlijst / Liste de pièces Lista de accesorios / Lista di pezzi / Artikel lista / Список частей



FOR
FRONT RIGHT

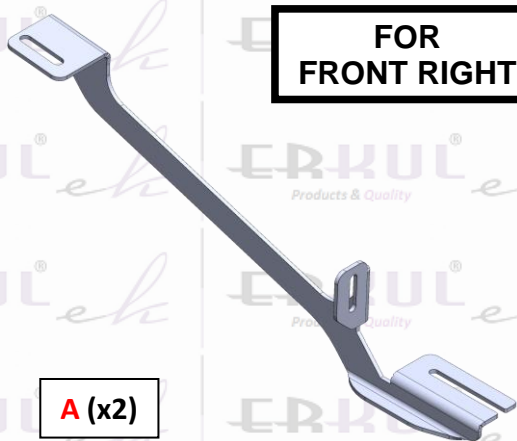


FOR
MIDDLE RIGHT

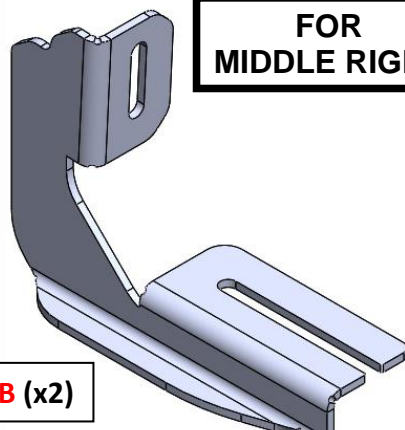

FOR
REAR RIGHT

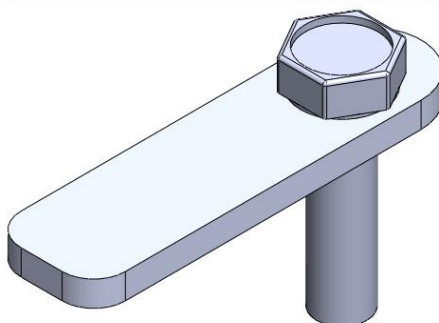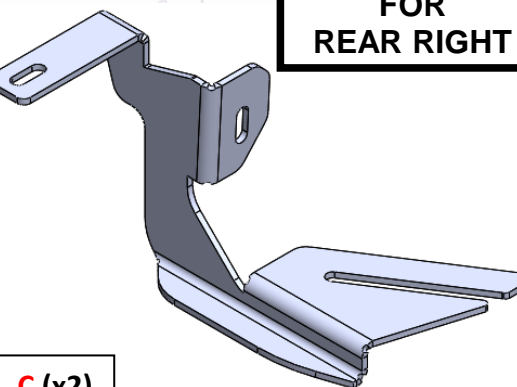


Step 8

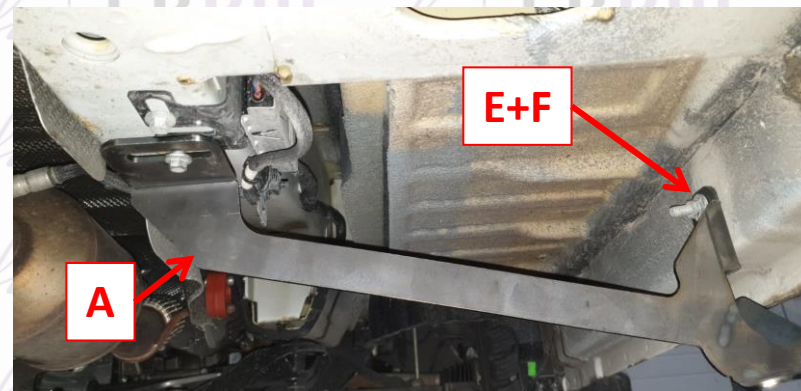


Step 9



Step 9

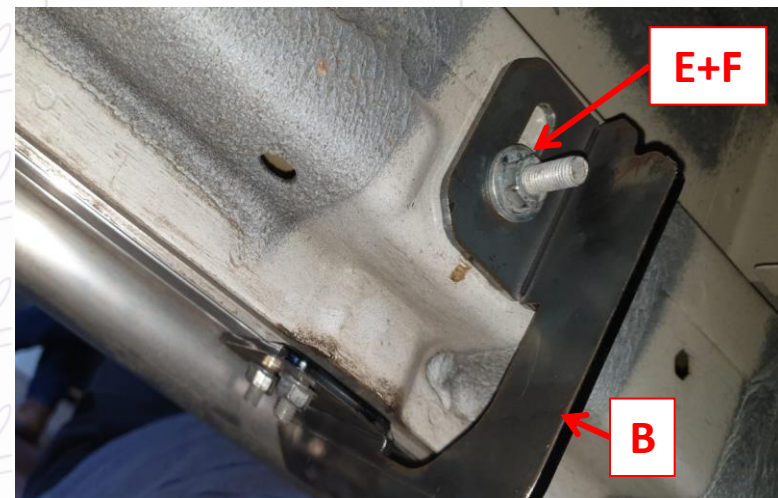


Step 5

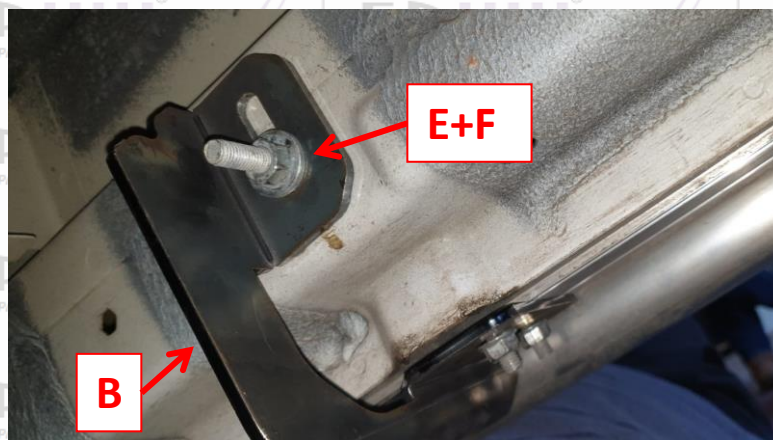


Step 6



Step 7

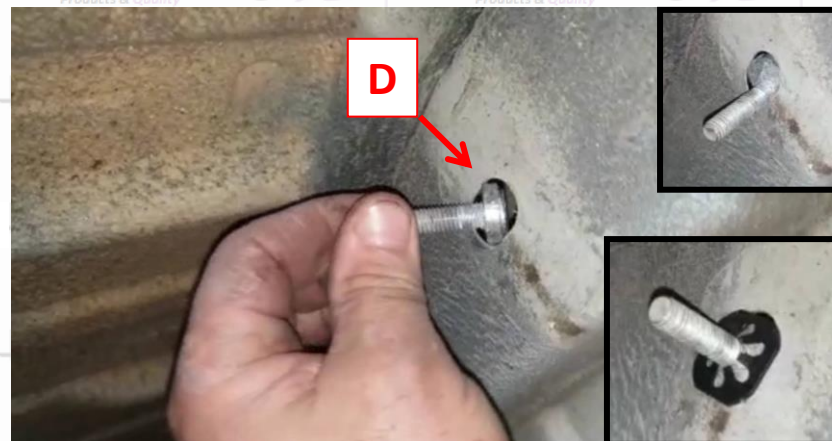

E (x10)

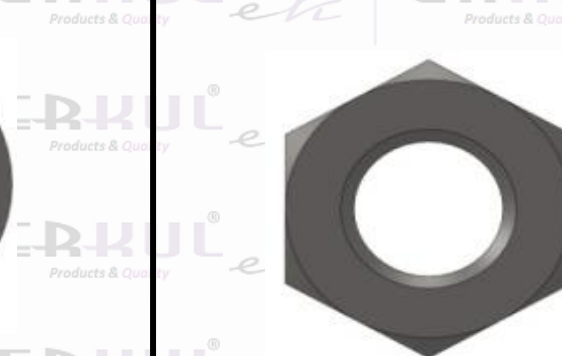


M8



F (x10)

M8

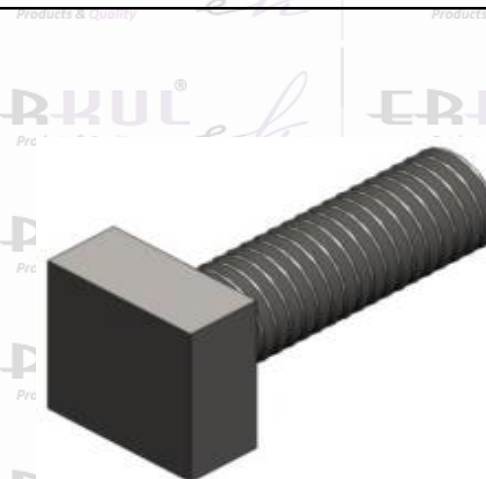

G (x12)

M8



H (x12)

M8

Step 1




Step 2



Step 1



Step 3

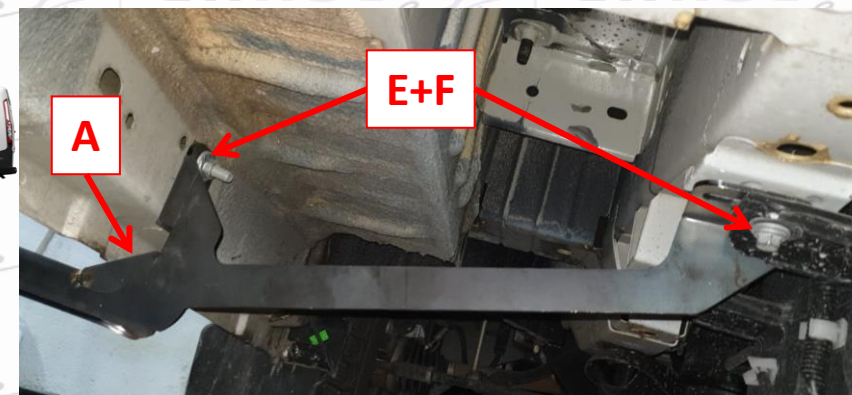

Step 1



Step 4

