


CHRYSLER COMPASS 2018 → RUNNING BOARD

Montaj talimatı:	YAN BASAMAK
Fitting Instructions:	SIDE BAR
Montageanleitung:	SCHWELLERROHR
Montagevoorschrift:	SIDE BAR
Instructions de montage:	MARCHE-PIEDS
Instrucciones de montaje:	JUEGO PROT. DE PARA. TRASERA
Schema di montaggio:	PEDANE LATERALI
Manual:	SIDOFOTSTEG
РУКОВОДСТВО ПО МОНТАЖУ:	ПОРОГИ ТРУБООБРАЗНЫЕ

instructions

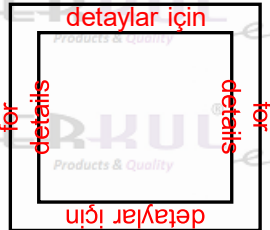


Gerekli ekipmanlar / Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis Herramientas necesarias / Utensile necessarie / Verkttyg somsomkrävs / Необходимые инструменты



13


Parça listesi / Parts list / Teileliste / Onderdelenlijst / Liste de pièces Lista de accesorios / Lista di pezzi / Artikel lista / Список частей

FOR
FRONT RIGHT

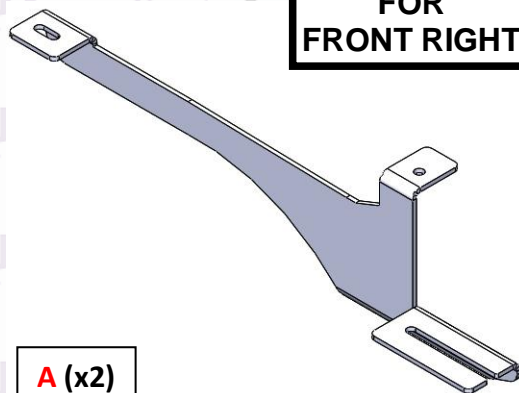


A (x2)

FOR
REAR RIGHT

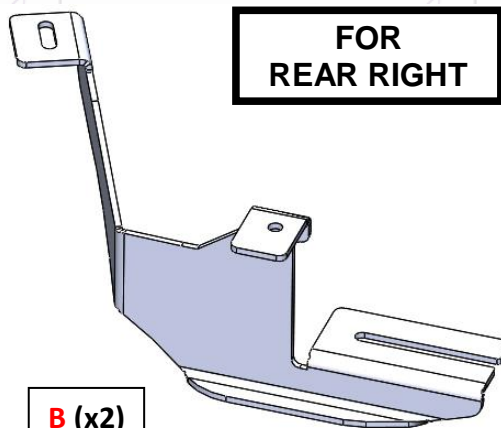


B (x2)

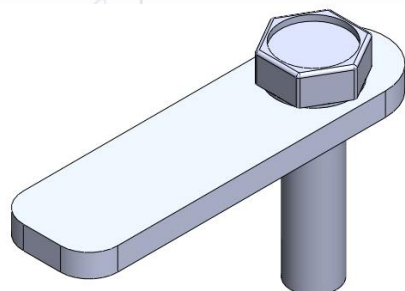

C (x3)

M8

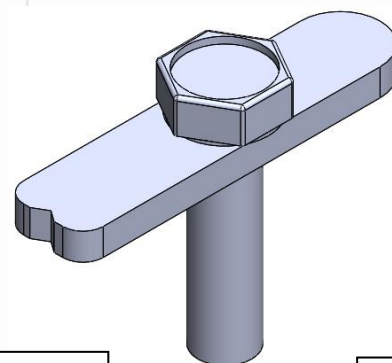

D (x4)

M8

Step 6



LEFT/RIGHT



Step 6



LEFT/RIGHT




D

Step 7





LEFT/RIGHT

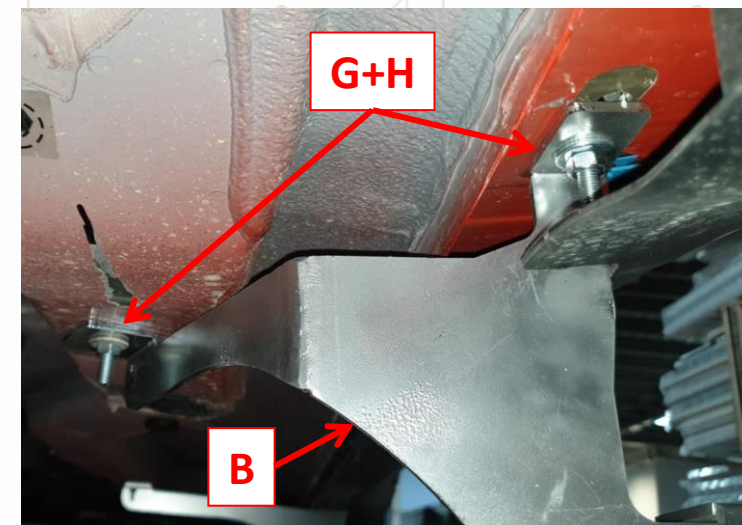

G+H

B

Step 4

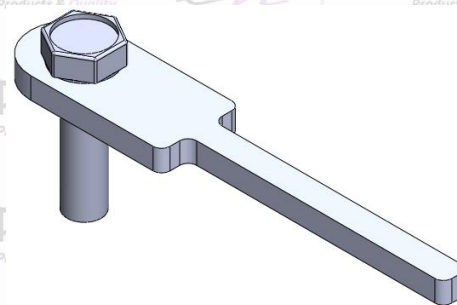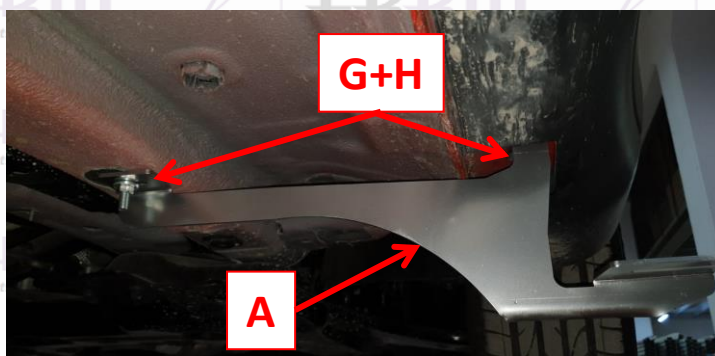


E (x1)

M8



F (x8)

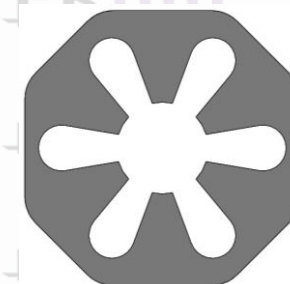

Products & Quality

Step 5




M8: G (x8)



M8: H (x8)

Step 5

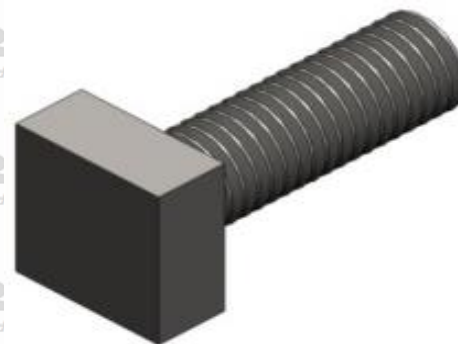

I (x8)

M8



J (x8)

M8


Step 1




Step 2



Step 1

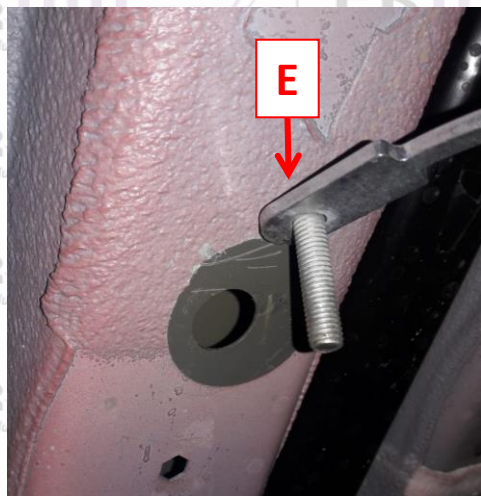

Step 3

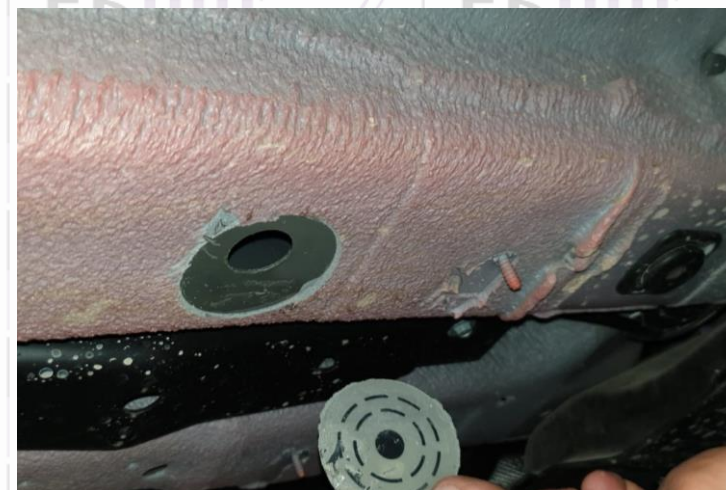

Step 2



Step 3

