

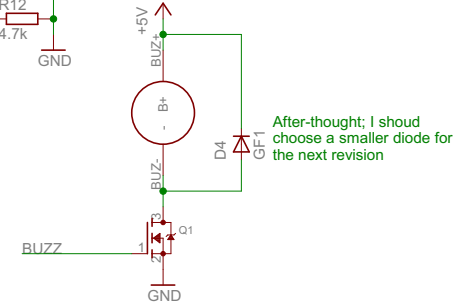
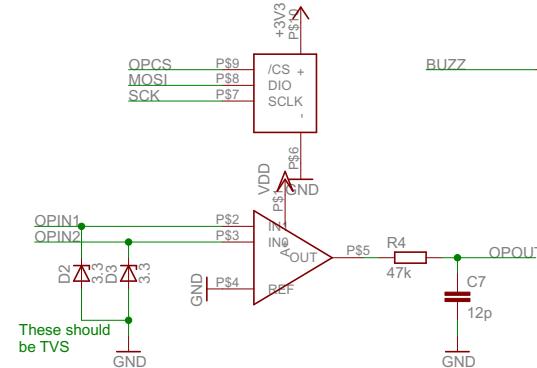
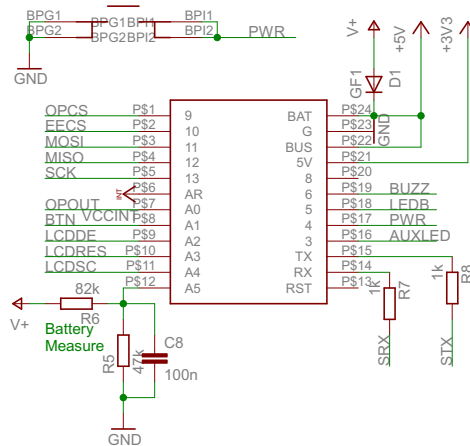

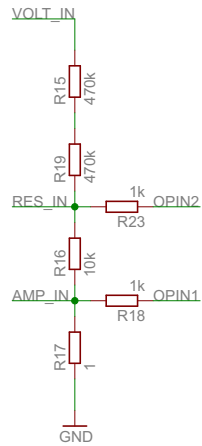

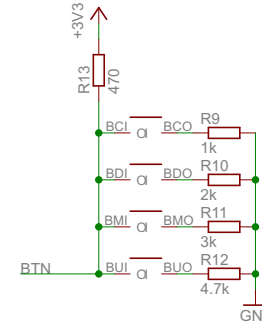


I should put a buffer on the Ref voltage...

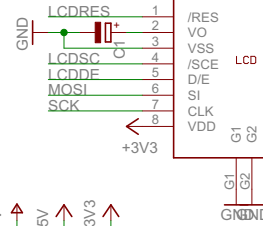

After-thought; I should choose a smaller diode for the next revision

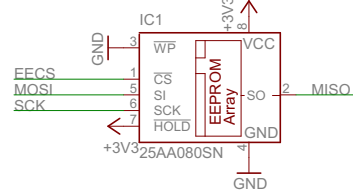

First prototype of the 1337 3310 tool
(c) Cristiano Griletti 2015
Released as Open Hardware under CC BY-SA 3.0 license
<http://creativecommons.org/licenses/by-sa/3.0/legalcode>