

Full Moon Theatre


Assembly Instructions Head Bottom Part

Parts needed


Quantity	Part
1	Pillow Block Bearing
1	Plywood Base Board
2	Long timber posts
2	Short timber posts
4	Plywood Hooks
2	M5x15 wood screws
30	M5x45 countersunk wood screws
4	M5x150 countersunk wood screws
Wood glue	

Assembly Steps


- 1. Glue together the sides panels and the base board.

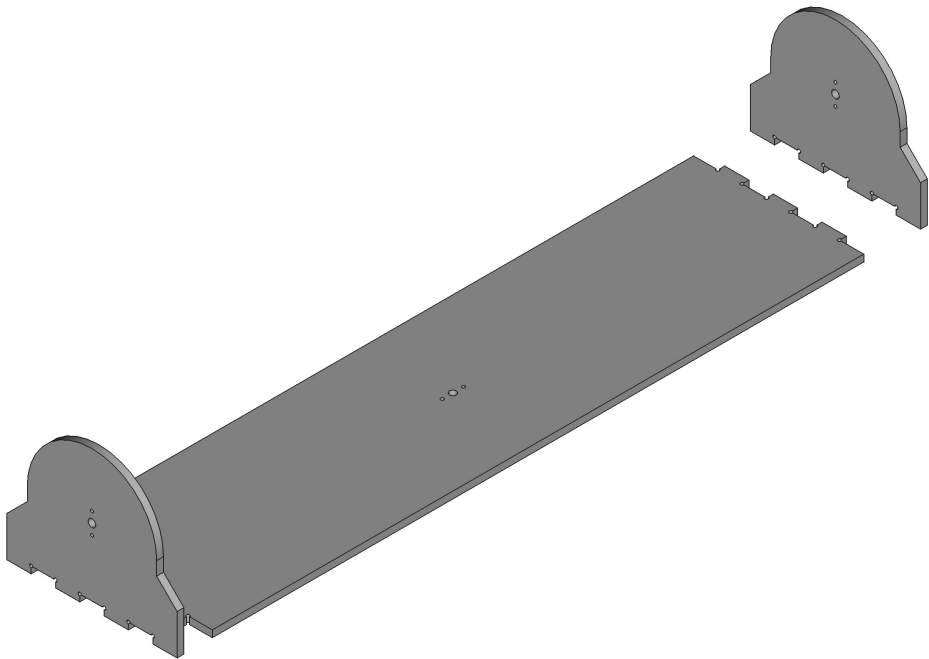


2. Glue the timber posts to the base and the sides.

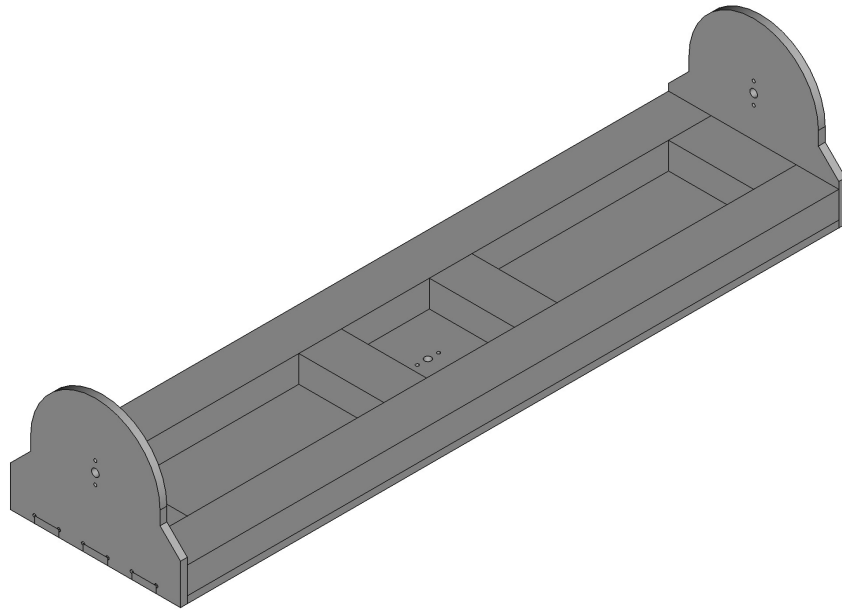


3. Fix the sides to the timber posts using 6x M5x50 countersunk wood screws.

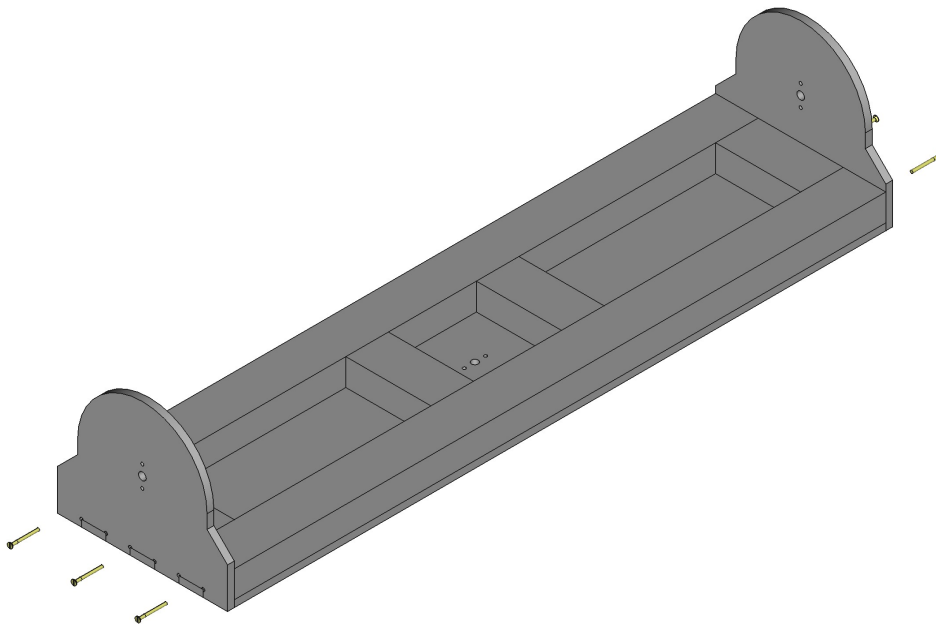


4. Fix the posts together using 8x M5x120 countersunk wood screws.

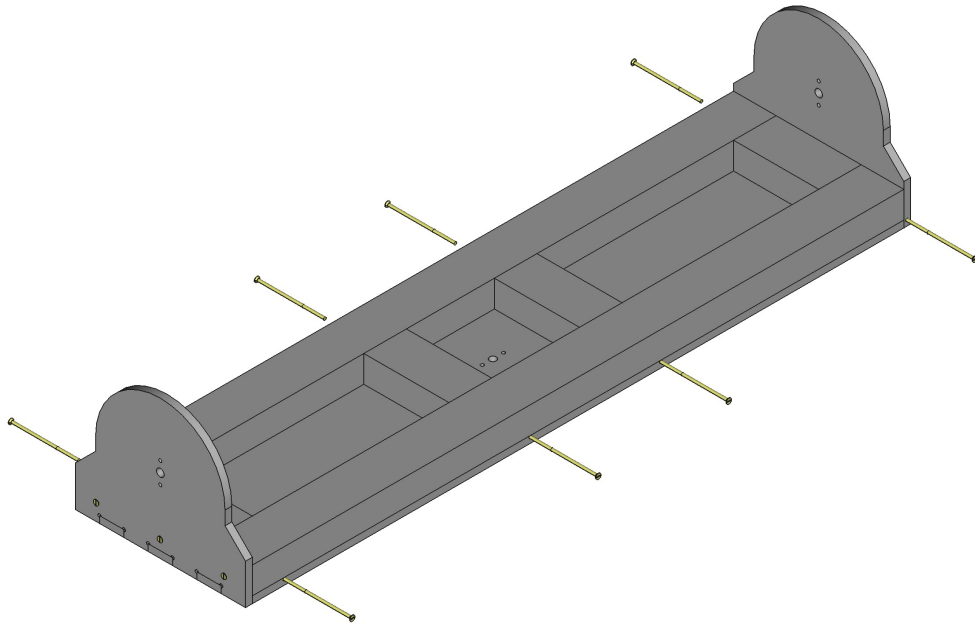


5. Fix the board to the timber posts using 24x M5x50 countersunk wood screws.

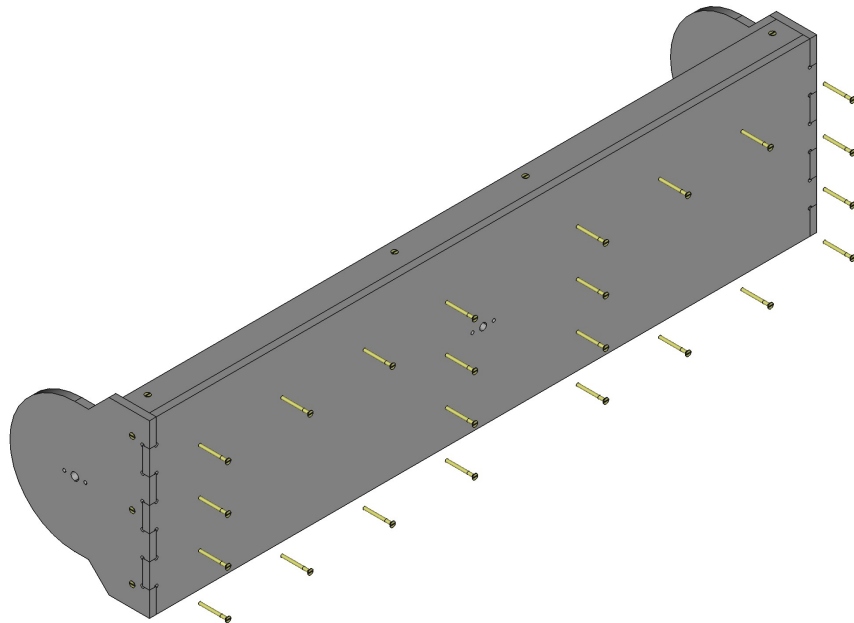


6. View of the screws all done.

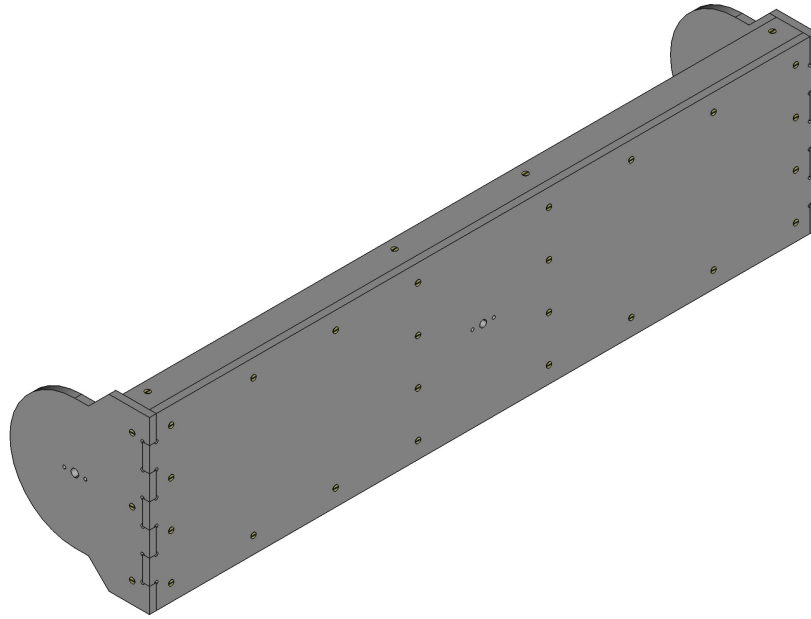

7. Mount the ball bearing to the base board using 2x M5x30 bolts and 2x M5 nuts.

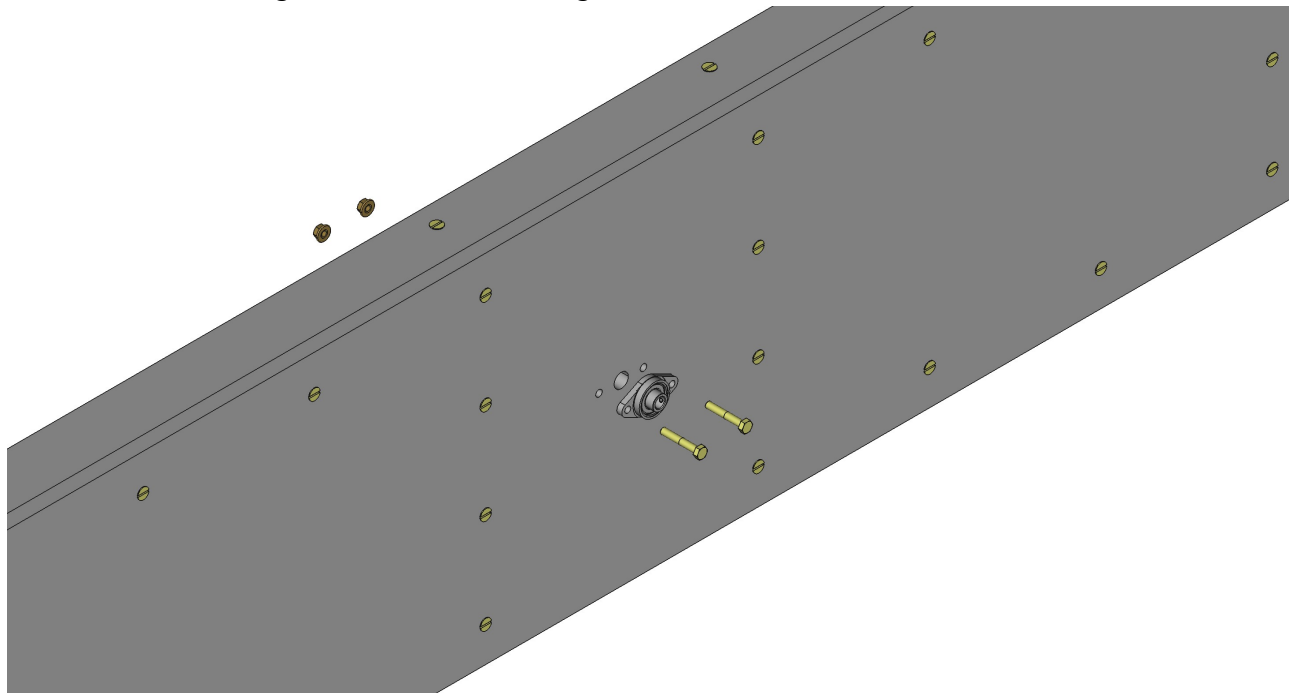

8. On each side, mount the ball bearing to the side panel using 2x M5x30 bolts and 2x M5 nuts.

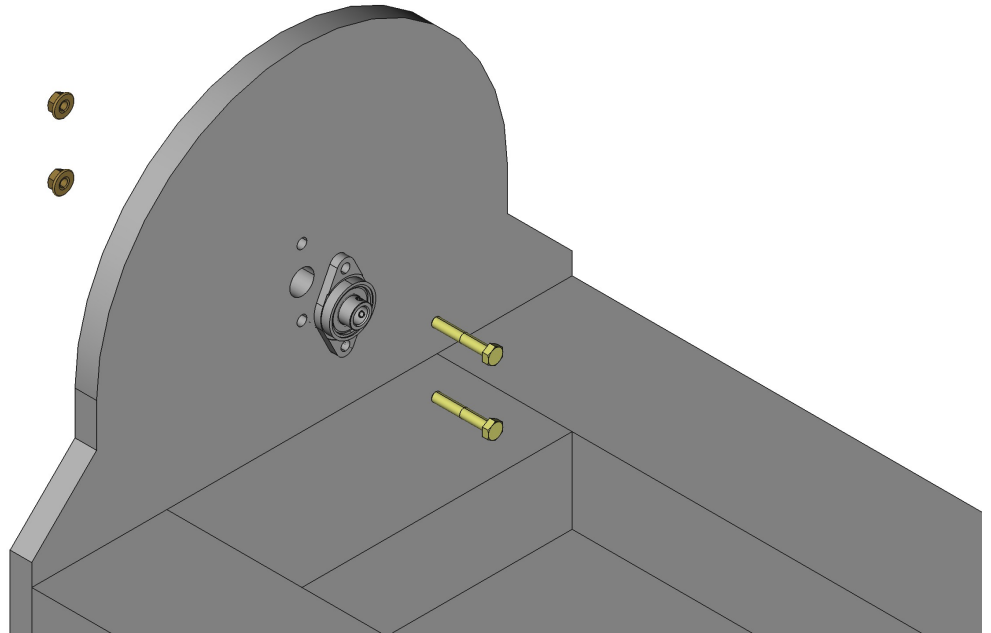

9. View of the finished piece.

