


Note:

I originally had 8" for the width of this part. I added an extra $\frac{1}{4}$ " due to it being too short when I built it.

I drew a hole here, but I did not use this location for the hole. I screwed this to the back piece, put the weatherstripping on, put the arm with weatherstripping on, clamped it all together then drilled out this hole.

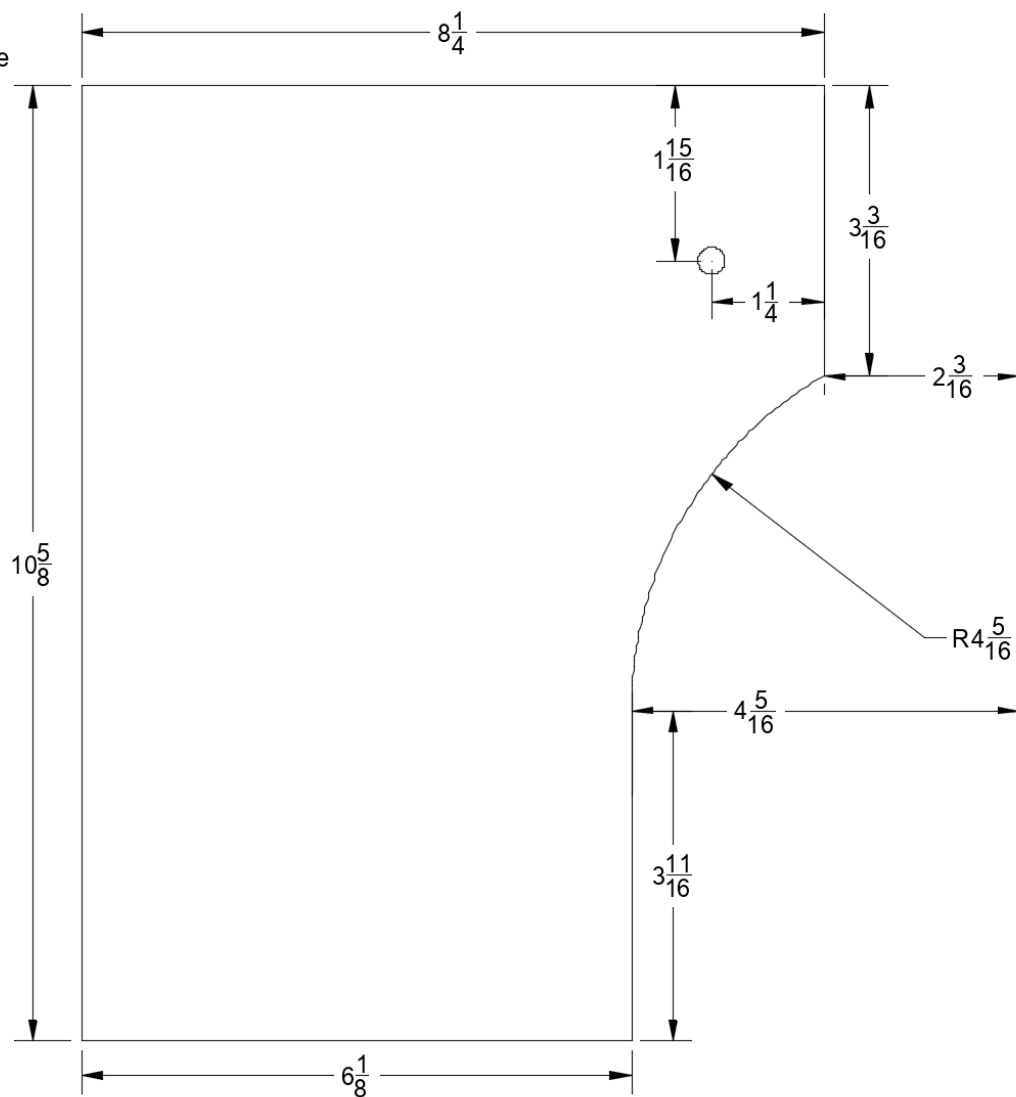

PROJECT

R2-D2 Sled

TITLE

Arm Mount Base

Quantity: 4

SIZE	CODE	DWG NO	REV
A			
SCALE 1:2		DRAWN Gregory Hulette	8/3/21