




Installation Guide

Kitchen Door Style KT303DB

Door Hinge (For P16 Cut Corner Doors)

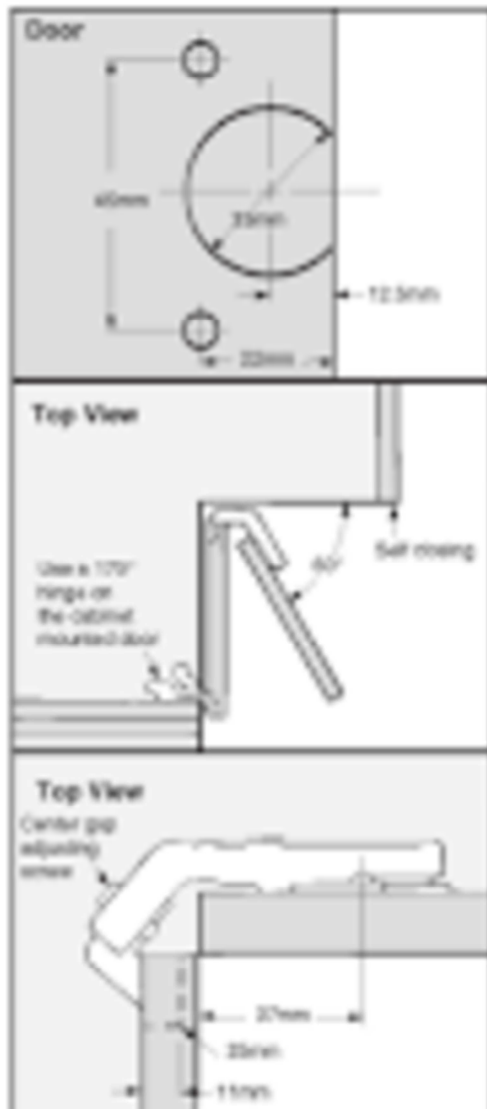

1. To locate center of hinge cup hole on the back side of the cabinet-mounted door, measure over from the edge of the door 12.5mm (1/2"). Here drill a 35mm (1-3/8") diameter hole, 11mm (7/16") deep.
2. Insert hinge into 35mm hole and position the hinge so the arm is perpendicular to the edge of the door. Screw in place.
3. Next, locate the hinge mounting plate on the inside of the outside door so that the center of the front two holes are 27mm (1-15/32") from the back edge of the door. Screw plate to side of cabinet.
4. Clip hinge arm into mounting plate.